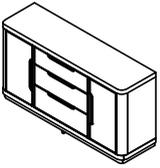



This product is manufactured by CAVS for **Rooms To Go**

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


*** Remark: DO NOT fully tighten all bolts until assembly is completed.

Code	PARTS LIST :		
1	Buffet		1Pc

HARDWARE LIST		
	FURNITURE TIPPING RESTRAINT	1Set
Tool Required (not provided)		
	Phillip Screwdriver	

INSTALLATION INSTRUCTIONS ANTI-TIP HARDWARE

1. Drill a 1/8" pilot hole on the wooden stud approximately 3" below the height of unit top.
2. Attach on bracket (A) securely with screw (C) into the pilot hole on the wall.
3. Position the furniture in place and attach the other bracket (A) with screw (D) to the back edge of unit top in line with the bracket (A) on the wall. NOTE: If the unit has metal back/top follow option 2, using existing hardware on unit as indicated in main assembly instructions. screw (D) will not be used for this option.
4. Put the male end of the steel cable (B) through each bracket. Securely connect both ends together by turning the female connector clockwise.

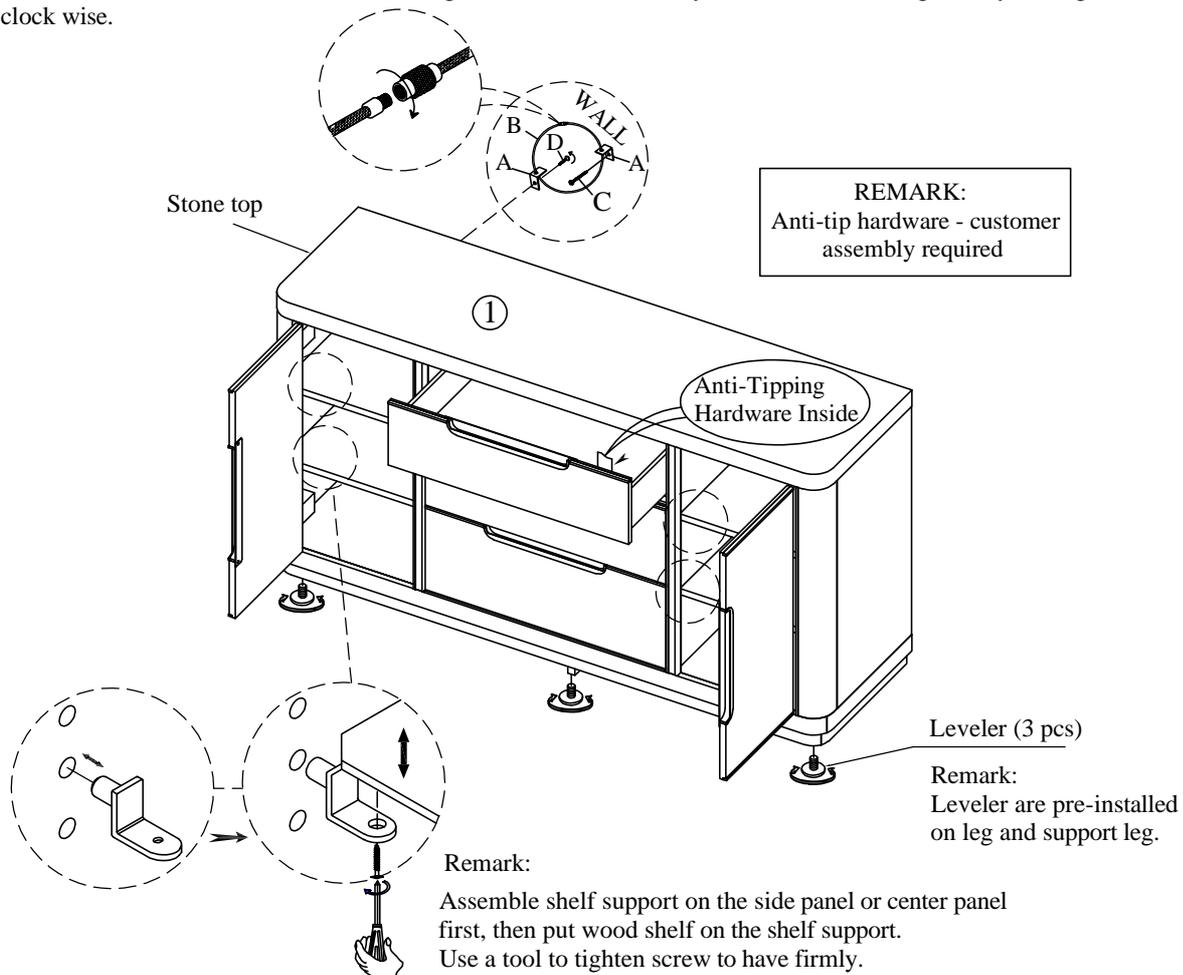

Hardware Pack Location (s):

3740-302 Buffet

, SKU: 42937409