









## Assembly Instructions

BFGP 3920-541 STOOL


SKU# 43439202

Manufactured for Rooms To Go.


Step	Code	Hardware		Q'TY
	A	Allen key 4mm dia.		1 Pc
1	B	Short Bolt 1/4" x 30 x 1 1/2"		2 Pcs
		Spring Washer 5/16" x 19 x 2mmT		
		Flat Washer 5/16" x 11 x 2mmT		
	C	Long Bolt 5/16" x 40 x 2 3/4"		4 Pcs
		Spring Washer 5/16" x 19 x 2mmT		
		Flat Washer 5/16" x 11 x 2mmT		
2	D	Long Bolt 5/16" x 40 x 2 3/4"		4 Pcs
		Spring Washer 5/16" x 19 x 2mmT		
		Flat Washer 5/16" x 11 x 2mmT		
3	E	Wood Screws 5/32" x 2" (not included screwdriver)		6 Pcs

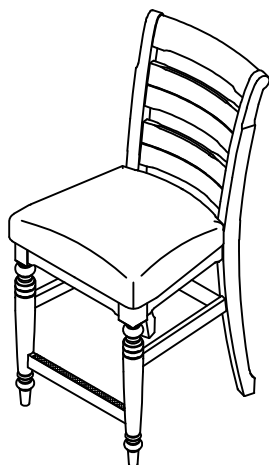


### PARTS LIST

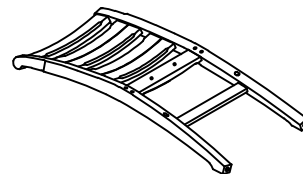

1. Chair Back - 1 Pc

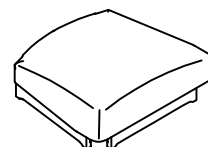

2. Seat Frame W/cushion - 1 Pc




Left




Right

3. Front Legs - 2 Pcs




Left



Right

4. Side Stretcher - 2 Pcs

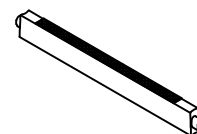

5. Front Stretcher  
W/Metal Bar - 1 Pc

**HARDWARE PACK FOR STOOL LOCATION(S):**

BFGP 3920-541 STOOL

SKU # 43439202

PAGE 1 OF 2



## Assembly Instructions


BFGP 3920-541 STOOL

SKU# 43439202

Manufactured for Rooms To Go.


**\*\*\*Cautions:** Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

### STEP 1:

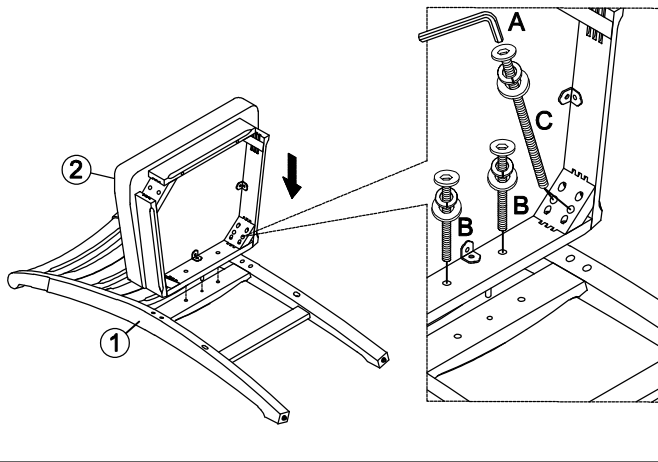


Attach the seat frame to the chair back  
Note: Do not tighten all screws & bolts until the seat is fully assembled.

### STEP 2:

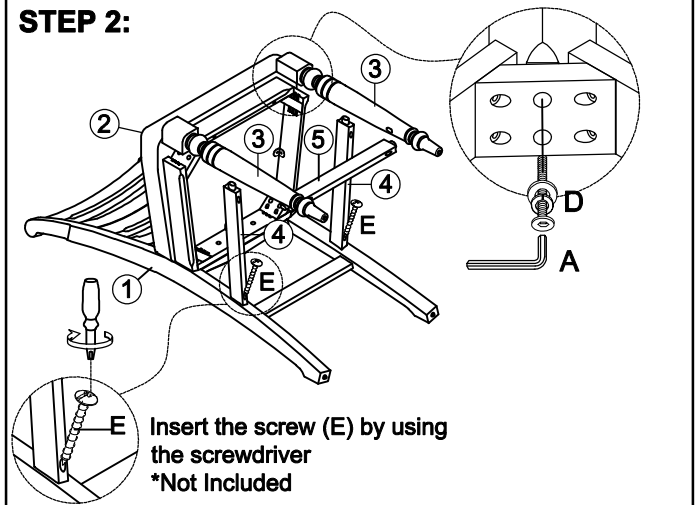


Attach the side stretchers and front stretcher to the back legs and attach the front leg to the seat frame.

### STEP 3:

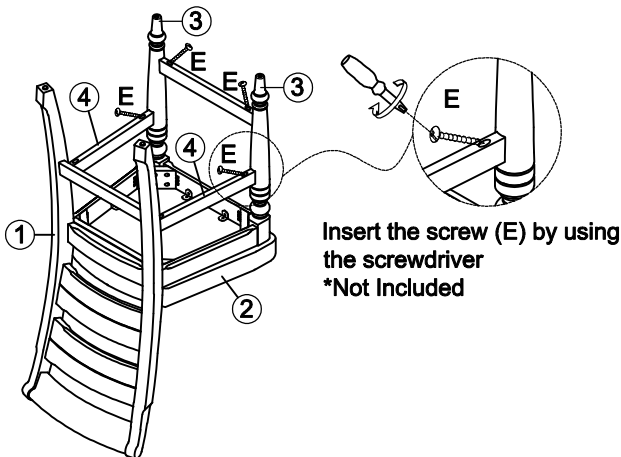

Attach side stretcher and front stretcher between right leg and left leg. Secure the side stretchers to the front legs

### COMPLETED

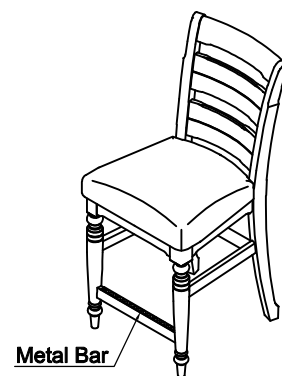

Turn chair to the upright position, apply firm pressure to align and fully tighten all bolts and screws.