







# Assembly Instructions

BFGP 3921-541ST








COUNTER STOOL

SKU# 43439214

Step	Code	Hardware		Q'TY
1,2,3	A		Allen key 4mm dia.	1 Pc
1	B		Short Bolt 1/4" - 20 x 1 1/2"	2 Pcs
			Spring Washer 5/16" x 19 x 2mmT	
			Flat Washer 5/16" x 11 x 2mmT	
	C		Long Bolt 5/16" - 18 x 2 3/4"	4 Pcs
			Spring Washer 5/16" x 19 x 2mmT	
			Flat Washer 5/16" x 11 x 2mmT	
2	D		Long Bolt 5/16" - 18 x 2 3/4"	4 Pcs
			Spring Washer 5/16" x 19 x 2mmT	
			Flat Washer 5/16" x 11 x 2mmT	
2,3	E		Screw 5/32" x 2" (not included screwdriver)	6 Pcs

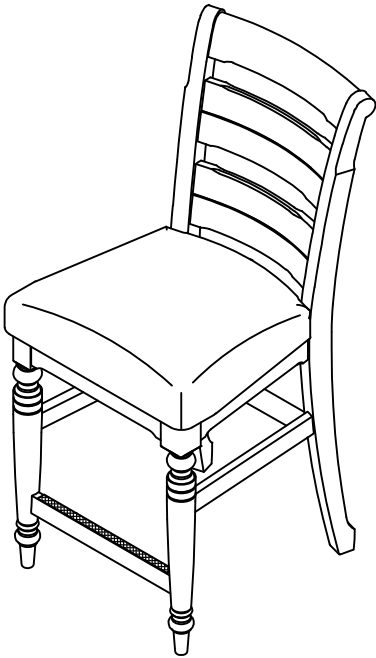

## PARTS LIST

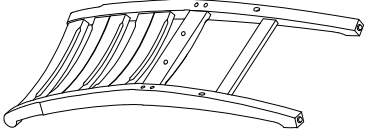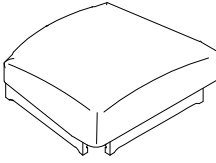
1. Chair Back - 1 Pc

2. Seat Frame W/cushion - 1 Pc

3. Left Front Leg - 1 Pc

4. Right Front Leg - 1 Pc

5. Left Stretcher - 1 Pc

6. Right Stretcher - 1 Pc

7. Front Stretcher W/Metal Bar - 1 Pc

### Hardware Pack Location (s):

BFGP 3921-541ST  
COUNTER STOOL  
SKU# 43439214

# Assembly Instructions

**BFGP 3921-541ST**

**COUNTER STOOL**


**SKU# 43439214**

\*\*\*Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

## STEP 1:

Attach the seat frame (2) to the chair back (1) by using Bolt with Allen Key (A).


Note: Do not tighten all screws & bolts until the seat is fully assembled.

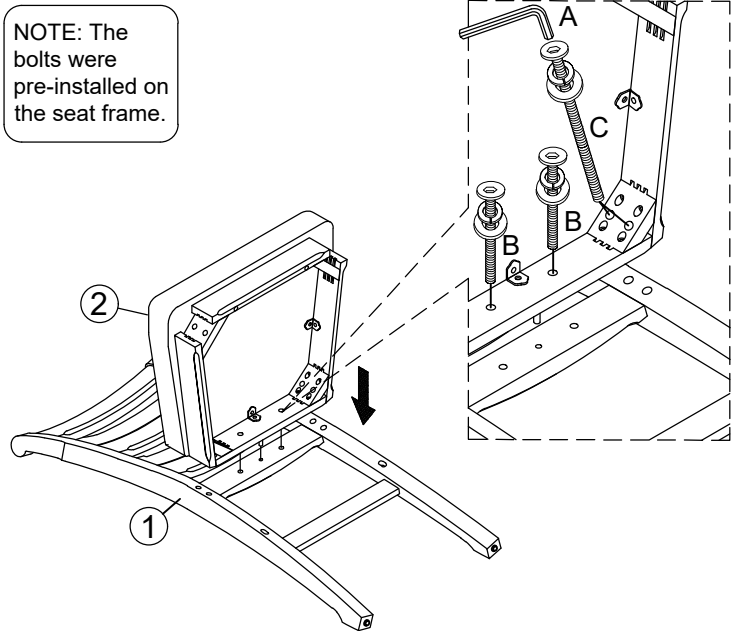

## STEP 2:


Attach the left stretcher (5), right stretcher (6) to the chair back (1) by using Screw (E) and attach front stretcher (7) to the left front leg (3), right front leg (4).

Attach the left front leg (3), right front leg (4) to the seat frame (2) by using Bolt with Allen Key (A).

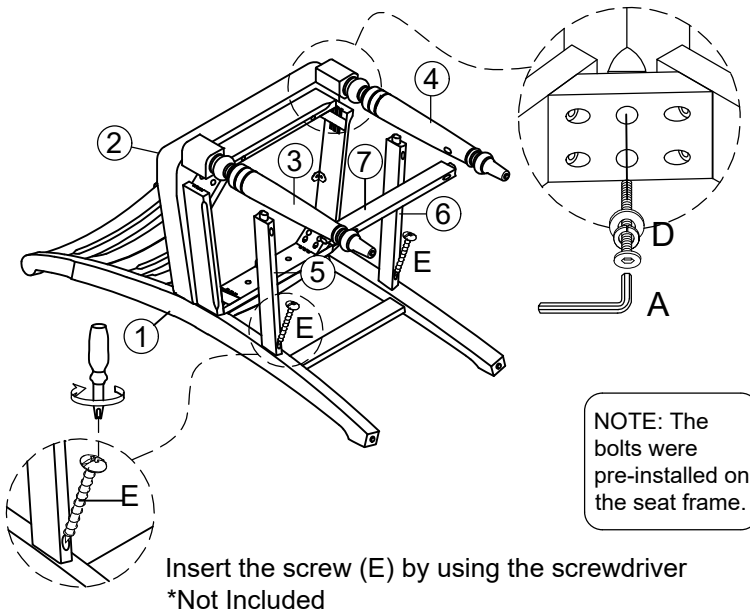


## STEP 3:

Attach left stretcher (5), right stretcher (6) and front stretcher (7) between left front leg (3) and right front leg (4) by using Screw (E). Secure the left stretchers (5), right stretcher (6) to the left front legs (3), right front leg (4).

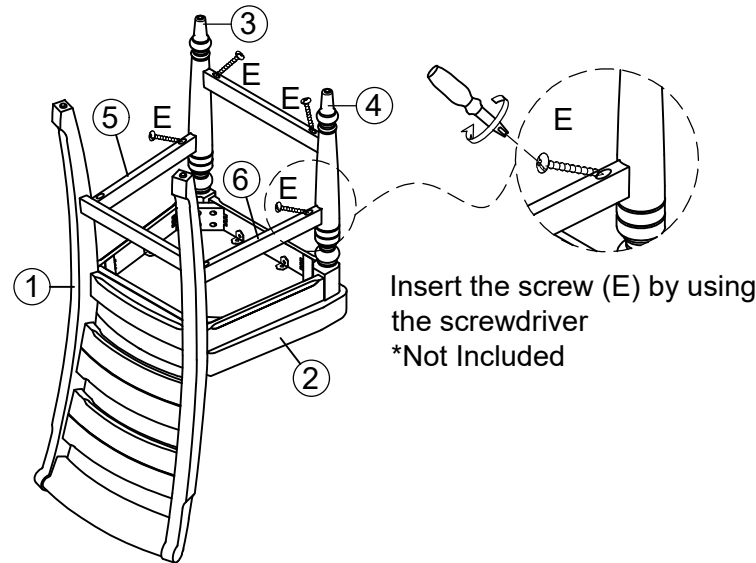

Turn chair to the upright position, apply firm pressure to align and fully tighten all bolts and screws.

## COMPLETED

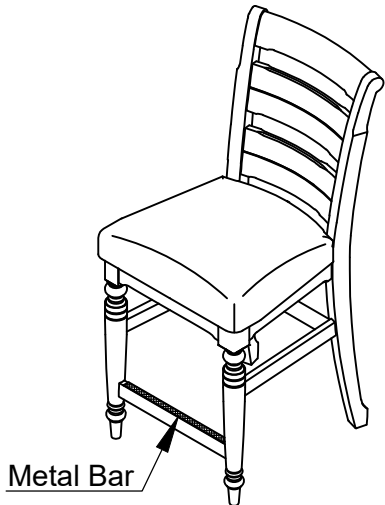

This product is manufactured by BFGP for

**ROOMS TO GO**

**MADE IN VIETNAM**

**VERSION# 1 - 7/15/2025**

**2 OF 2**