

Assembly Instruction





STOF 8905-563CS (ST8905-563CS)
8906-563CS (ST8906-563CS)

Counter Height Stool
Counter Height Stool

SKU# 43489055
SKU# 43489079


Version 1 - 2026/04/07






WARNING: To avoid alignment issue, please don't tighten the screws unless all legs are adjusted at the same level.


Step	Code	HARDWARE LIST	Q'TY
1	A	Hex-Nut Ø5/16" 	4 pcs
	B	Spring Washer Ø5/16" x Ø1/2" x 1/16" 	4 pcs
	C	Flat Washer Ø5/16" x Ø3/4" x 1/16" 	4 pcs
2	D	Bolt Ø1/4"-20 x 1-1/2" 	3 pcs
		Spring Washer Ø5/16" x Ø1/2" x 1/16" 	
		Flat Washer Ø5/16" x Ø3/4" x 1/16" 	
3	E	Bolt Ø1/4"-20 x 3-3/8" 	4 pcs
		Spring Washer Ø5/16" x Ø1/2" x 1/16" 	
		Flat Washer Ø5/16" x Ø3/4" x 1/16" 	
4	F	Screw Ø8 x Ø4 x 2" 	6 pcs
	G	Wrench 3" x 1/2" 	1 pc
	H	Allen Key 5/32" 	1 pc

TOOLS REQUIRED (NOT PROVIDED)

Phillips Screwdriver



Code	PARTS LIST	QTY'
1	CHAIR BACK 	1 pc
2	SEAT 	1 pc
3	FRONT LEG (LEFT - RIGHT) 	2 pcs
4	SIDE STRETCHER (LEFT - RIGHT) 	2 pcs
5	FRONT STRETCHER 	1 pc

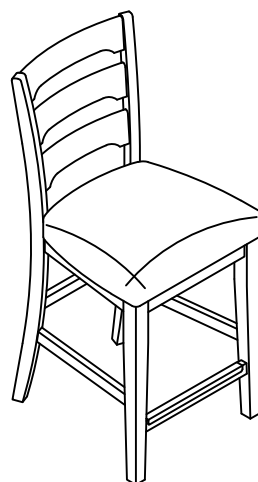

ASSEMBLY COMPLETED

Hardware Pack Location (s) :

STOF 8905-563CS (ST8905-563CS)
8906-563CS (ST8906-563CS)

Counter Height Stool
Counter Height Stool

SKU# 43489055
SKU# 43489079

This product is manufactured by STOF

(1 OF 2)

Assembly Instruction

STOF

8905-563CS (ST8905-563CS)
8906-563CS (ST8906-563CS)


Counter Height Stool
Counter Height Stool

SKU# 43489055
SKU# 43489079

Version 1 - 2026/04/07

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

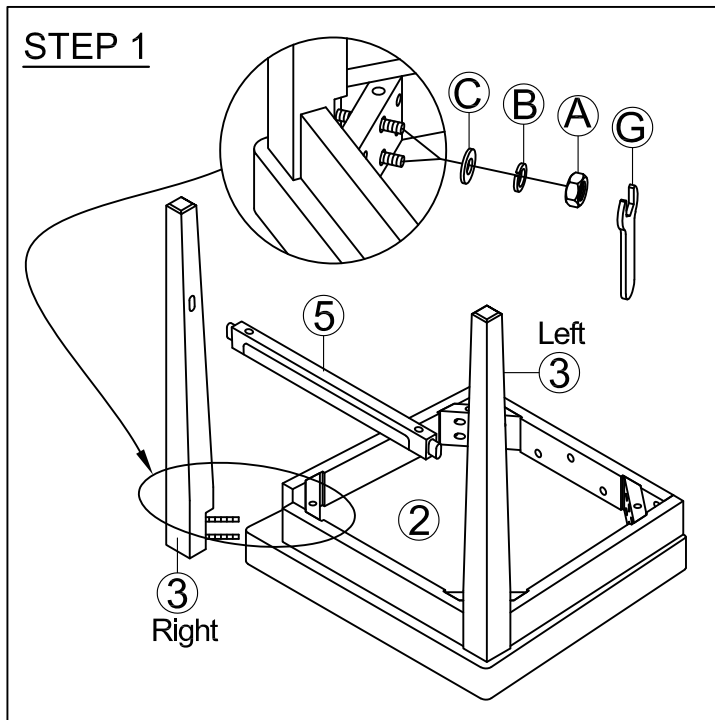
STEP 1



Attach the front legs to the seat frame. At the same time attach the front stretcher to front legs.


Note: Do not tighten all screws & bolts until the seat is fully assembly

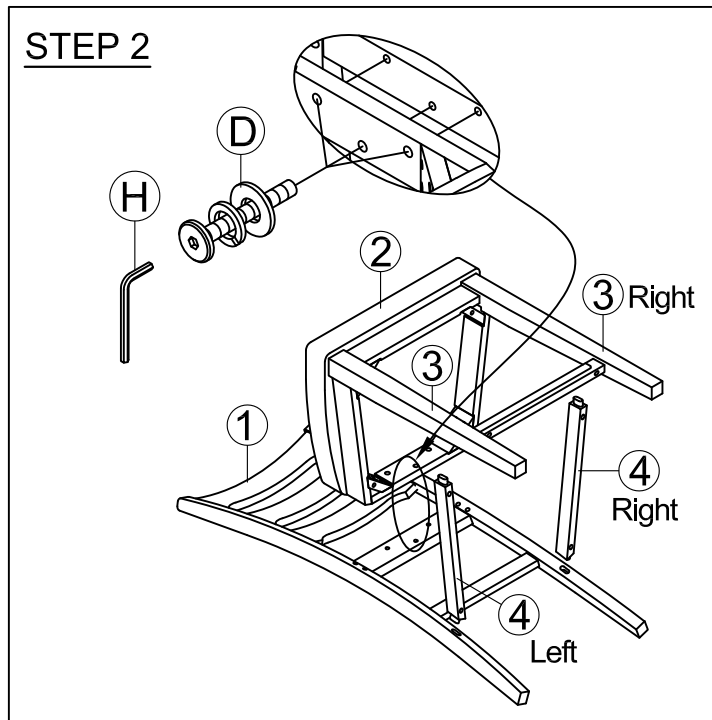STEP 2




Attach the seat frame & front legs, side stretcher to the chair back.

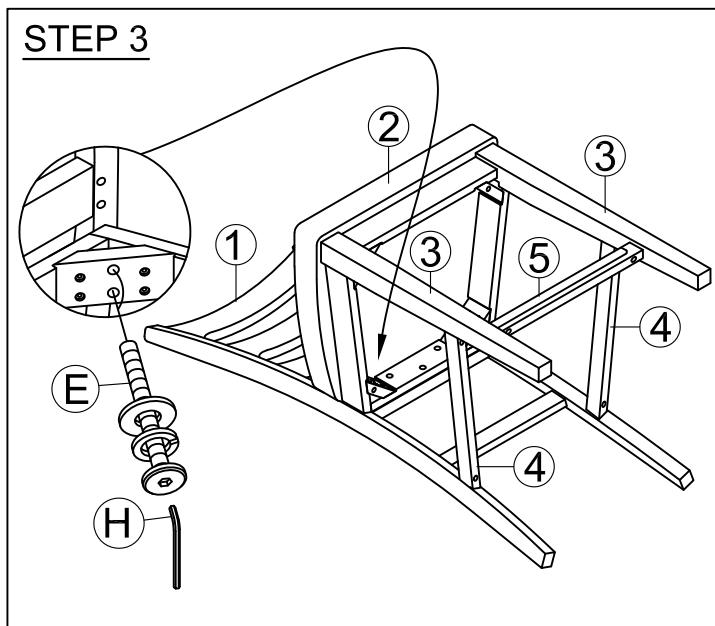STEP 3



Screw the seat frame corner to the rear legs.

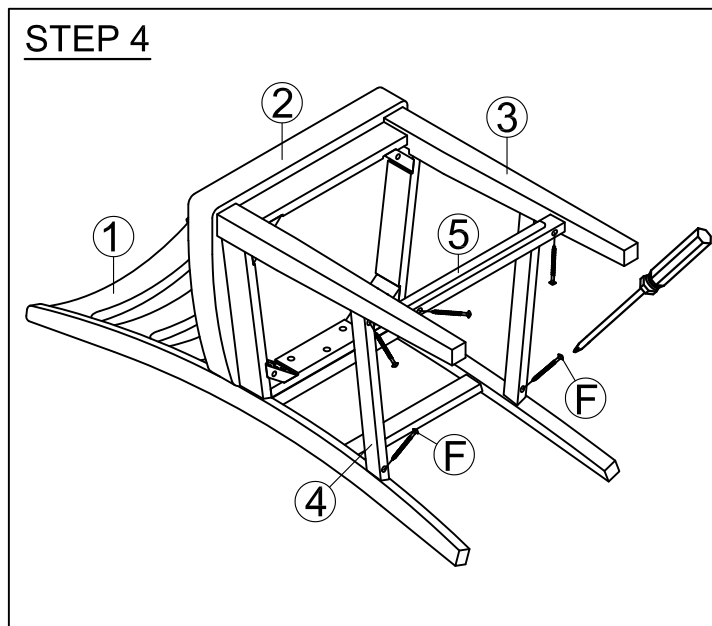STEP 4



Attach the screw into the side stretchers