

Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below.

Part list

(A) Back chair - 1 pc 	(B) Seat frame - 1 pc 	(C) Left leg - 1 pc 	(D) Right leg - 1 pc 	(E) Side stretcher - 2 pcs
(F) Front stretcher - 1 pc 	(1) Long bolt - 8 pcs Ø5/16"x18x85mm	(2) Short bolt - 2 pcs Ø1/4"x20x45mm	(3) Wood screw - 6 pcs #8x45mm	(4) Allen key - 1 pc M4


STEP 1

1.1. Place the back chair (A) on a soft and clean surface.

Assemble the seat frame (B) with the back chair (A) by using allen key (4) with hardware (2).

1.2. Assemble the seat frame (B) with the back legs of the back chair (A) by using allen key (4) with hardware (1).

*Attention: DO NOT TIGHTEN THE BOLTS.

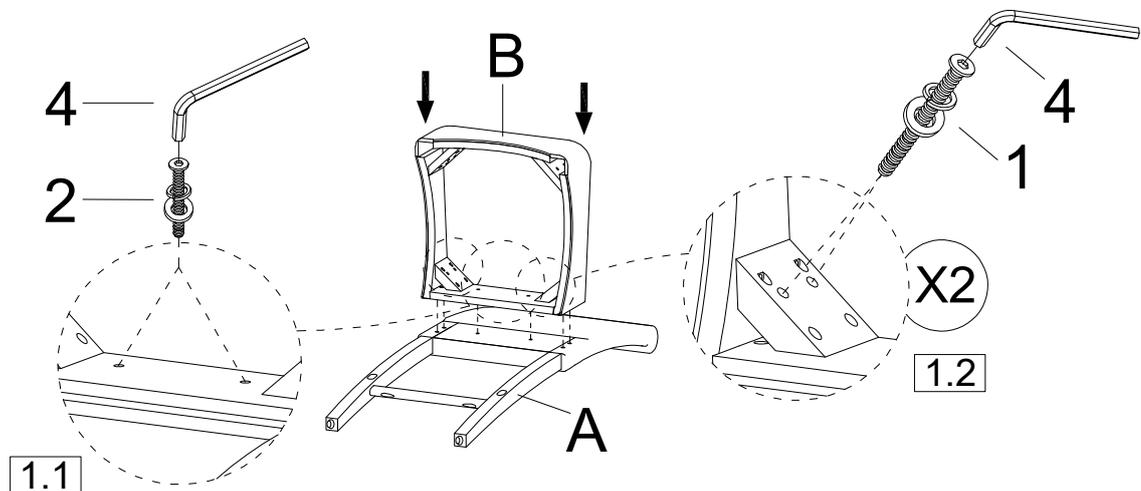

hardware pack locations:

9286-24CS COUNTER STOOL BURGUNDY	- SKU# 43492862
9286-24CH COUNTER STOOL CHOCOLATE	- SKU# 43492874
9286-24GR COUNTER STOOL GRAY	- SKU# 43492886
9289-24CS COUNTER STOOL CHAMPAGNE	- SKU# 43492898

STEP 2


2.1. Assemble the left leg (C) and right leg (D) with the seat frame (B) by using allen key (4) with hardware (1).

2.2. Install the front stretcher (F) between the left leg (C) and right leg (D), then install the side stretcher (E) between the front legs (C & D) and the back legs of the back chair (A).

Assemble all the stretchers by using a screwdriver with hardware (3).


*Attention: DO NOT TIGHTEN THE BOLTS.

NOT PROVIDED

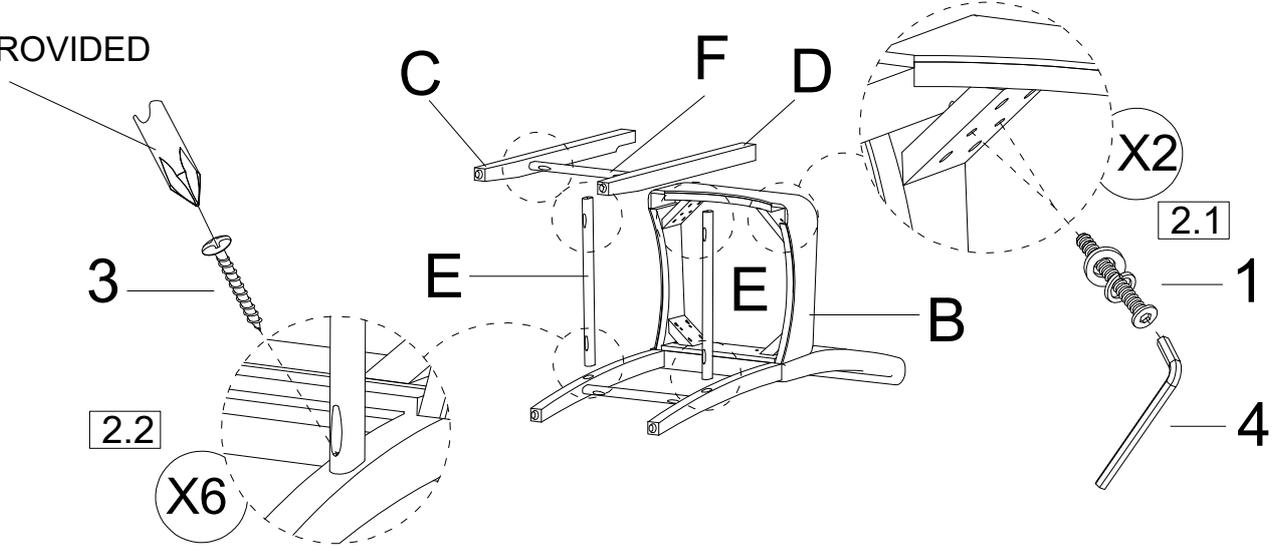

STEP 3

To level the chair, stand the chair up on a flat surface and tighten all the bolts by using allen key (4) and tighten all the screws by using a screwdriver.

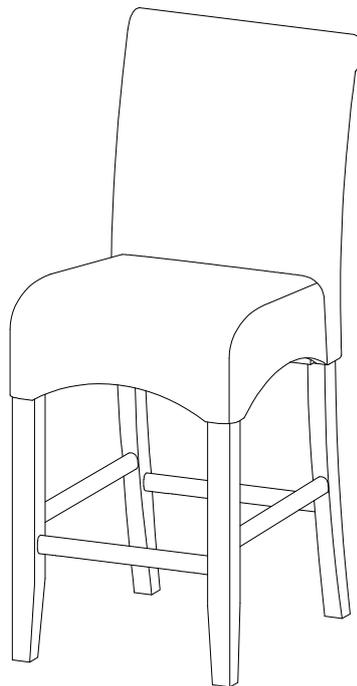

COMPLETE