

GLOB
 4302-2
 BROWN BARSTOOL
 SKU# 43443023

 GLOB
 4302-2B VANILLA BARSTOOL
 SKU# 43643027

STEP	CODE	HARDWARE		Q'TY
	Α	Allen Wrench		1 pc
1	В	Bolt Ø5/16" x 18 x 2"	9	4 pcs
		Spring washer Ø5/16"		4 pcs
		Flat washer Ø5/16"		4 pcs
2	С	Wood Screw Ø5/32" x 1-3/4"	(3)20000000000-	4 pcs
		Glue	GLUE	1 pc

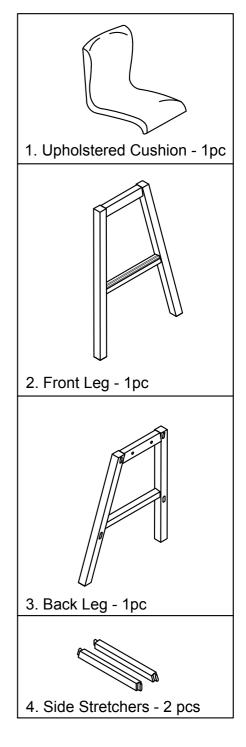

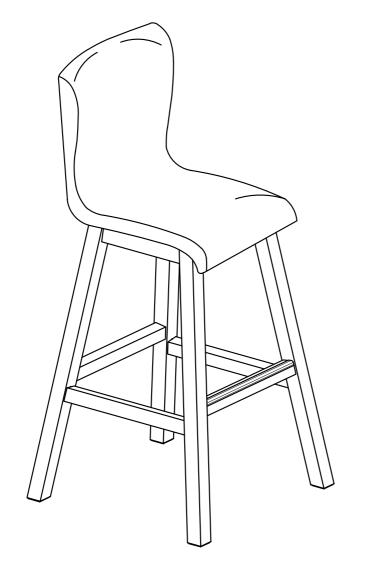

Hardware Pack Location (s):


4302-2 BROWN BARSTOOL 4302-2B VANILLA BARSTOOL

SKU# 43443023 SKU# 43643027

GLOB 4302-2 BROWN BARSTOOL SKU# 43443023 GLOB 4302-2B VANILLA BARSTOOL SKU# 43643027


***Cautions: Please read all instructions carefully before starting the assembly process.

These parts are combersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damage during the assembly.

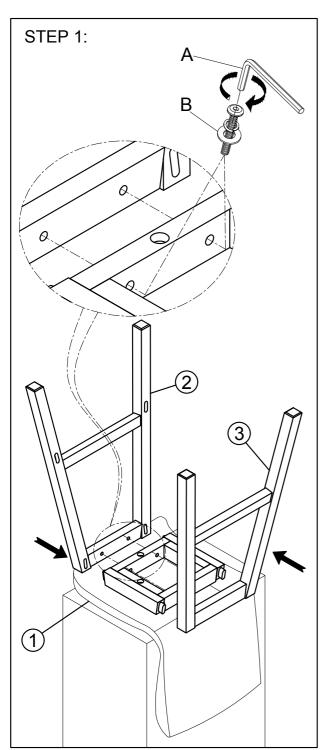

Attach the Front Leg (2) and Back Leg (3) to seat frame by hardware with Allen Wrench.


(Remark: Please put some of glue on to the tenon before assembly)

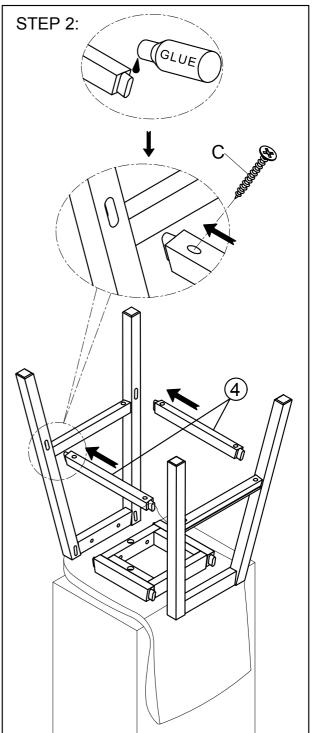


Attach the Side Stretchers (4) to Front Leg (2) and Back Leg (3) with screws and glue by screwdriver (not provided).

GLOB 4302-4 **SERVER** SKU# 43843021


STEP	CODE	HARDWARE		Q'TY
1	Α	Allen Wrench		1 pc
	В	Bolt Ø5/16" x 18 x 1-1/2"	9	12 pcs
		Spring washer Ø5/16"		12 pcs
		Flat washer Ø5/16"		12 pcs
	С	Wooden dowel Ø3/8" x 1-1/8"		8 pcs
2	D	Anti-tipping Kit		1 pc

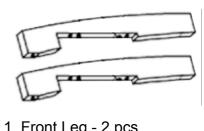







2. Back Leg - 2 pcs

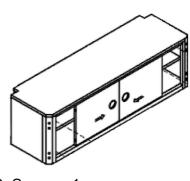

3. Server - 1pc

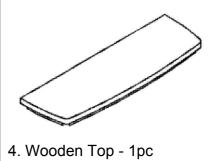

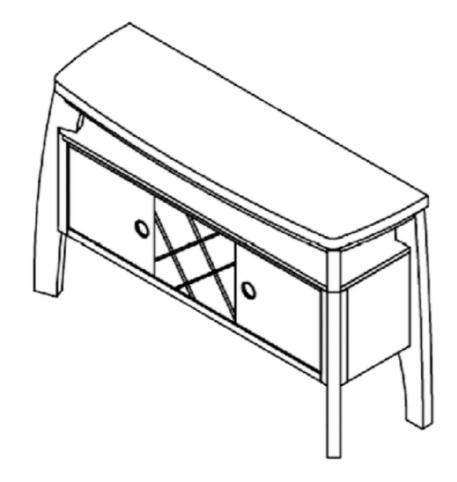


Hardware Pack Location (s): SKU# 43843021 4302-4 SERVER


GLOB 4302-4 SERVER SKU# 43843021

***Cautions: Please read all instructions carefully before starting the assembly process.


These parts are combersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damage during the assembly.

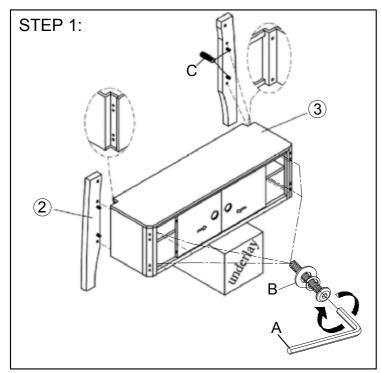


Attach the Back Legs (2) to the Server (3) by hardware with Allen Wrench.

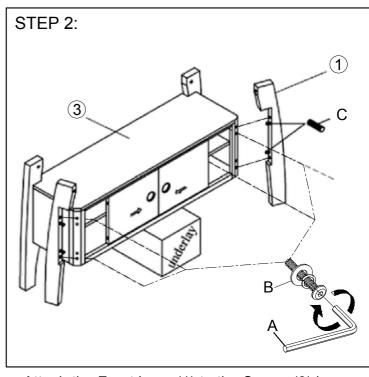

Attach the Front Legs (1) to the Server (3) by hardware with Allen Wrench.

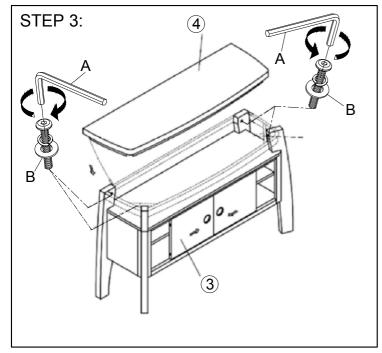

To put Wooden Top (4) to the Server (3) by hardware with Allen Wrench.

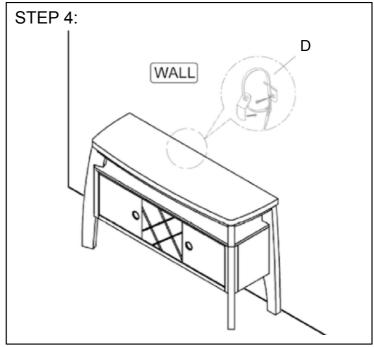


To attach Server to wall with anti-tipping kit.

Note:

- *Keep all hard wave parts out or children's reach
- *Keep these instruction forfuture reference.

GLOB 4302-1 BAR TABLE SKU# 43243029

STEP	CODE	HARDWARE		Q'TY
1	Α	Allen Wrench		1 pc
	В	Bolt Ø5/16" x 18 x 1"	(8)	9 pcs
	С	Metal Plate 4" x 3-1/2" x 3mm		3 pcs
2	D	Bolt Ø5/16" x 18 x 3/4"	900	15 pcs
		Spring washer Ø5/16"		15 pcs
		Flat washer Ø5/16"		15 pcs
3	E	Bolt Ø5/16" x 18 x 1-3/4"	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	6 pcs
		Spring washer Ø5/16"		6 pcs
		Flat washer Ø5/16"		6 pcs
4	F	"L"Metal Plate 2-1/2" x 1-3/4" x 3mm		3 pcs

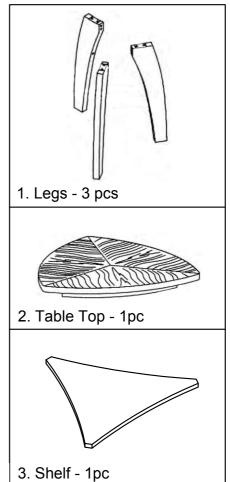




Hardware Pack Location (s): 4302-1 BAR TABLE SKU# 43243029


GLOB 4302-1 BAR TABLE SKU# 43243029

***Cautions: Please read all instructions carefully before starting the assembly process.


These parts are combersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damage during the assembly.

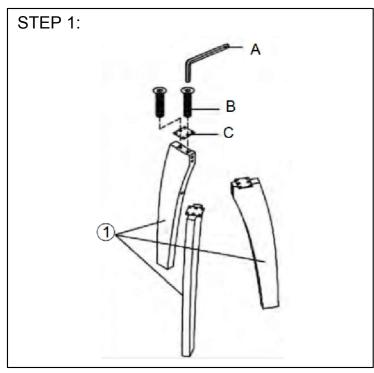


Attach the Metal Plate to the Legs (1) by hardware with Allen Wrench.

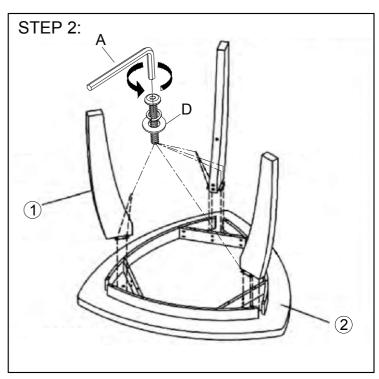

Attach the Legs (1) to the Table Top (2) by hardware with Allen Wrench.

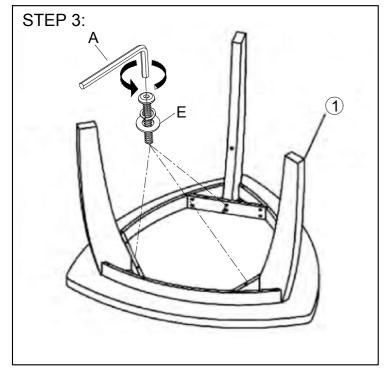


Attach the Apron block to the Legs (1) by hardware with Allen Wrench.

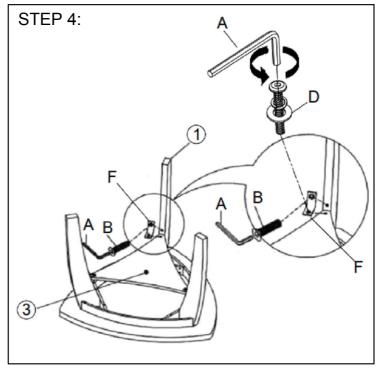


Screw the "L" Metal Plate to the Shelf (3) and Legs (1) by hardware with Allen Wrench.

GLOB 4302-3 BROWN BENCH SKU# 43543025 GLOB 4302-3B VANILLA BENCH SKU# 43743029

STEP	CODE	HARDWARE		Q'TY
1-3-4-5	Α	Allen Wrench		1 pc
	В	Plastic Cap		4 pcs
	С	Bolt Ø5/16" x 18 x 1-3/4"		17 pcs
		Spring washer Ø5/16"		17 pcs
		Flat washer Ø5/16"		17 pcs
	D	Wooden dowel Ø3/8" x 1-1/8"		8 pcs

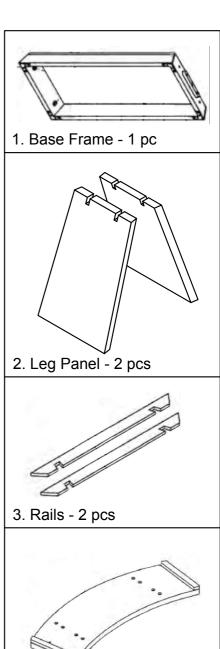

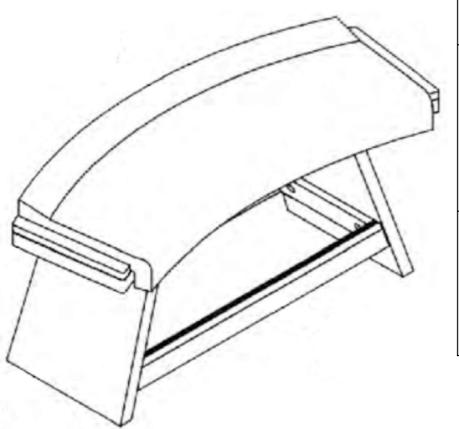

Hardware Pack Location (s):

4. Seat Panel - 1pc

5. Top Cushion - 1pc


4302-3 BROWN BENCH 4302-3B VANILLA BENCH

SKU# 43543025 SKU# 43743029


GLOB 4302-3 BROWN BENCH SKU# 43543025 GLOB 4302-3B VANILLA BENCH SKU# 43743029

***Cautions: Please read all instructions carefully before starting the assembly process.


These parts are combersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damage during the assembly.

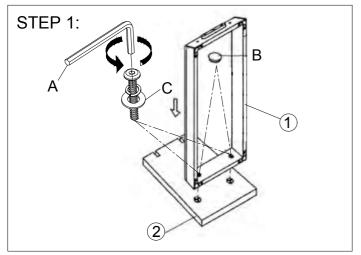


Attach Base Frame (1) to Leg Panel (2) by hardware with Allen Wrench. Then cover the hole with Plastic Cap.

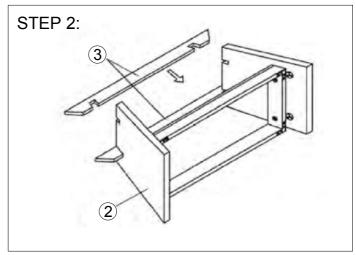


Attach the two Rails (3) to Leg Panel (2).

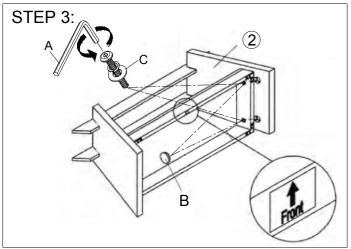

Attach the another Leg Panel (2) by hardware with Allen Wrench. Then cover the hole with Plastic Cap.

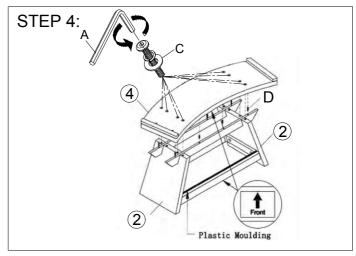

Attach Seat Panel (4) to Side Leg (2) by hardware with Allen Wrench.

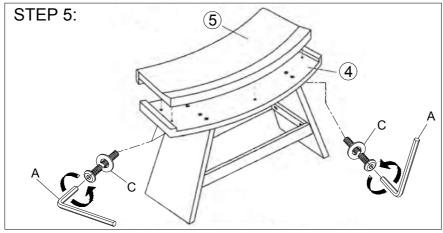

Attach the Top Cushion (5) to Seat Panel (4) by hardware with Allen Wrench.