

# **ASSEMBLY INSTRUCTIONS**

MODEL: 4733-24 SLAT BACK COUNTER HEIGHT CHAIR


Manufactured by (AXEL) for Rooms To Go

SKU# 43447350, 43547352, 43647354, 43747356, 43847358

Version 1 08/2024

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts. Which may have come loose inside the carton during shipment. Identify and count all parts and compare with the hardware list as below :


the hardware list as below :						
Hardware List	No.	Description	Dimension		Picture	Qty
		JCBB M8	8 x P1.25 x 40mm [Length]		9 <b>-910)</b>	2 Pcs
		Spring Washer M8 x 14mm				2 Pcs
		Flat Washer	M8 x 18mm			2 Pcs
	2	JCBB M8	8 x P1.25 x 80mm [Length] M8 x 14mm		()))))))))))))))))))))))))))))))))))))	8 Pcs
		Spring Washer				8 Pcs
		Flat Washer	M8 x 18mm	V		8 Pcs
	3	Allen Wrench	M4 x 95mm			1 Pc
	4	Pan Head Screw M4	4 x 38mm [Length]		C) DODDODDODDOD	6 Pcs
	5	Tools required (not included): PHILLIPS HEAD SCREW DRIVER				
Parts List	No.	Description		]	Picture	Qty
	Α	Back rest				1 Pc
	В	Seat				1 Pc
	С	Front Leg (L & R) E   Front Stretcher Side Stretcher (L & R)				2 Pcs
	D					1 Pc
	E					2 Pcs

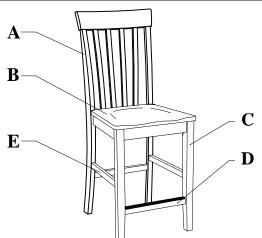

### PARTS DETAILS

Hardware Pack Location(s) :


SLAT BACK COUNTER HEIGHT CHAIR, SKU# 43447350, 43547352, 43647354, 43747356, 43847358

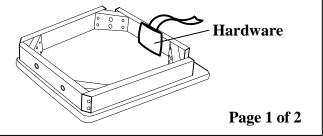


# Assembly step

## **STEP 1**

Assemble BACKREST to SEAT as illustration shown. DO NOT TIGHTEN THE SCREWS UNTIL FULLY SET UP.

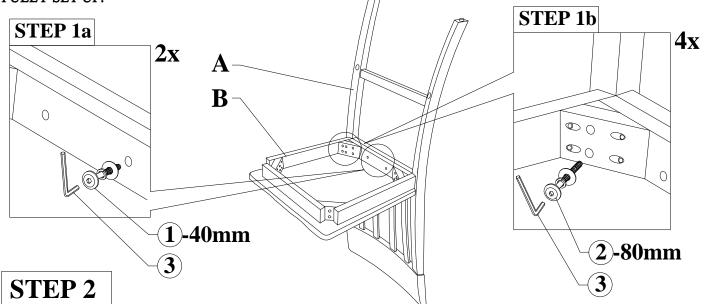


Assemble FRONT LEG to SEAT as illustration shown. DO NOT TIGHTEN THE SCREWS UNTIL FULLY SET UP.

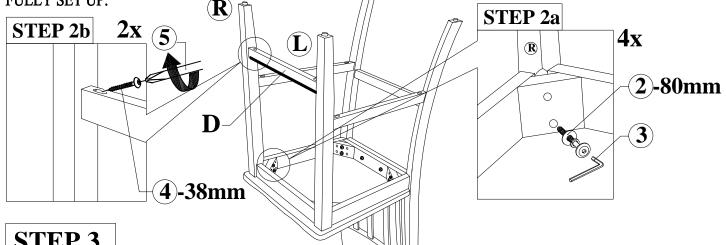

# **STEP 3**

Assemble STRETCHER to LEG as illustration shown. (NOTE : USE HARDWARE IN BOX 4) TIGHTEN ALL THE SCREWS !!!

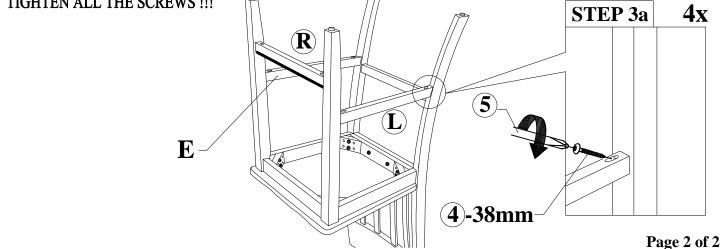

#### NOTE:

To ensure that chair is level, assemble the chair on flat & soft surface. DO NOT tighten all the screw & bolts until the chair been adjust & level all the legs so that they do not wobble. Once adjusted then only tighten all the screw using Allen Key while making sure that the unit remain level.