
## ROOMS TO GO

Manufactured for Rooms To Go


## **Assembly Instructions**

HMIS D8586-14 WOODBACK ARM CHAIR SKU # 43885865

\*\*\*Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

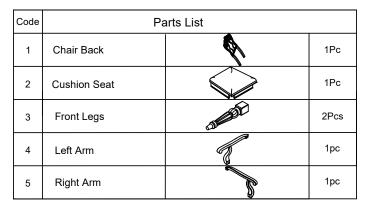

Step	Code	Hardware List		
2	A	Allen Bolt - Ø5/16x18x85mm		4Pcs
		Flat washer - Ø5/16x19x1.5mm		4Pcs
		Lock washer - Ø5/16"		4Pcs
3+4	В	Allen Bolt - Ø1/4x20x38mm		5Pcs
		Flat washer - Ø1/4x12x1.5mm		5Pcs
		Lock washer - Ø1/4"		5Pcs
5	С	Allen Bolt - Ø1/4x20x38mm		2Pcs
1	D	Nut - Ø5/16"	9	4Pcs
	Е	Flat washer - Ø5/16x19x1.5mm	0	4Pcs
	F	Lock washer - Ø5/16"	0	4Pcs
	G	Wrench - Ø5/16"	ß	1Pc
2+3+4+5	Н	Allen Key - 4mm		1Pc

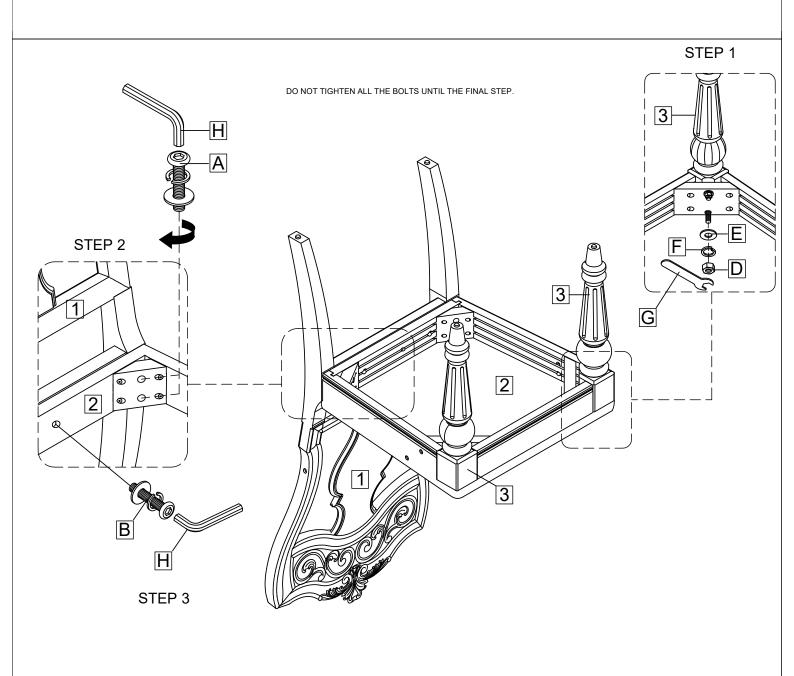


## ROOMS TO GO

## **Assembly Instructions**

Manufactured for Rooms To Go

HMIS D8586-14 WOODBACK ARM CHAIR SKU # 43885865

\*\*\*Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

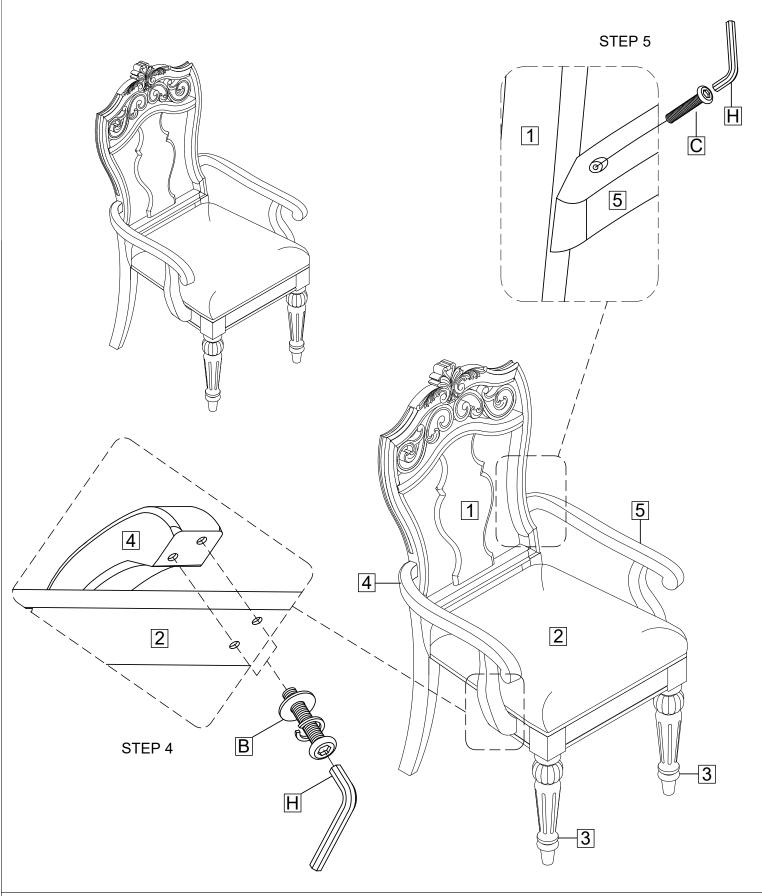

MADE IN VIETNAM