

## Part List for Dreamcatcher Pumpkin Loveseat (FHPC100-DC)



1 - Chair (folded)

4 - Leg with Rubber 'Foot'

1 - Top Half of C stand

1 - Bottom Half of C Stand

1 - Flat Cushion

1 - Leisure Cushion

1 - Strap Cover

2 - Hex Key

1 - Wrench

4 - Ribbed Wedges

10 - Nuts and Bolts

## Assembly Instructions for Dreamcatcher Pumpkin Loveseat (FHPC100-DC)

5

Before starting assembly, unpack entire contents of box and check that all parts are accounted for.

Contact FlowerHouse for any replacement or repair issues:

(810)686-8252 - customerservice@flowerhouses.com



Insert four legs into posts of X mold on lower half of C stand. Attach top half of C stand to bottom half.

Fasten with nuts and bolts.

One at a time, slide the side
O-rings of the side straps over
the center attachment strap.



Open chair frame and insert nuts into openings on inside of outermost rib, fastening with bolts, on top and bottom of chair.



Close pan cover by securing fasteners. Top pan cover hooks to clasp.



(Optional)
Insert wedges with interlocking teeth facing each other in between outermost rib and bolts for optimal appearance/tighness.



Lift the chair and slide the attachment strap over the end cap into the securing tabs.

Put strap cover over strap and velcro closed.

Place flat cushion in chair, followed by leisure cushion.



Close top round pan cover by sliding attachment strap through middle hole.



Make sure all nuts and bolts are tightened throughout the stand and chair. Place in any level location and enjoy your Dreamcatcher Pumpkin Chair!

Thank you for your business!

Images are not to scale

- PO Box 595 Clio, MI 48420 - Office: (810)686-8252 - Fax: (810)686-5492 - www.flowerhouses.com -




## How to use lever tool (used for assembly assistance)

Before starting assembly, unpack entire contents of box and check that all parts are accounted for.

Contact FlowerHouse for any replacement or repair issues:

(810)686-8252 - customerservice@flowerhouses.com



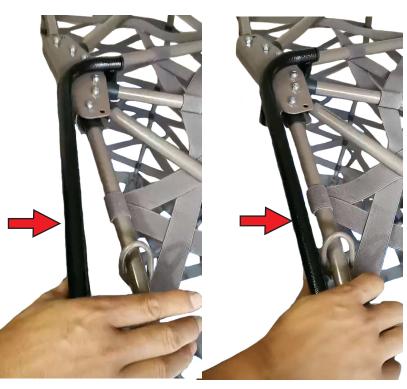

Place the peg of the curved end of lever on the inside middle of the pan, with the peg of the straight bar on the outside.

Pull the straight bar towards the outer rib of the chair.

This will create the clearing necessary to insert bolts and wedges into position.

Place bolts, fasten with nuts, and follow by inserting wedges in between outermost rib and bolt.

Flip lever tool to repeat on other side, top and bottom.



Images are not to scale