


Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below


Caution: Loosely pre-assemble all the bolts first. Do not fully turn until all bolts are inserted into the proper holes.



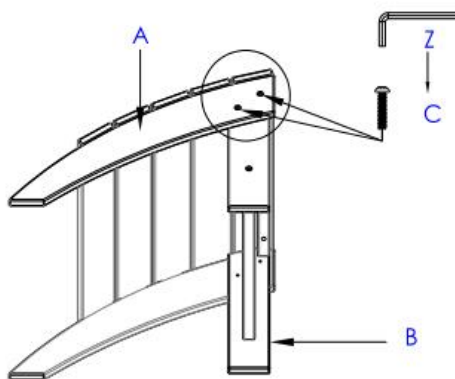

Step 1: Place the Footrest(Part A) on a clean, soft surface as a blanket or carpet. Assemble the Leg(Part B) to the Footrest by Bolt(M6*30) (Part C) and tighten with Allen key (Part Z).

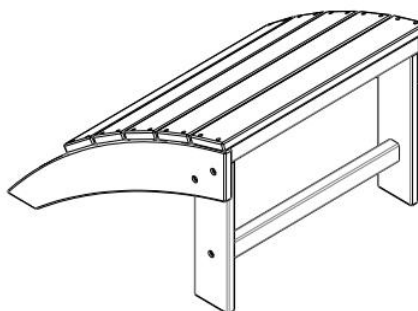

Step 2: After tightening all bolts, your product is ready for use.





PARTS LIST

| NO.: | PIC | DESC | QTY |
|------|-------------------------------------------------------------------------------------|----------|-----|
| A |  | Footrest | 1pc |
| B |  | Leg | 1pc |

Periodically check and make sure all bolts are fully tightened.

PARTS LIST

| NO.: | PIC | DESC | QTY |
|------|---------------------------------------------------------------------------------------|-------------|------|
| C |  | Bolt(M6*34) | 4pcs |
| Z |  | Allen key | 1pc |