

ROOMS TO GO PATIO™ ASSEMBLY INSTRUCTIONS


SHGP HDPE FOOTREST ADIRONDACK

Manufactured for Rooms To Go


SKU 70414429/70414431/70414443
70414455/70414467/70414479/70414481

Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below

Step 1: Place the Footrest(Part A) on a clean, soft surface as a blanket or carpet. Assemble the Leg(Part B) to the Footrest by Bolt(M6*30) (Part C) and tighten with Allen key (Part Z).

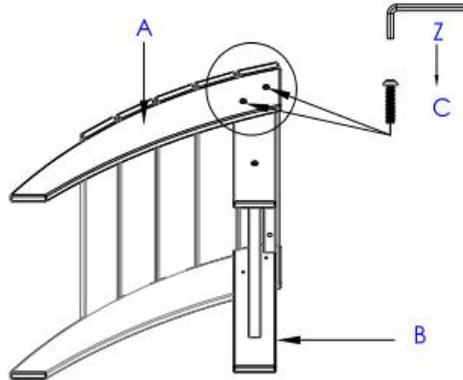

Step 2: After tightening all bolts, your product is ready for use.

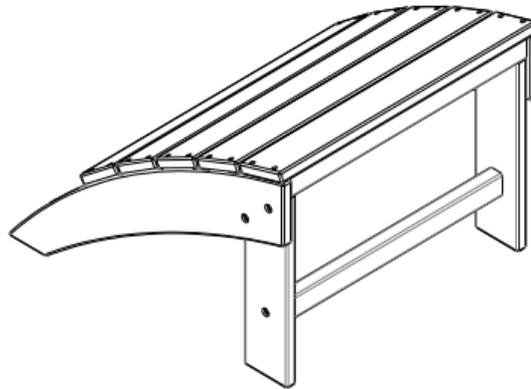

PARTS LIST

NO.:	PIC	DESC	QTY
A		Footrest	1pc
B		Leg	1pc

Periodically check and make sure all bolts are fully tightened.

PARTS LIST

NO.:	PIC	DESC	QTY
C	 <small>M6*30</small>	Bolt(M6*30)	4pcs
Z		Allen key	1pc