




***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two person assembly is recommended in order to prevent personal injury and damaged parts.

Step 1: Assemble the Left Front Leg (C), Right Front Leg (D), Seat Board (E), and Front Stretcher (G) together using the Allen Key (L) and Bolts (I and J).


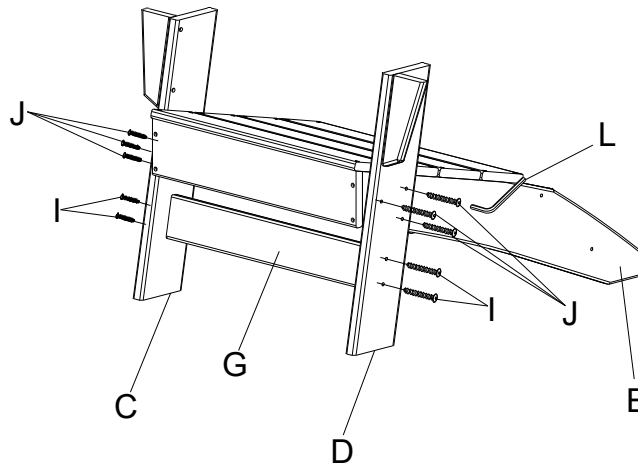


Warning: Do not fully tighten the bolts at the beginning of assembly, or the bolts may become stripped.

Step 2: Assemble the Left Armrest (A), Right Armrest (B) using the Allen Key (L) and Bolts (J).

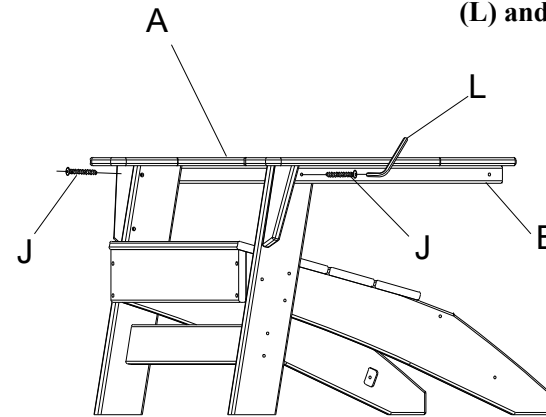

PARTS LIST

NO.	A	B	C	D	E	F	G	H	I	J	K	L	Cushions not included, only for reference.	
DESC	Left Armrest	Right Armrest	Left Front Leg	Right Front Leg	Seat Board	Back Board	Front Strecher	Back Stretcher	Bolt 1/4*51	Bolt 1/4*40	Bolt 1/4*83	Allen Key	Seat Cushion	Back cushion
PIC														
QTY	1pc	1pc	1pc	1pc	1pc	1pc	1pc	1pc	8pcs	8pcs	2pcs	1pc	/	/

Hardware Pack Locations:
WAKEFIELD ADIRONDACK CHAIR, 71661295

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two person assembly is recommended in order to prevent personal injury and damaged parts.


ASSEMBLY INSTRUCTIONS

EYCO WAKEFIELD ADIRONDACK CHAIR

SKU#71661295

Step 3: Use the Allen Key (L) to attach the Back Board (F) to both Armrest with Bolts (K), and secure it to the Seat Board with Bolts (I).

Warning: : Do not fully tighten the bolts at the beginning of assembly, or the bolts may become stripped.

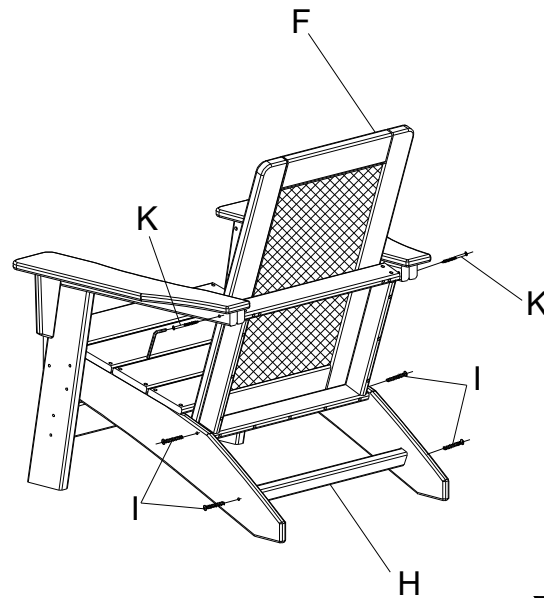

Step 4: Level the chair and fully tighten all bolts using the Allen Key.

