Item # : ORRSST Assembly Instructions




Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

Revised 03/2018


General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The two main types of hardware used to assemble this product are : screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.



VI. Power tools should not be used to assemble this product.



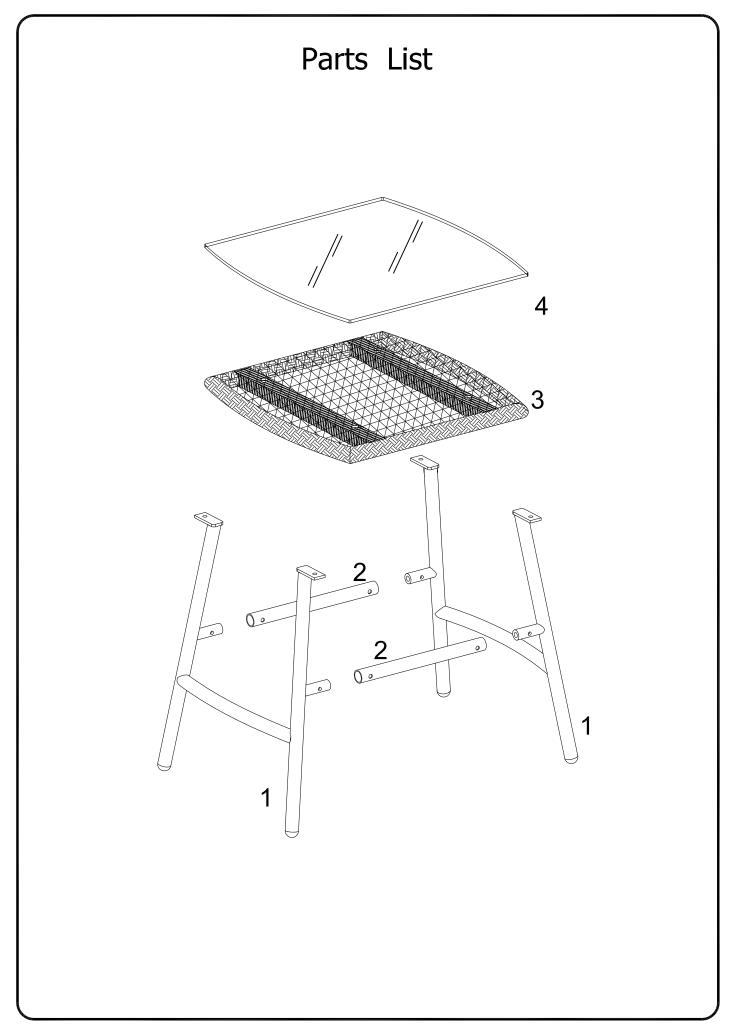


Hardware List

| Α | M6x20mm | Bolt | 4 | pcs |
|---|---------|-----------|---|-----|
| В | M6x35mm | Bolt | 4 | pcs |
| С | Ø15 | Washer | 8 | pcs |
| D | M 4 | Hex Key | 1 | pcs |
| Е | M6 | Nut | 4 | pcs |
| F | M6 | Wrench | 1 | pcs |
| G | M6 | Screw cap | 4 | pcs |


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

Step 1

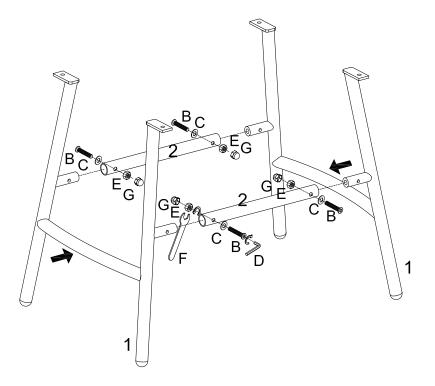


Attach part (1) to part (2) using bolt (B), washer (C) with hex key (D), and nut (E), screw cap (G) with wrench (F).

Step 2

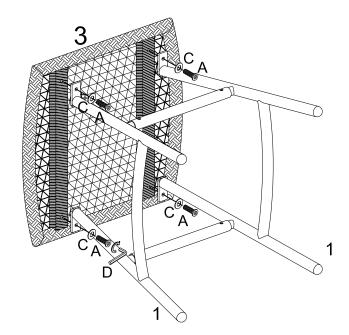

Attach part (1) to part (3) using bolt (A), washer (C) with hex key (D).



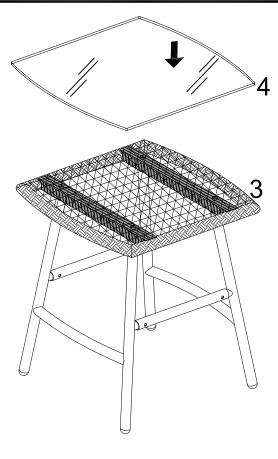

Place glass (4) carefully on top of part (3) as per diagram.

Step 4



Final Assembly