





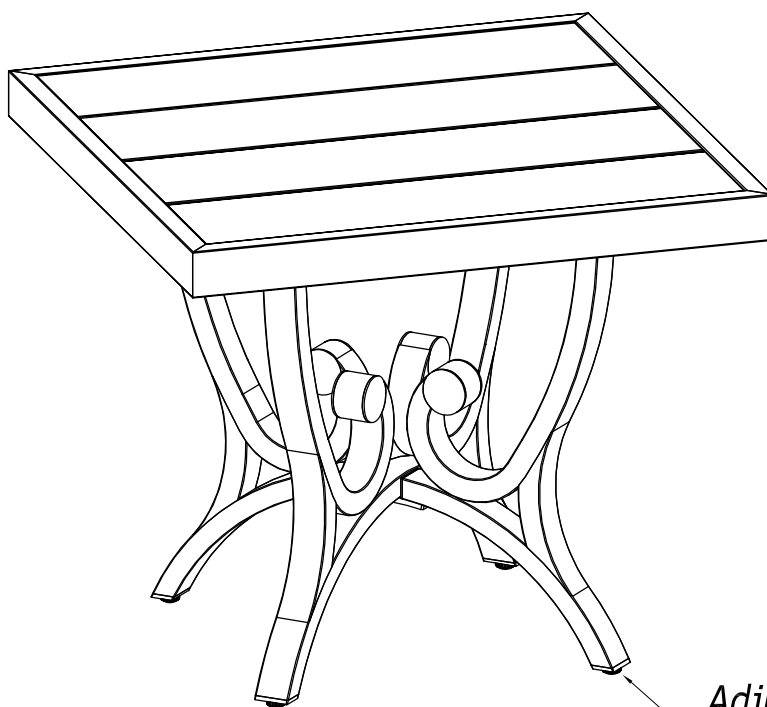
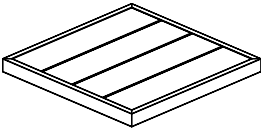




Step	Code	Hardware		Q'ty
1,2	A	Mushroom Bolt 6.3x25, B-HEX, SS, Head Ø10 (1/4"-20)		04 pcs
2	B	Mushroom Bolt 6.3x20, B-HEX, SS, Head Ø10 (1/4"-20)		04 pcs
1,2	C	Plain Washer 6.5x16x1, SS		08 pcs
3	D	Bolt Cap 11.7 x 4.7 PL		08 pcs
2	E	Pat 90x30xt(4)		01 pc
1,2,3	F	Allen key 4x98		01 pc

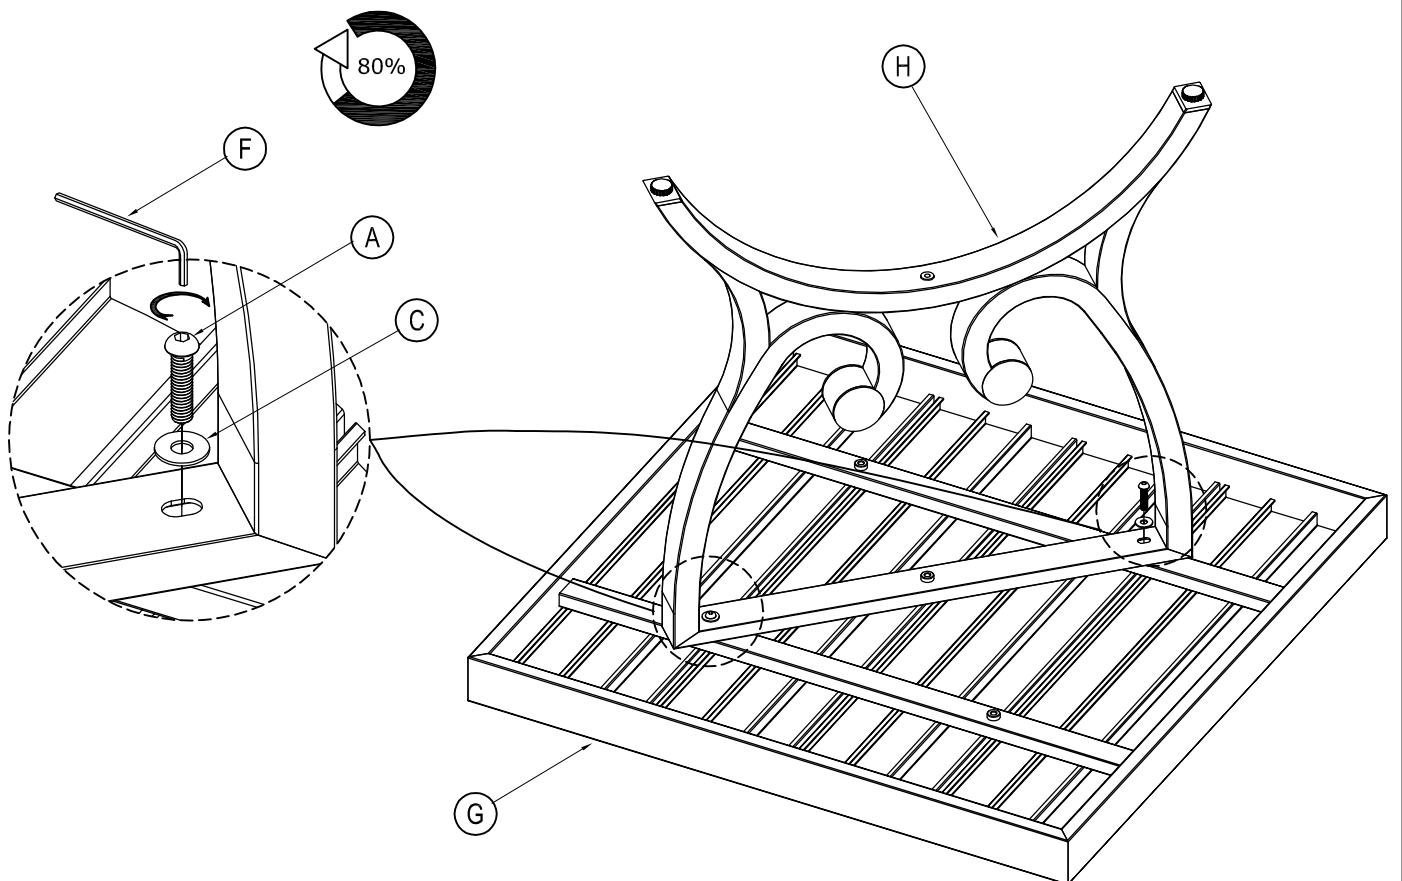


Adjustable levelers (4pcs)

Step	Code	Component		Q'ty
1	G	Table Top Frame		01 pc
1	H	Leg Frame 1		01 pc
2	I	Leg Frame 2		01 pc

*****Caution:** Please read all instructions carefully before starting the assembly process. Always place parts on a flat surface lined with an anti-scratch fabric. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

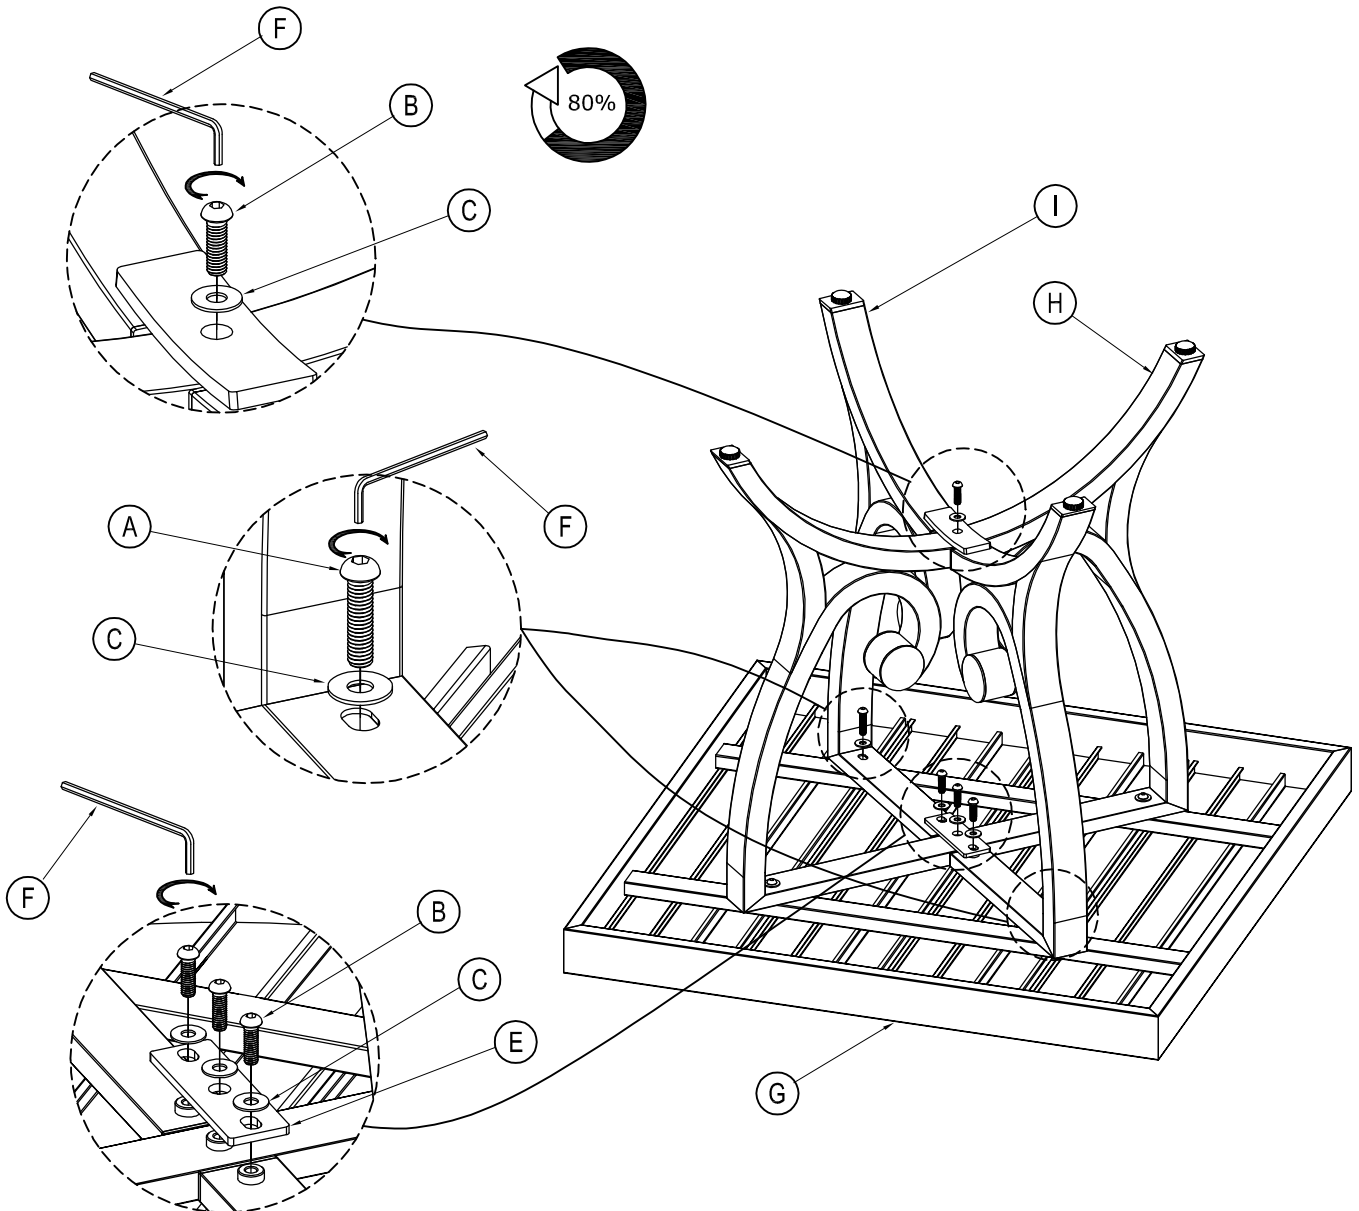
STEP 1



Attach the Leg Frame (H) to the below of the Table Top Frame (G) with the Mushroom-Bolt (A), Plain Washer (C). Tighten with Allen key (F) to 80% tightness

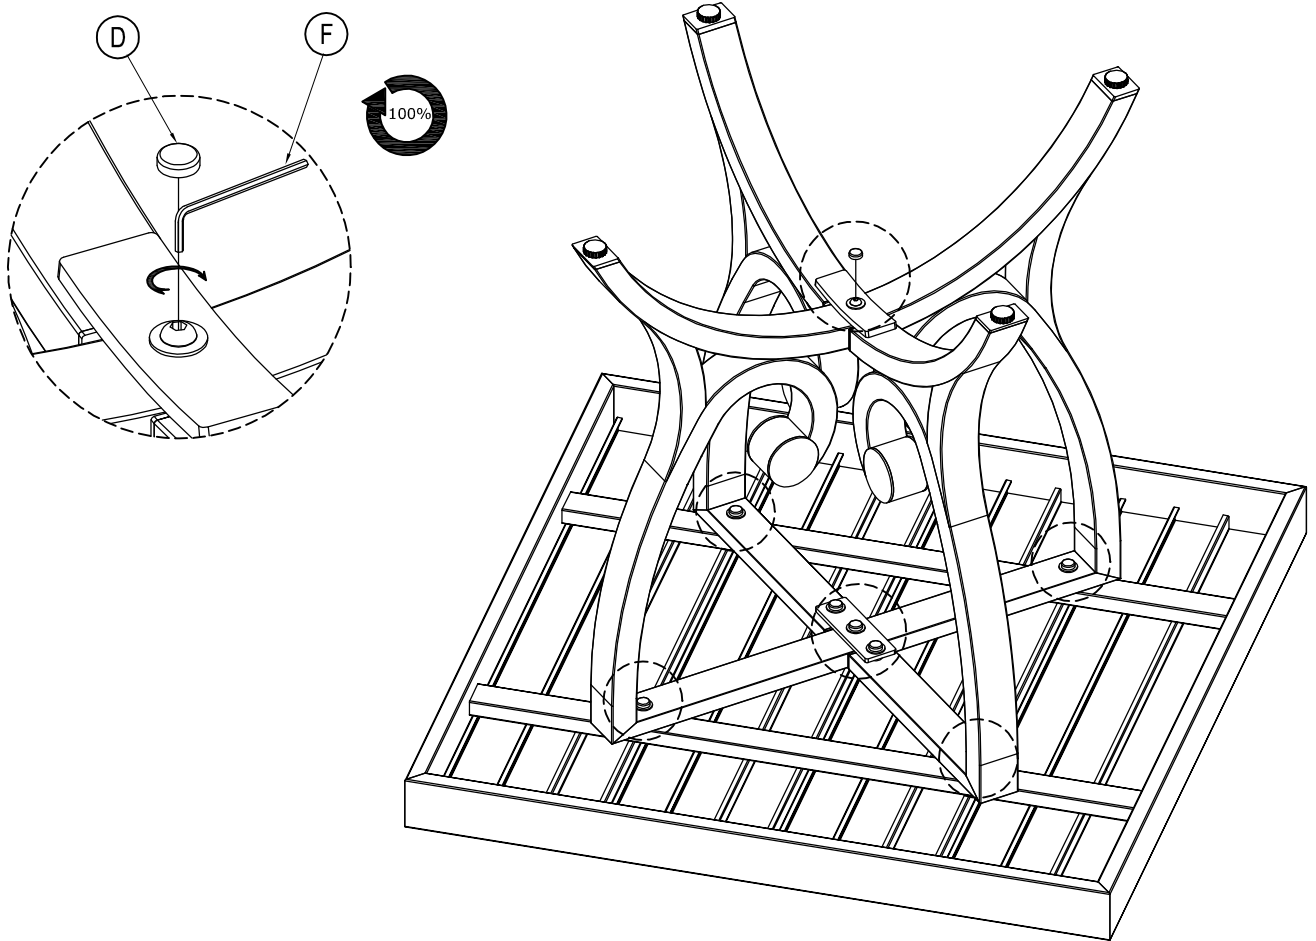


STEP 2



Attach the Leg Frame (I) to the Leg Frame (H) with the Mushroom-Bolt (B), Plain Washer (C) and Pat 90x30xt(4) (E). Similarly, attach the Leg Frame (I) to the Table Top Frame (G) with the Mushroom-Bolt (A), Plain Washer (C). Tighten with Allen key (F) to 80% tightness.

STEP 3



Tighten 100% tightness all positions.

Attach Bolt Cap (D) on the Mushroom- Bolt. Then turn the table up right.

Assembling Completed.