







Step	Code	Hardware	Picture	QTY
2	M625	Bolt(M6*25)		4pcs
1	M633	Bolt(M6*33)		8pcs
1	X	Washer(Φ16*Φ6.5*1.0)		8pcs
1	Z	Allen Key		1pcs

1. We recommend that you should assemble this product with the assistance of another person, this will make assembly easier and will eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until assembly is complete.
3. Please put all parts on a non-abrasive floor before assembly, and follow assembly steps to assemble your newly purchased product correctly and efficiently.


Step 1:

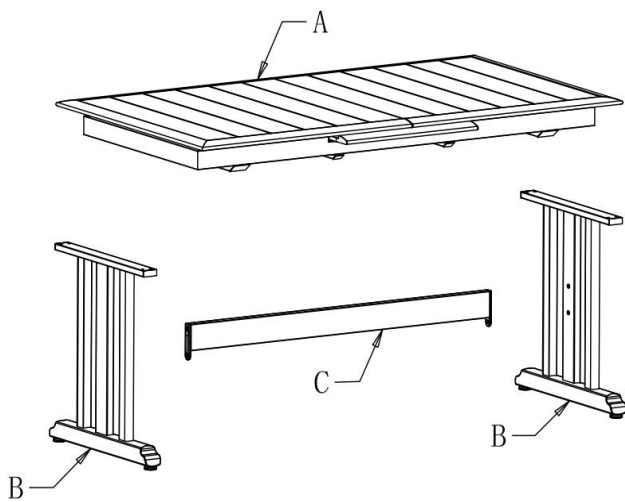


Step 2:

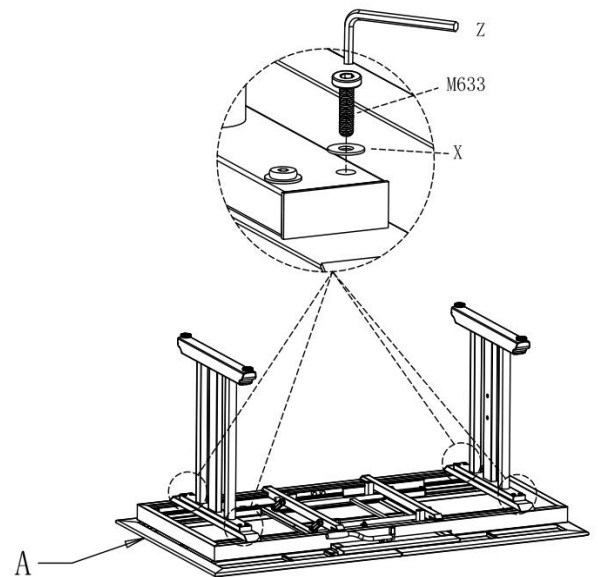


Step 2:

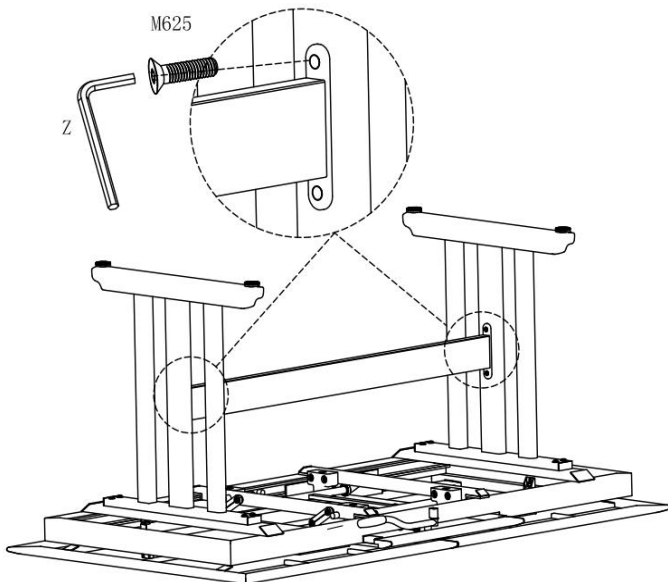


Step 3:

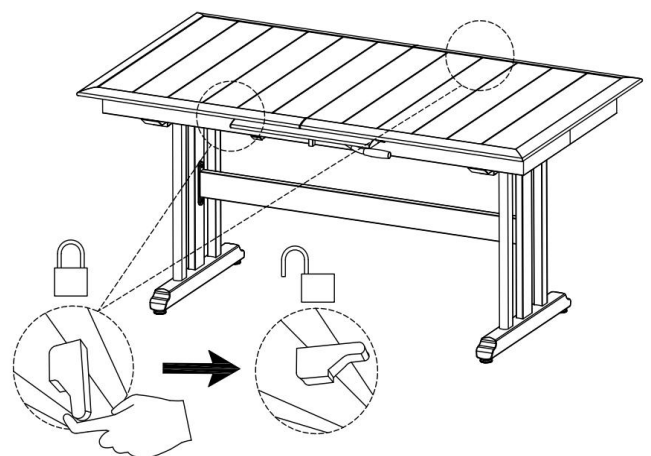

Step 4:

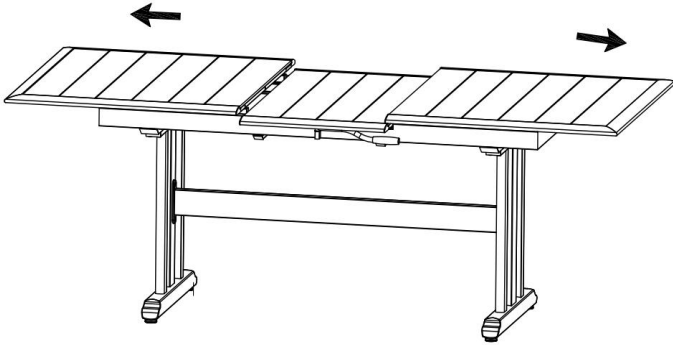

Step 5:

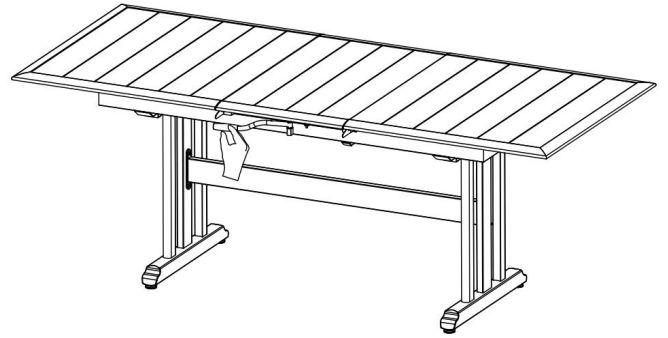

Step 6:

