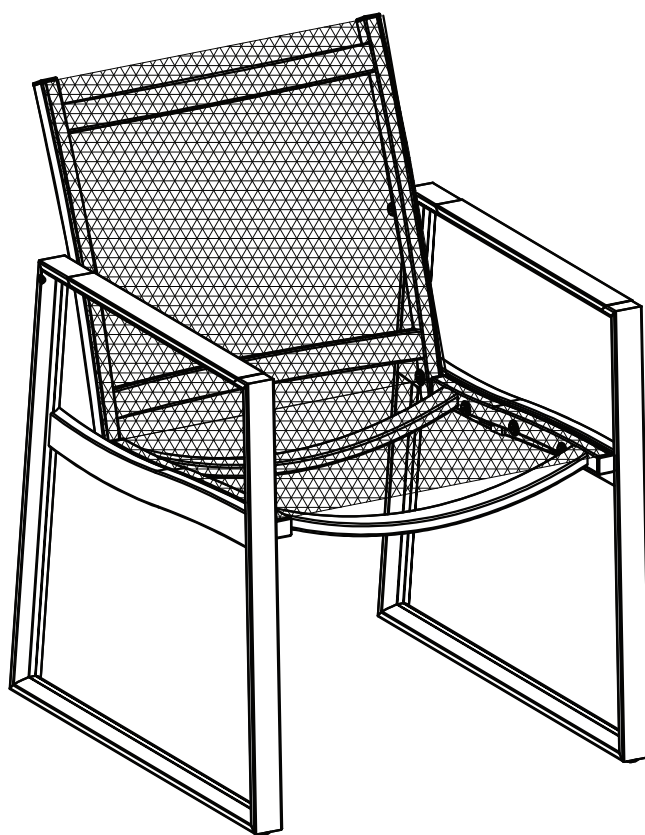


Assembly Instructions

SCIT 3175

SHOREVIEW DINING ARMCHAIR

SKU#: 74531750



Hardware Pack Location(s):


SHOREVIEW DINING ARMCHAIR, SKU# 74531750

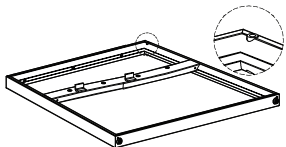
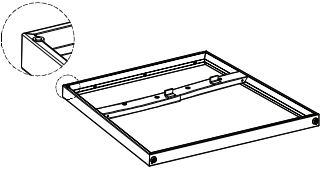

Assembly Instructions

SCIT 3175

SHOREVIEW DINING ARMCHAIR

SKU#: 74531750

Step	Code	Hardware List	QTY
1, 2	A	F-Bolt 8x40 mm, P-HEX, ST 	10 pcs
1, 2	B	Plain washer 10.5x20x2 mm, ST 	8 pcs
1, 2, 3	C	Allen key 4x98 mm 	1 pc

Step	Code	Parts List	QTY
1	D	SU-SC-LF-0847 (Leg Frame) 	1 pc
1	E	SU-SC-LF-0848 (Leg Frame) 	1 pc
1	F	SU-SC-ST-0626 (Seat Frame) 	1 pc
2	G	SU-SC-BF-0415 (Back Frame) 	1 pc

1. We recommend that you should assemble this product with the assistance of another person, this will make assembly easier and will eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until assembly is complete.
3. Please put all parts on a non-abrasive floor before assembly, and follow assembly steps to assemble your newly purchased product correctly and efficiently.

Assembly Instructions

SCIT 3175

SHOREVIEW DINING ARMCHAIR

SKU#: 74531750

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 1:

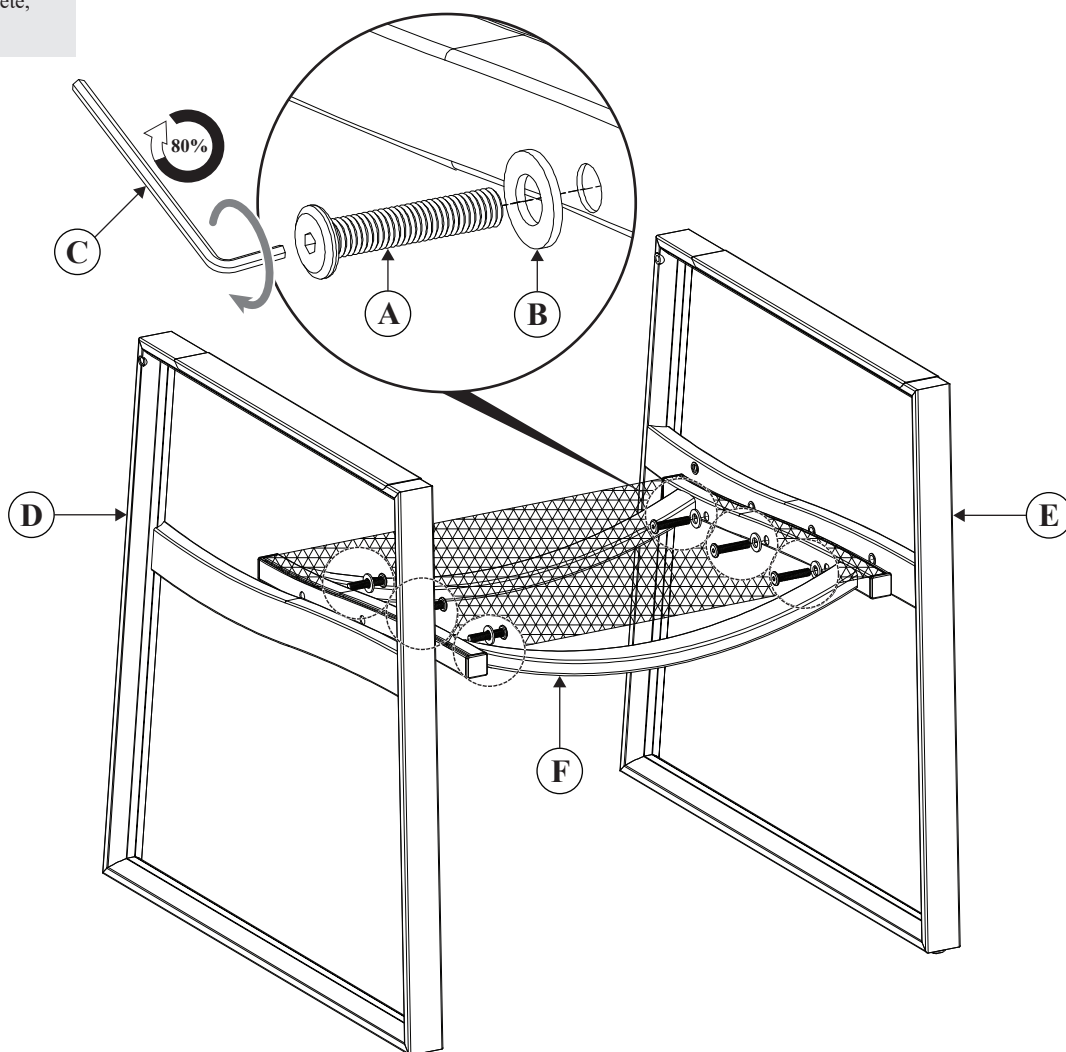
Attach the leg frame (**D**) and (**E**) to the seat frame (**F**) using the bolts (**A**) and plain washers (**B**), aligning the holes.

When assembling, tighten the bolts with the allen key (**C**).

NOTE:

Do not tighten bolts all the way until you have assembled the chair.

Once assembly is complete, tighten each bolt.



Assembly Instructions

SCIT 3175

SHOREVIEW DINING ARMCHAIR

SKU#: 74531750

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 2:

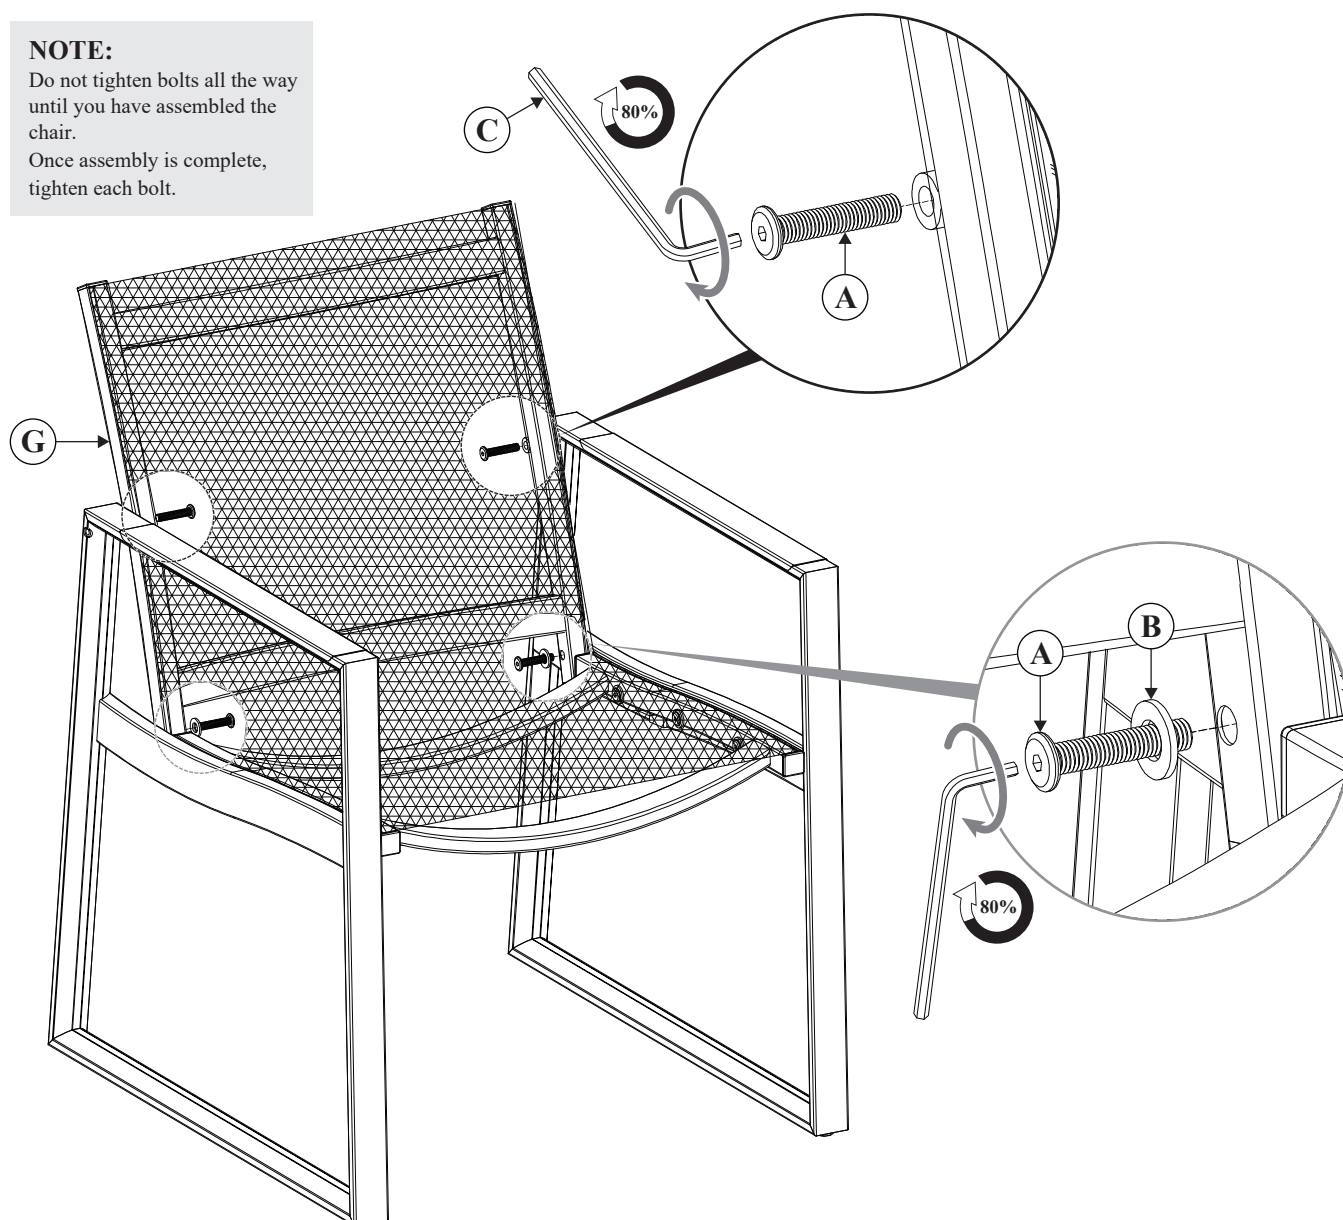
Attach the back frame (G) to the assembled frame using the bolts (A), aligning the holes. And then, connect the bolts (A) and plain washers (B), aligning the holes.

When assembling, tighten the bolts with the allen key (C).

NOTE:

Do not tighten bolts all the way until you have assembled the chair.

Once assembly is complete, tighten each bolt.



Assembly Instructions

SCIT 3175

SHOREVIEW DINING ARMCHAIR

SKU#: 74531750

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 3:

Finally, tighten the bolts with the allen key (C).

