


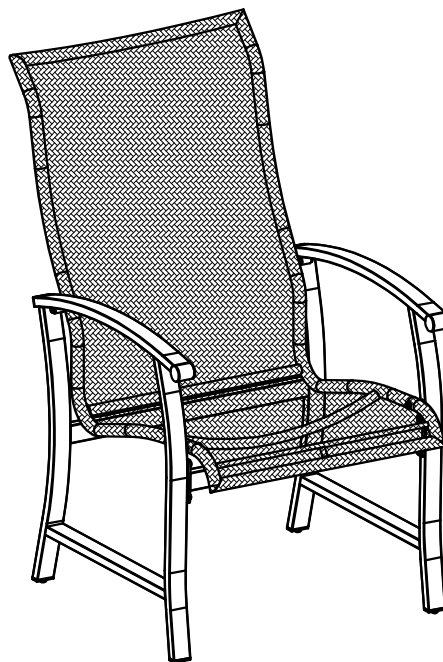
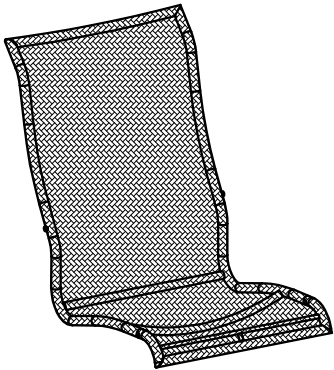
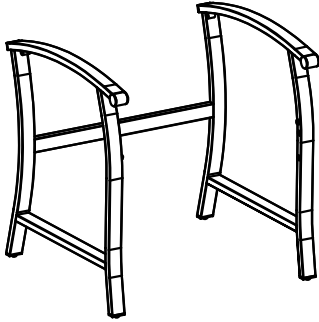



Step	Code	Hardware		Q'ty
2, 3	A	Mushroom Bolt 6.3x40, B-HEX, SS, Head Ø10 (1/4"-20)		4 pcs
1	B	Mushroom Bolt 6.3x20, B-HEX, SS, Head Ø10 (1/4"-20)		4 pcs
1, 2, 3	C	Plain Washer 6.5x16x1, SS		6 pcs
5	D	Bolt Cap 11.7 x 4.7 PL		8 pcs
1, 2, 3, 4	E	Allen key 4x98		1 pc



Step	Code	Component		Q'ty
2	F	Back frame		01 pc
1	G	Leg frame		01 pc
1	H	Support frame		01 pc


*****Caution:** Please read all instructions carefully before starting the assembly process. Always place parts on a flat surface lined with an anti-scratch fabric. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 1

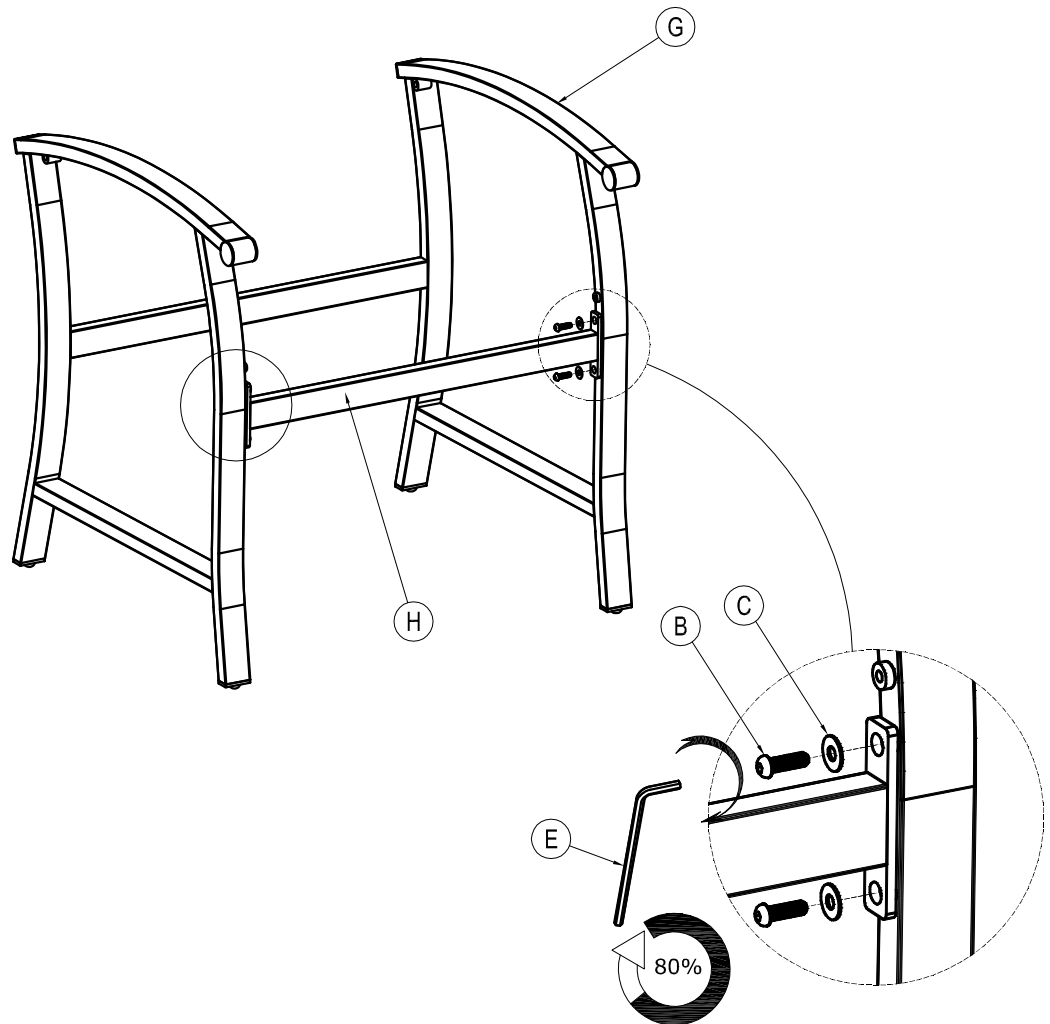


Attach the Support frame (H) to the Leg frame (G) with the Mushroom-Bolt (B), Plain Washer (C). Tighten with Allen key (E) to 80% tightness.

STEP 2

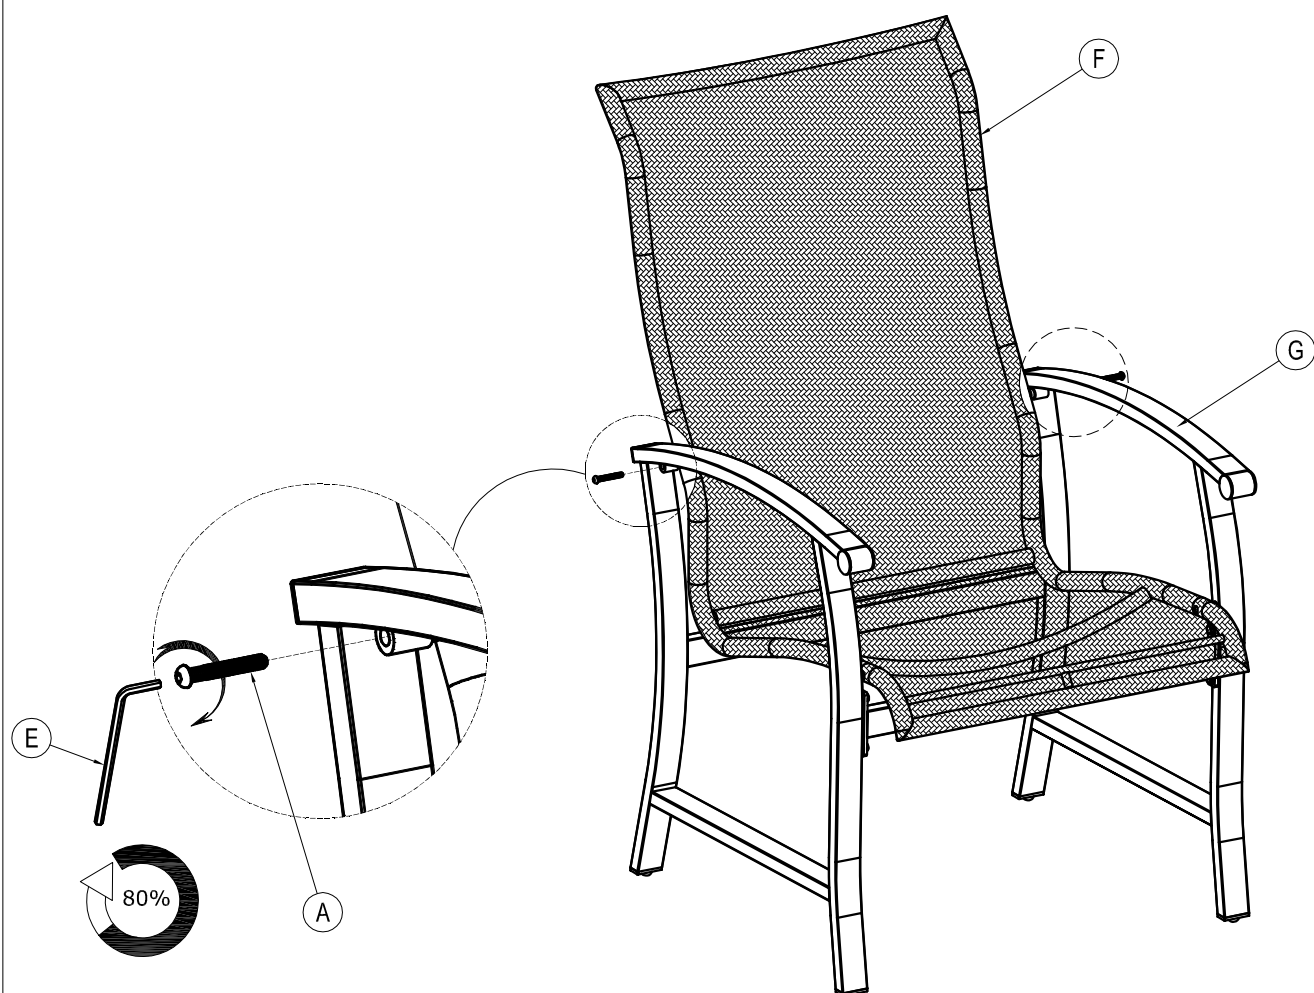


Attach the Back frame (F) to the Leg frame (G) with the Mushroom-Bolt (A). Tighten with Allen key (E) to 80% tightness.

STEP 3

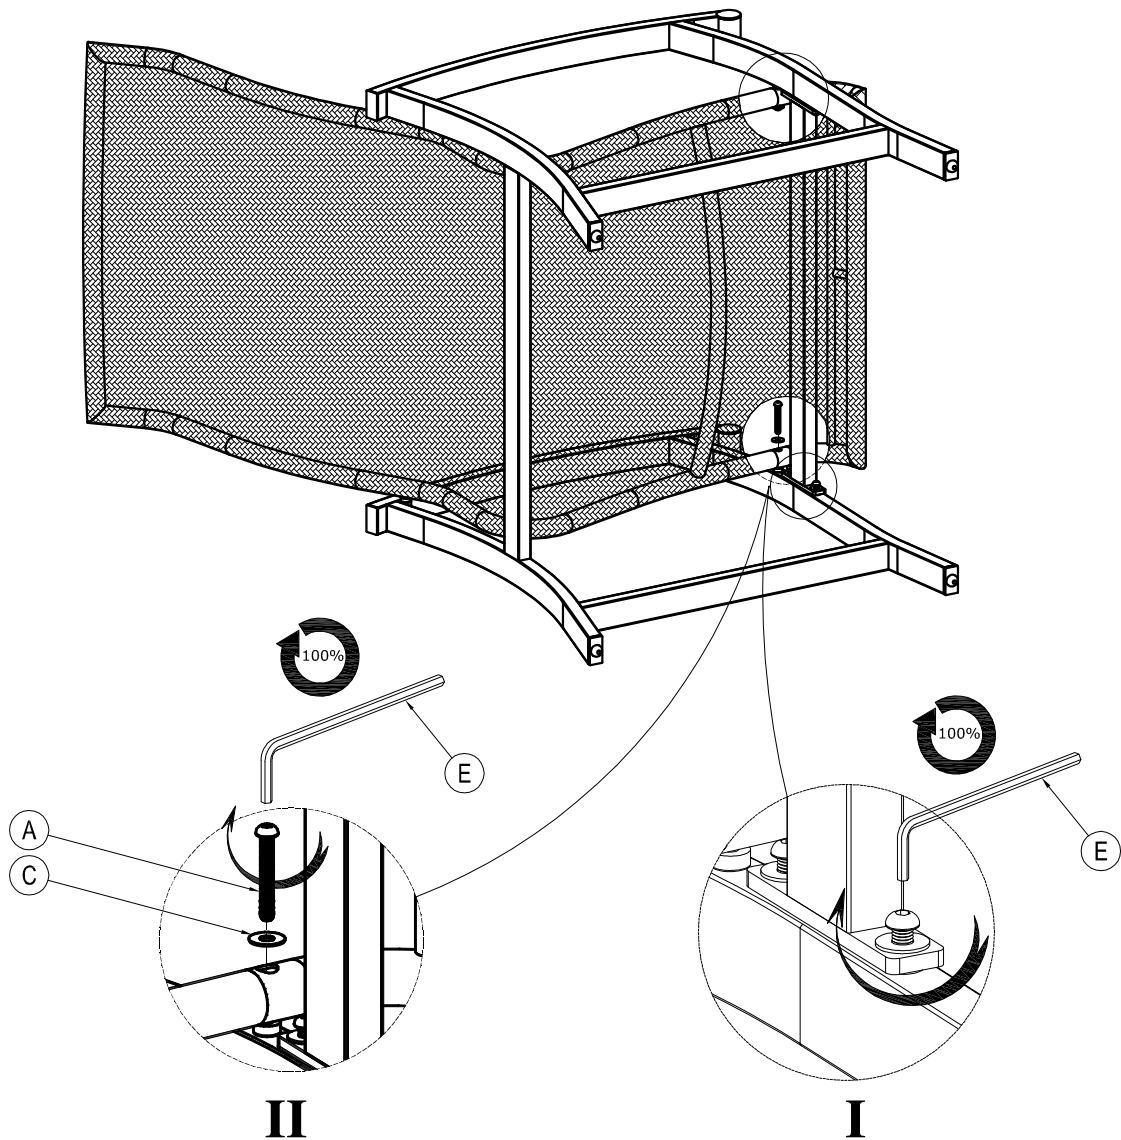


Tighten with Allen key (E) to 100% tightness (Figure I)
 Use Mushroom-Bolt (A), Plain Washer (C) to assemble the middle of leg with seating. Tighten with Allen key (E) to 100% tightness (Figure II)

STEP 4

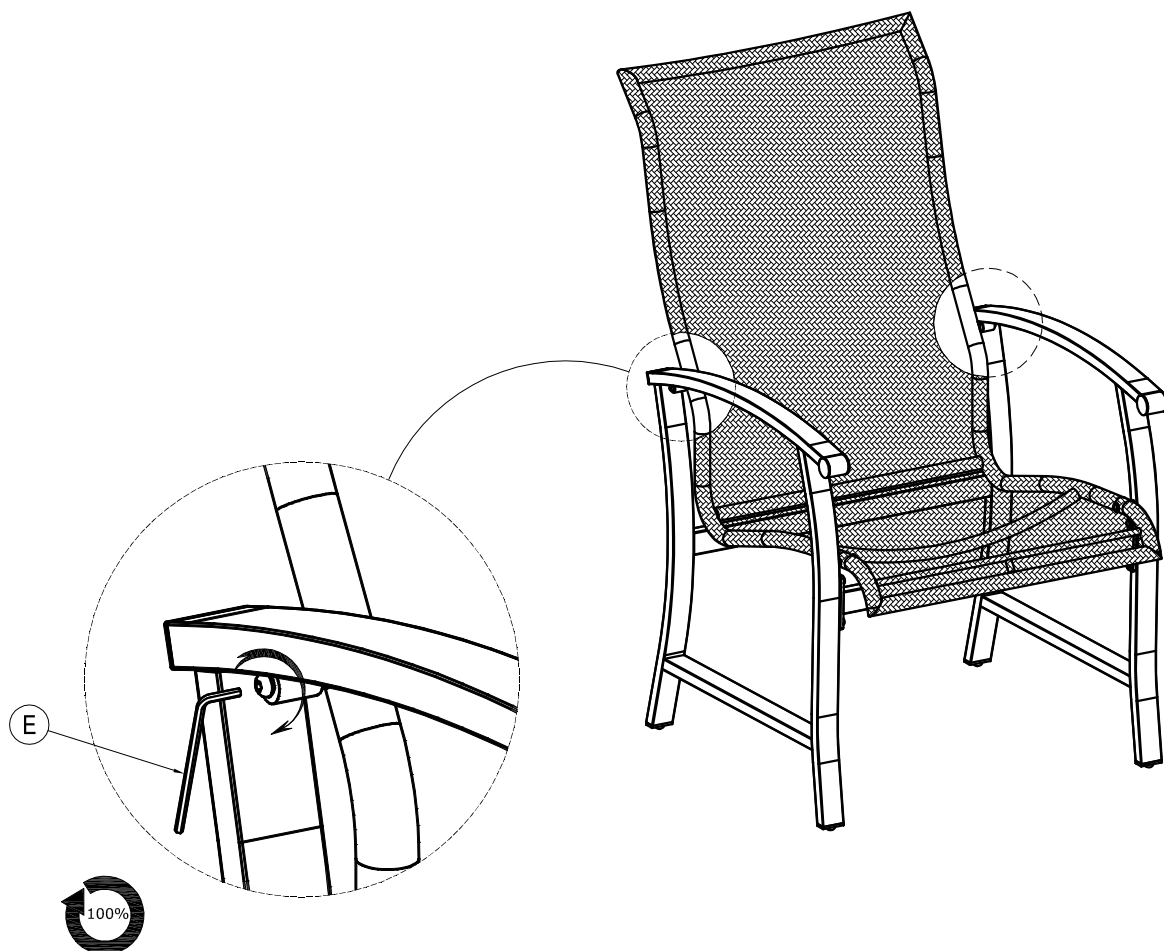

Tighten 100% tightness all positions

STEP 5

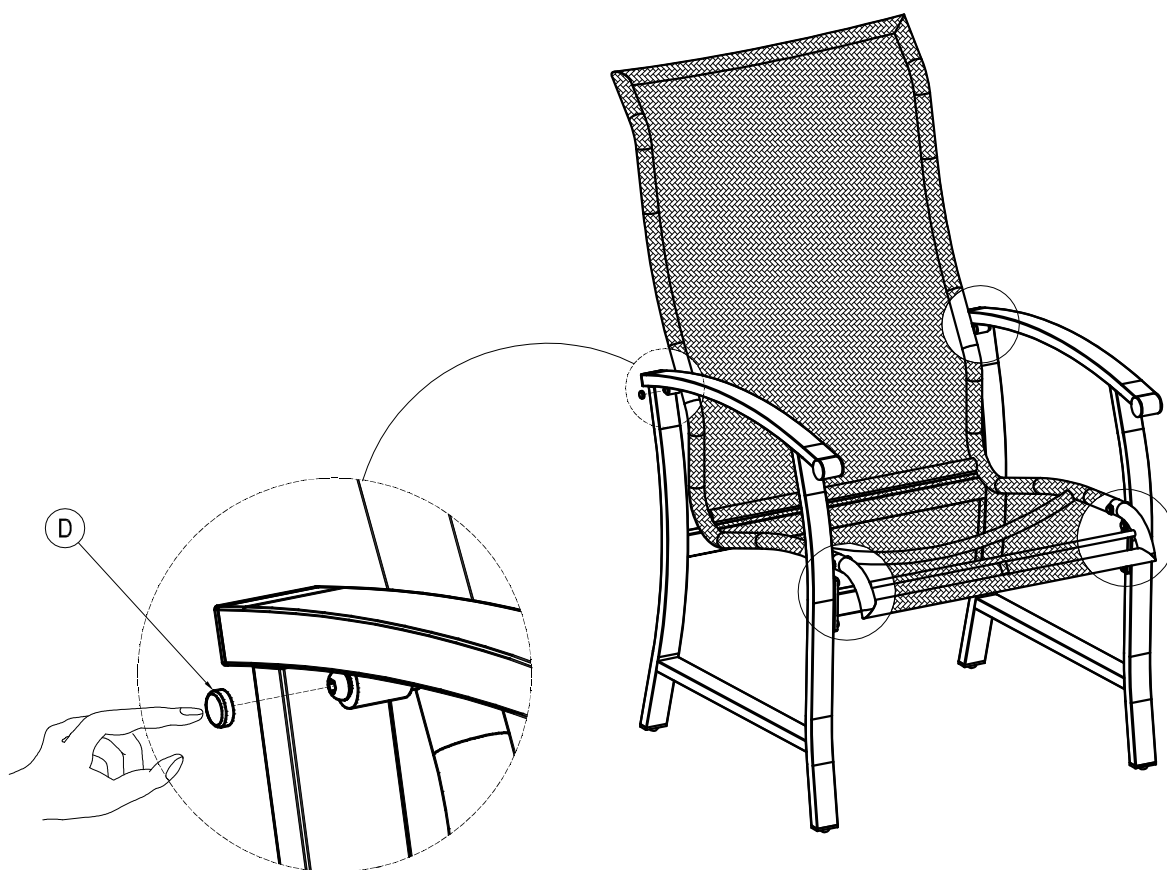

Attach Bolt Cap (D) on the Mushroom- Bolt.
Assembling Completed