


NO.	PARTS LIST		Q'TY
A	BACK FRAME		1PC
B	LEG FRAME (LEFT)		1PC
C	LEG FRAME (RIGHT)		1PC
D	SEAT FRAME		1PC

NO.	HARDWARES DESCRIPTION	IMAGE	QTY
H1	BOLT M6x70 MM		4 PCS
	SPRING WASHER M6x11		
	FLAT WASHER M6x14		
H2	BOLT M6x40 MM		4 PCS
	SPRING WASHER M6x11		
	FLAT WASHER M6x14		
H3	ALLEN KEY M4		1 PC
H4	WOOD PLUG		2 PCS

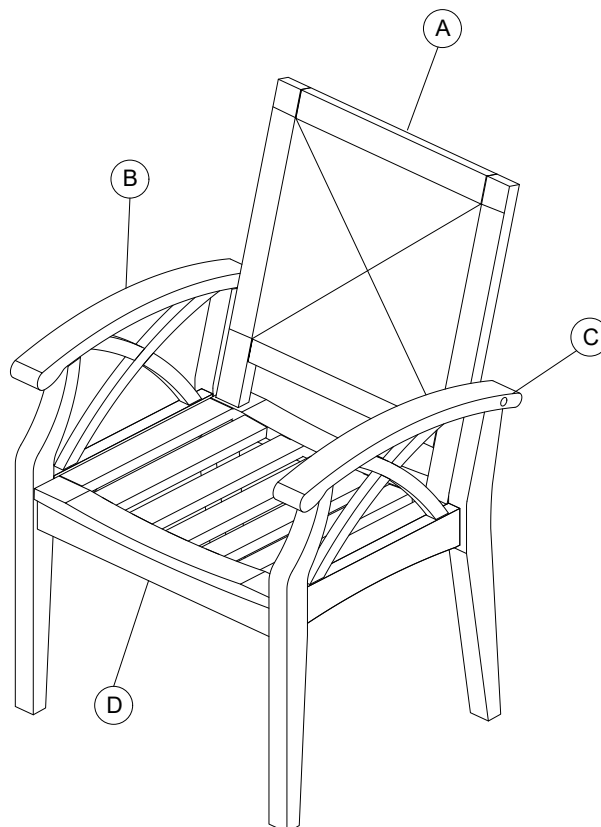


Hardware Pack Location(s): Bottom of the Arm chair that the bases are attached to.

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two person assembly is recommended in order to prevent personal injury and damaged parts .


***DO NOT tighten all the bolts until the assembly is completed

STEP1:

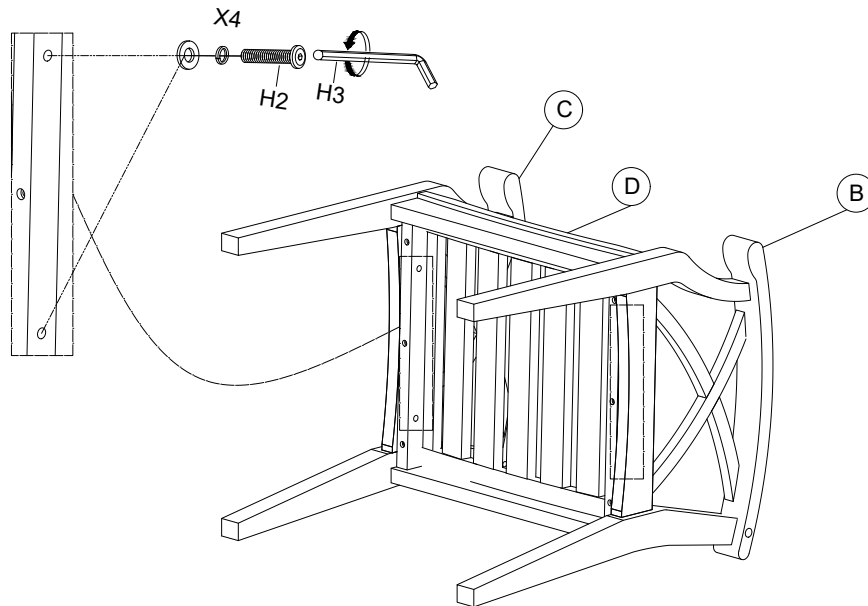

Attach leg frame (left) (B) and leg frame (right) (C) into seat frame (D) by bolt, spring washer, flat washer. Tighten bolts by allen key.

STEP2:

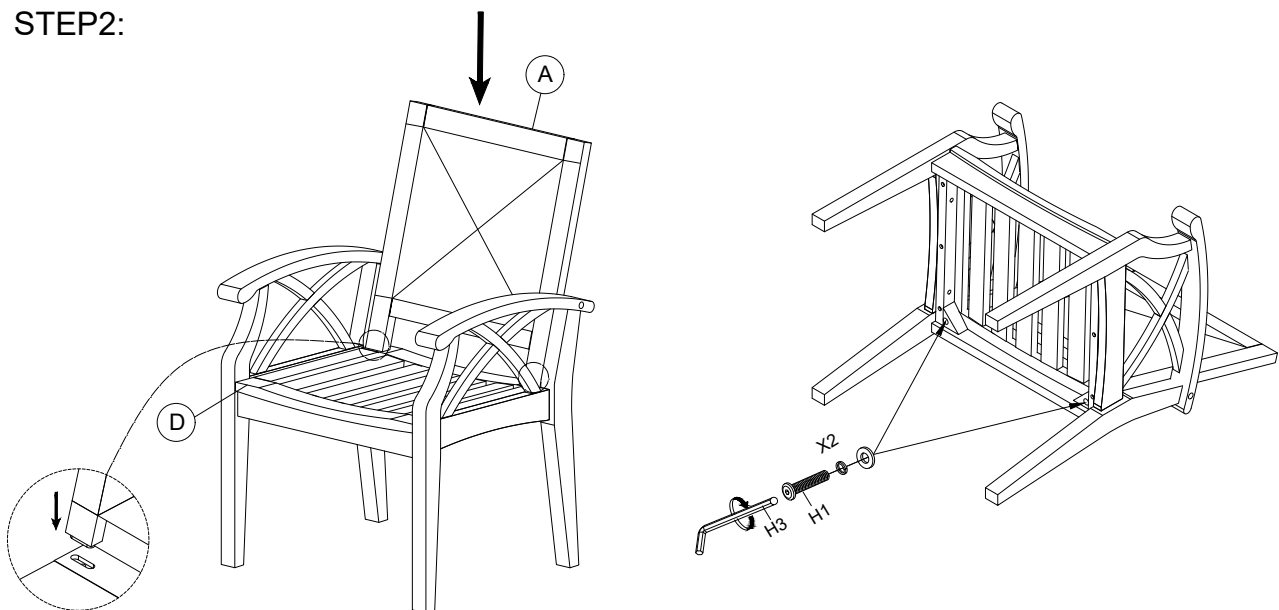


Attach back frame (A) into seat frame (D) by bolt, spring washer, flat washer. Tighten bolts by allen key.

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two person assembly is recommended in order to prevent personal injury and damaged parts .


***DO NOT tighten all the bolts until the assembly is completed

STEP3:

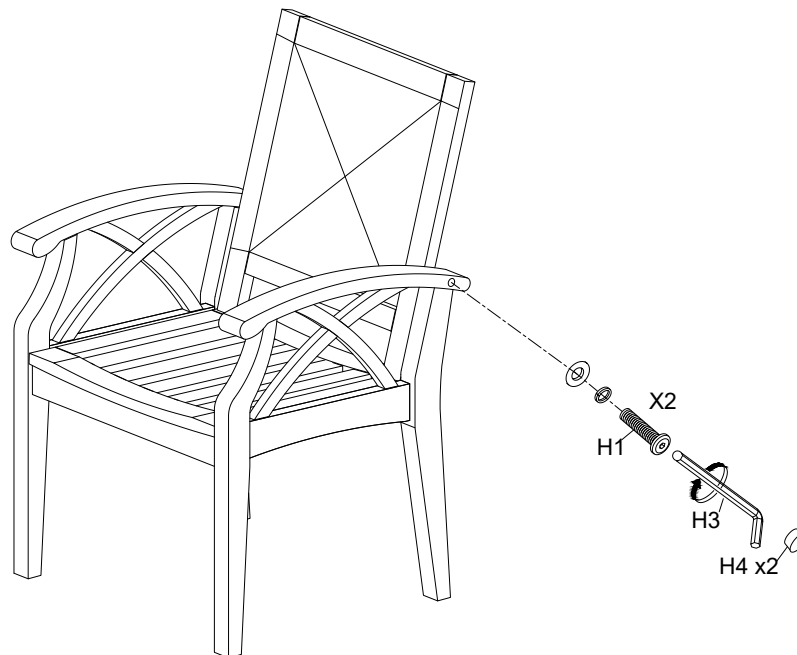

Tighten bolt, spring washer, flat washer by allen key and assemble wood plug.

STEP4:

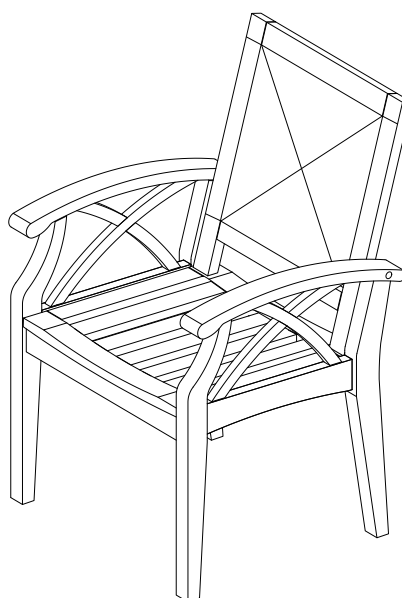

Assembly completed.