





Step	Code	Hardware		Q'ty
1	A	F-Bolt 6x20, P-HEX, SS		16 pcs
3	B	Umbrella Hole Plug Ø49.5x6.5, PL		01 pc
1	C	Allen key 4x98		01 pc

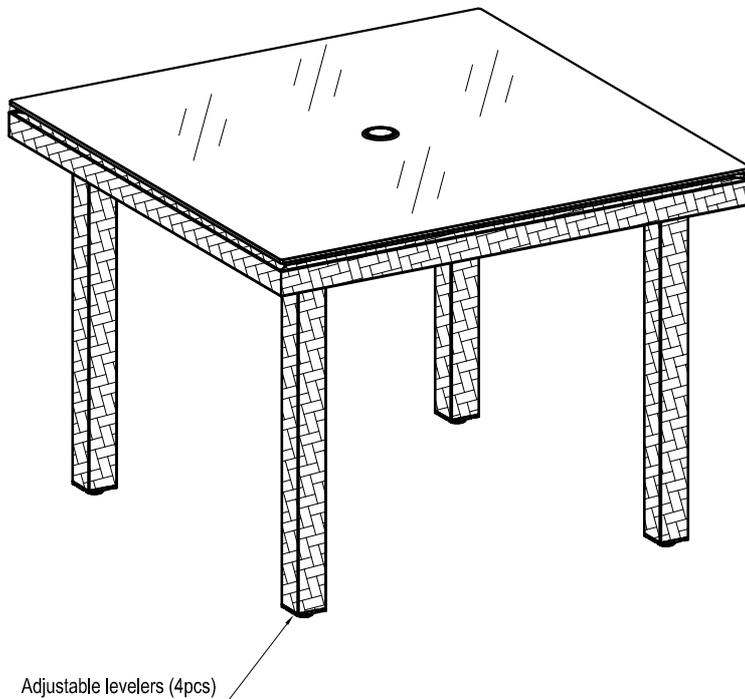

Assembly Instructions


VMDJ 1215 SIESTA KEY 42" SQ D/TBL W/GLASS AND
UMB HOLE
SKU# 74912152

Version #1 - 2024/10/10

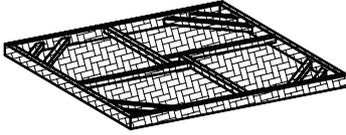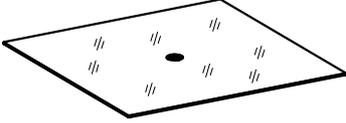Step	Code	Component		Q'ty
1	D	Main frame		01 pc
1	E	Leg frame		04 pcs
2	F	Glass top		01 pc


***Caution: Please read all instructions carefully before starting the assembly process. Always place parts on a flat surface lined with an anti-scratch fabric. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 1

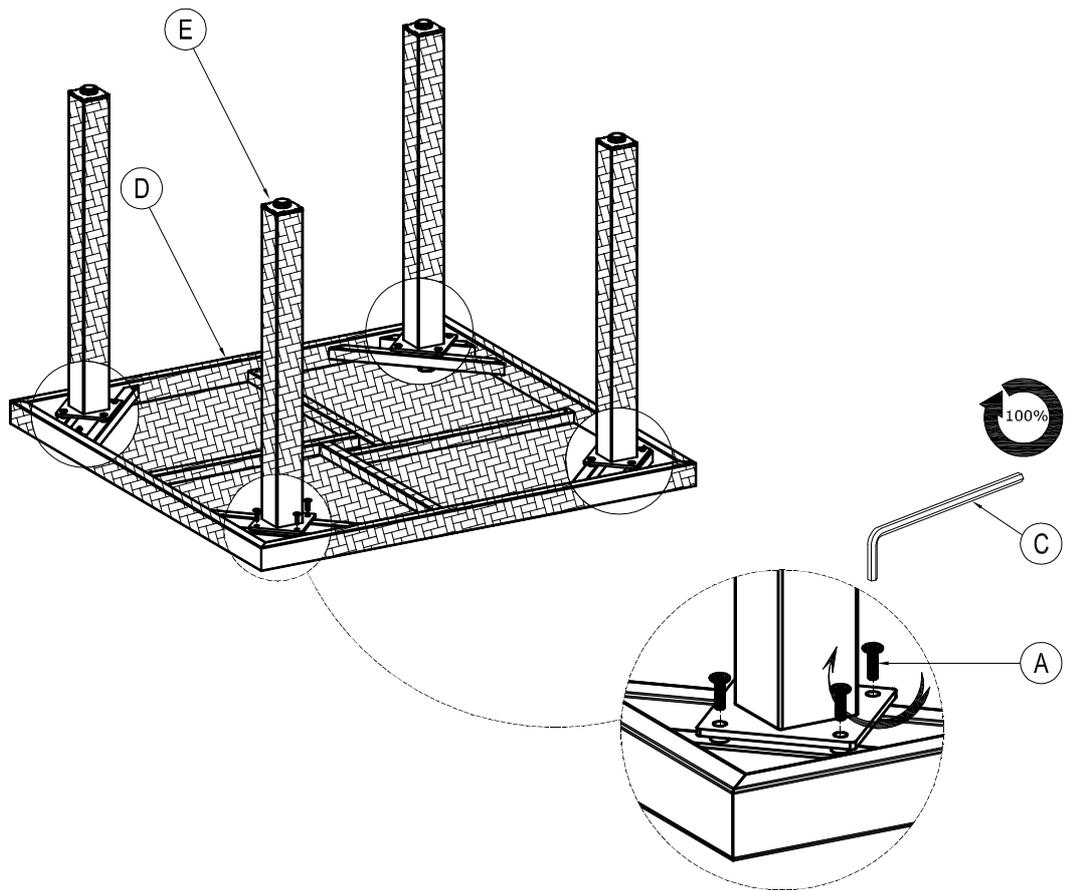


Attach the leg frame (E) to the below of the main frame (D) with the F-Bolt (A). Tighten with Allen key (C) to 100% tightness.

STEP 2

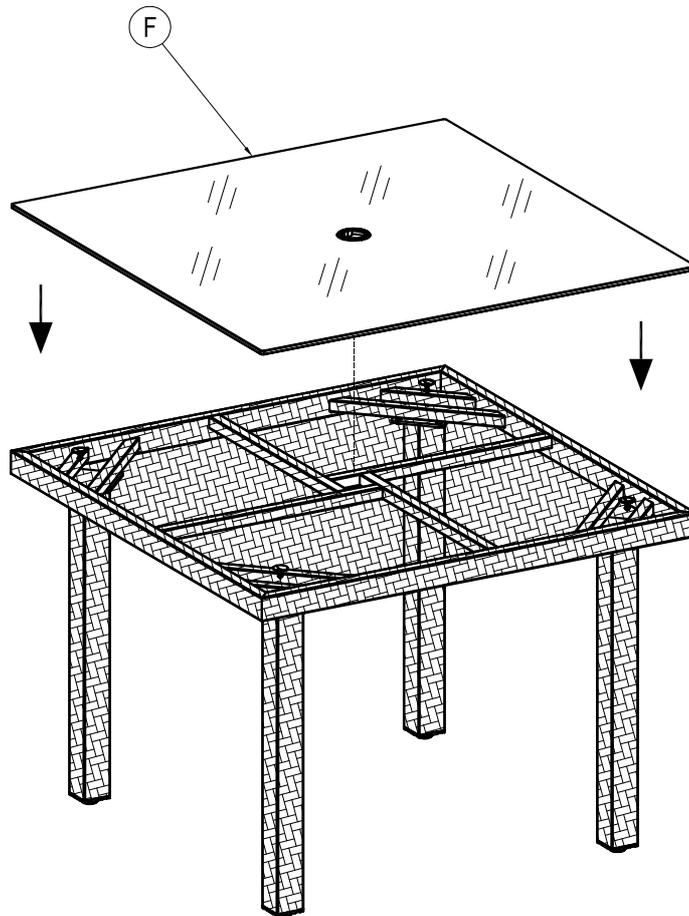

Put the glass top (F) is on the main frame (D)

STEP 3

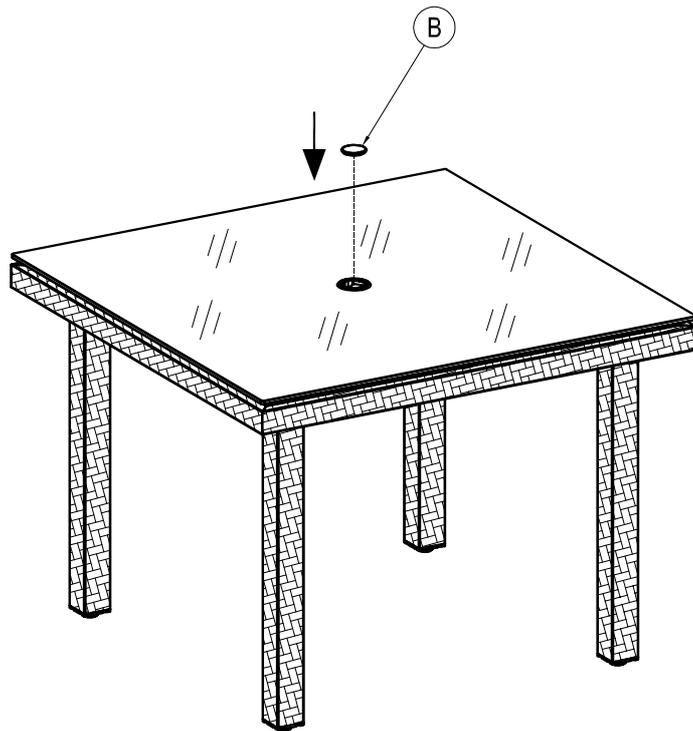

Attach the Umbrella Hole Plug (B) to the glass top (F).
Assembling Completed.