


Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below

Caution: Loosely pre-assemble all the bolts first. Do not fully turn until all bolts are inserted into the proper holes.




Step 1: Place the Right/Left Front leg(Part A&B) on a clean, soft surface as a blanket or carpet. Assemble the Right/Left Armrest(Part C&D) to the legs by Bolt(M6*45)(Part J) and tighten with Allen key (Part L).


Step 2: Assemble the Seat(Part G) to Right/Left Front Legs(Part A&B) by Bolt(M6*38)(Part I) and tighten with Allen key (Part L).

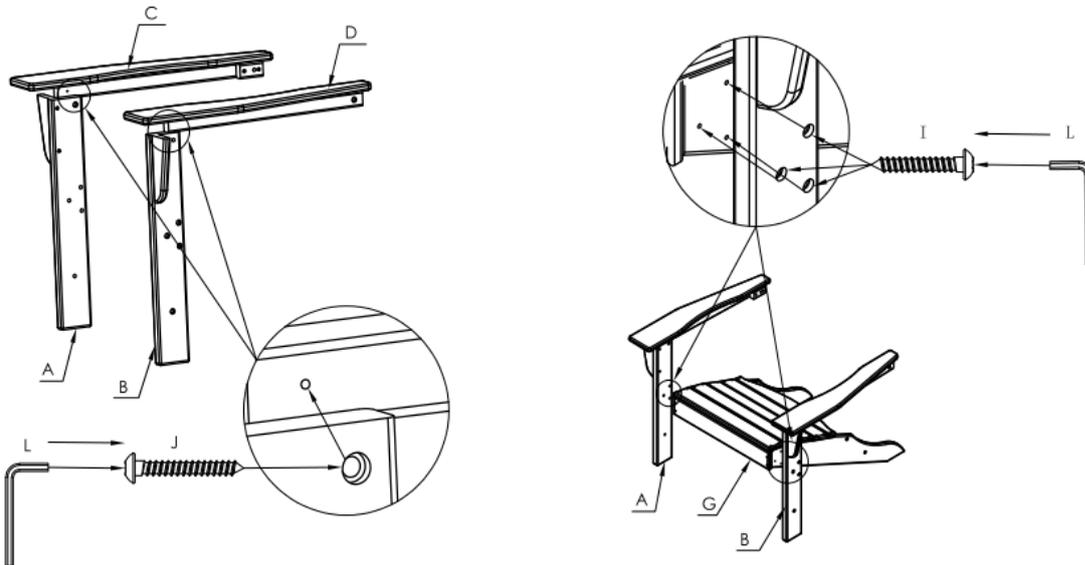


Step 3: Assemble Front Bar(Part E) to the Front Legs(Part A&B) by Bolt(M6*45)(Part J) and tighten with Allen key (Part L).

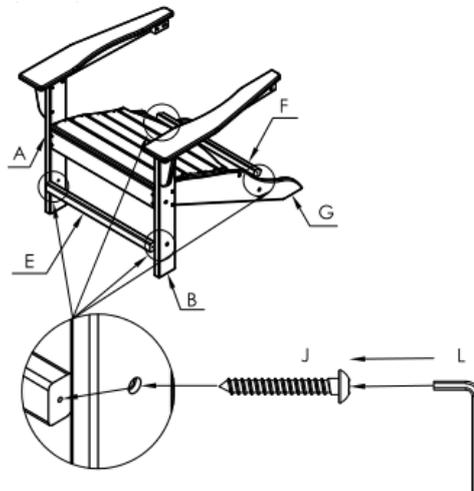

Step 4: Assemble the Back(Part H) to the Seat by Bolt(M6*45)(Part J),assemble the Back to the Armrests by Bolt(M6*65),and tighten them with Allen key (Part L).

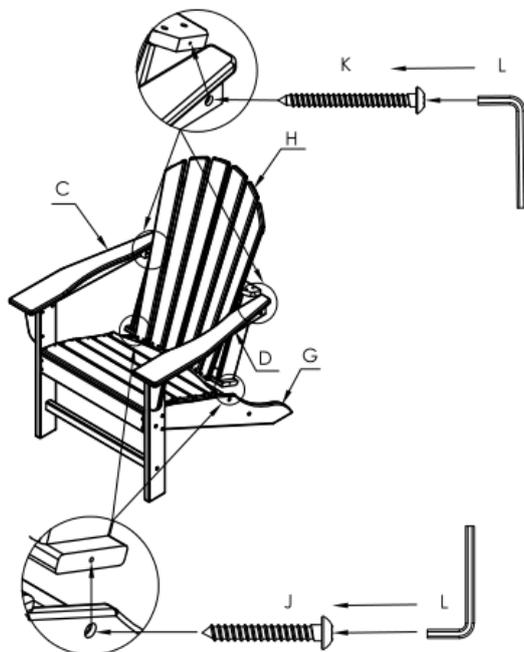

Step 5: After tightening all bolts, your product is ready for use.

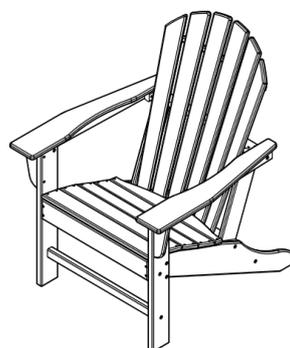

CAUTION

Assemble all the bolts by Allen Key according to the instruction.

Do not use electric tools in order to avoid melting HDPE materials at too high temperature.

PARTS LIST

NO.:	PIC	DESC	QTY
A		Right Front Leg	1pc
B		Left Front Leg	1pc
C		Right Armrest	1pc
D		Left Armrest	1pc
E		Front Bar	1pc
F		Back Bar	1pc

PARTS LIST

NO.:	PIC	DESC	QTY
G		Seat	1pc
H		Back	1pc
I		Bolt(M6*38)	6 pcs
J		Bolt(M6*45)	8 pcs
K		Bolt(M6*65)	2 pcs
L		Allen key	1pc

Periodically check and make sure all bolts are fully tightened.