











ASSEMBLY INSTRUCTION


PTIM PATMOS SQUARE DINING TABLE GRAY SKU 75074775
PTIM PATMOS SQUARE DINING TABLE BROWN SKU 75074787

Thanks for your purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List Below.

HARDWARE LIST	NO	PICTURE	DESCRIPTION	DIMENSION	QTY
	1		Hexa Bolt	M6 X 35mm	8 pcs
	2		Lock Washer	Ø 13 X 1mm	8 pcs
	3		Flat Washer	Ø 13 X 1mm	8 pcs
	4		Wrench	10 mm	1 pc
	5		Glass Tab	Ø 3 cm	4 pc
PART LIST	NO	DESCRIPTION			QTY
	1		Table Top	1	
	2		Table Leg	4	
	3		Glass Table Top	1	


STEP 1

PLACE THE TABLE LEGS ACCORDING TO THE SIGNS A, B, C, OR D

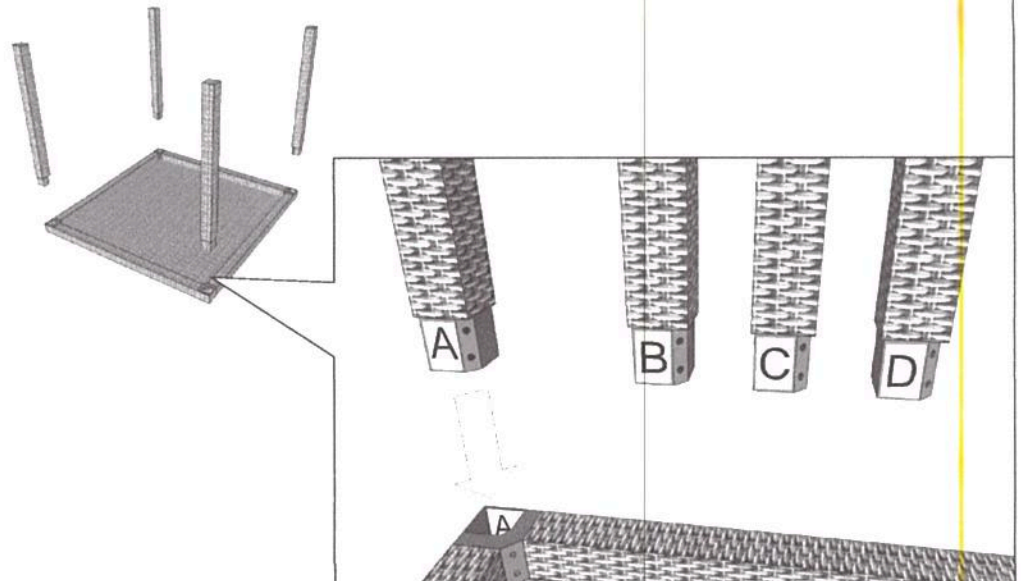




STEP 2

PUT FLAT & LOCK WASHER INTO THE BOLT, THEN PUT IT IN THE LEG HOLE & TIGHTEN IT WITH A WRENCH

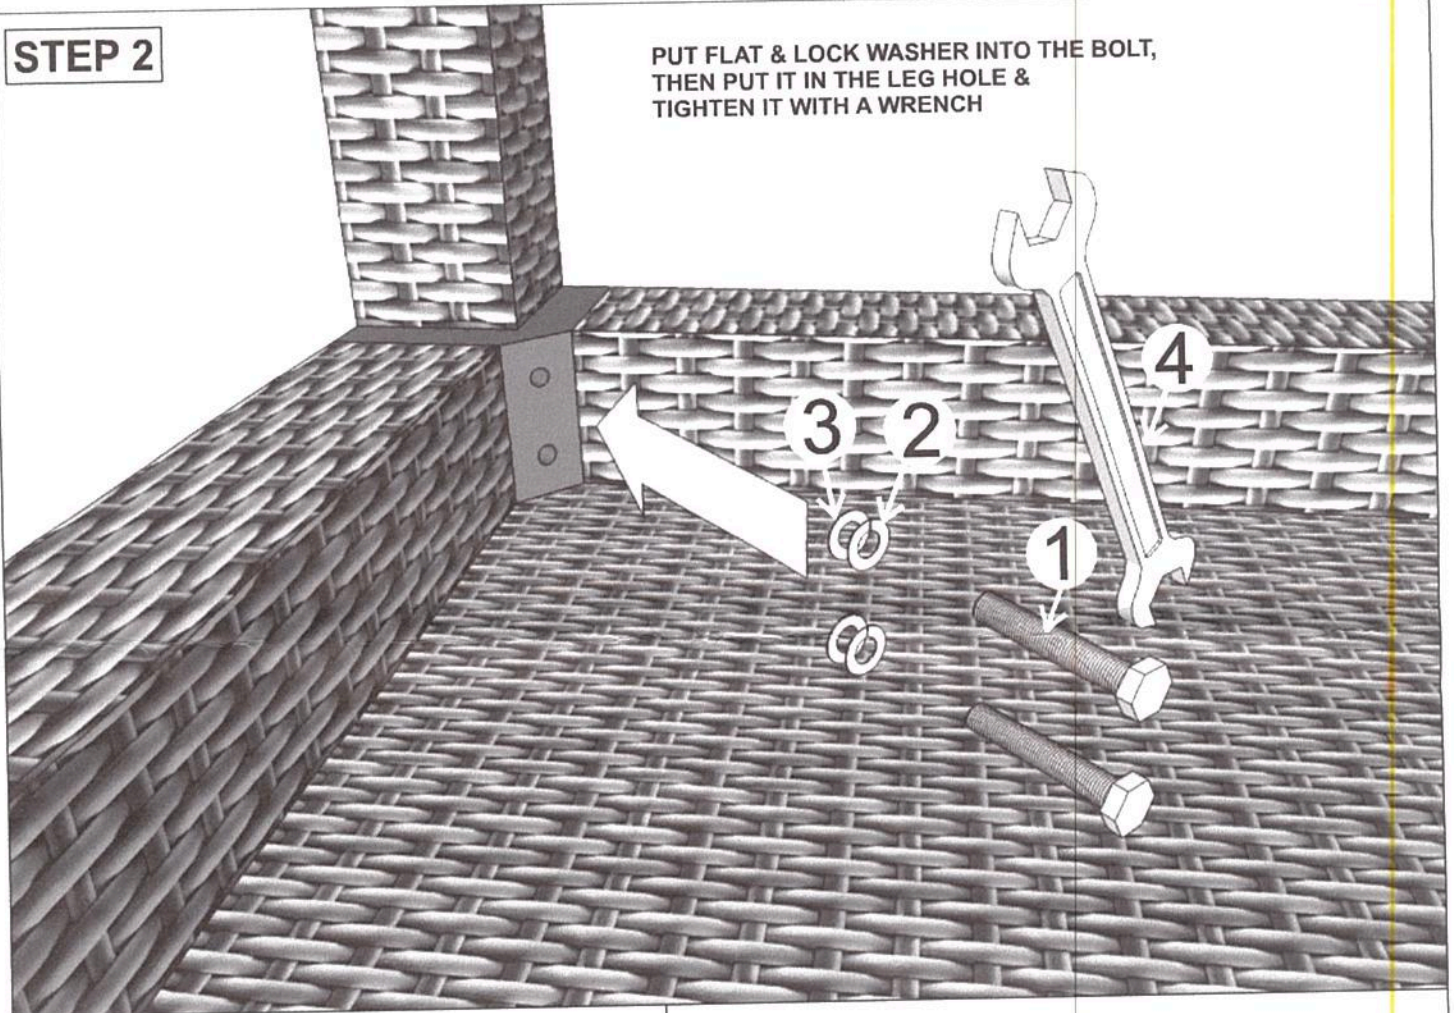


STEP 3

LEG ADJUSTER

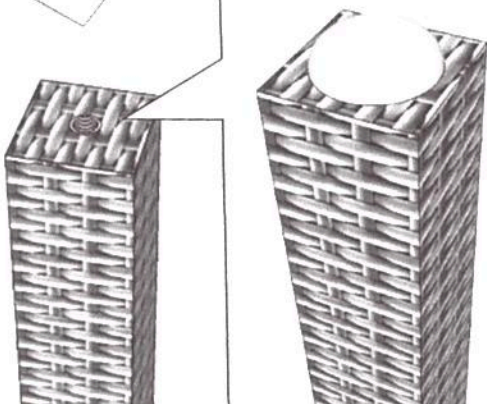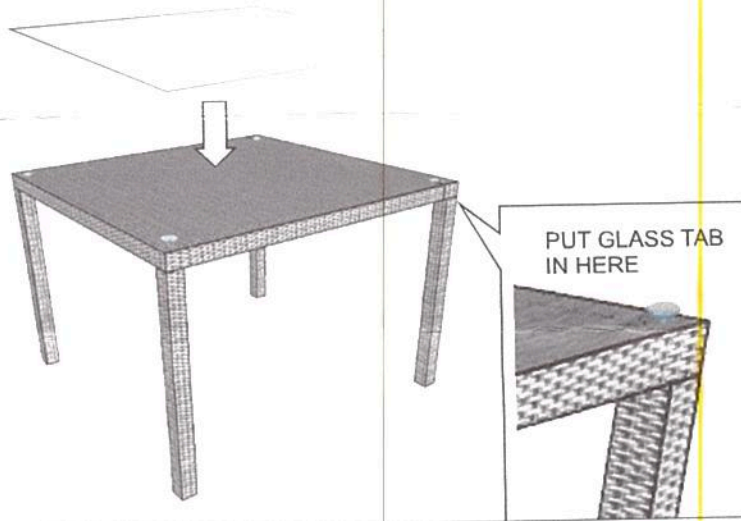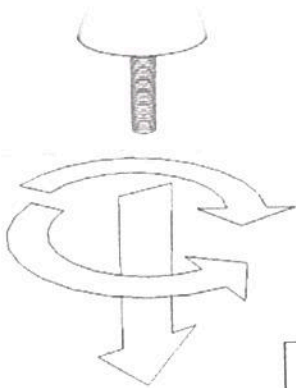

LEVEL ME LABEL

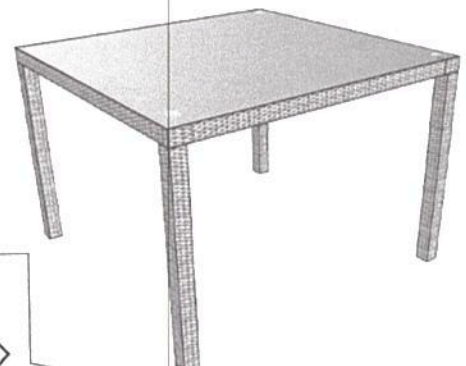











ASSEMBLY INSTRUCTION


PTIM PATMOS SQUARE DINING TABLE GRAY SKU 75074775
PTIM PATMOS SQUARE DINING TABLE BROWN SKU 75074787

Thanks for your purchasing this quality product. Be sure to check all packing material carefully for small parts, wich may have come loose inside the corton during shipment. Identify and count all parts and compare with the Hardware List Bellow.

HARDWARE LIST	NO	PICTURE	DESCRIPTION	DIMENSION	QTY
	1		Hexa Bolt	M6 X 35mm	8 pcs
	2		Lock Washer	Ø 13 X 1mm	8 pcs
	3		Flat Washer	Ø 13 X 1mm	8 pcs
	4		Wrench	10 mm	1 pc
	5		Glass Tab	Ø 3 cm	4 pc
PART LIST	NO	DESCRIPTION			QTY
	1		Table Top		1
	2		Table Leg		4
	3		Glass Table Top		1


STEP 1

PLACE THE TABLE LEGS ACCORDING TO THE SIGNS
A, B, C, OR D

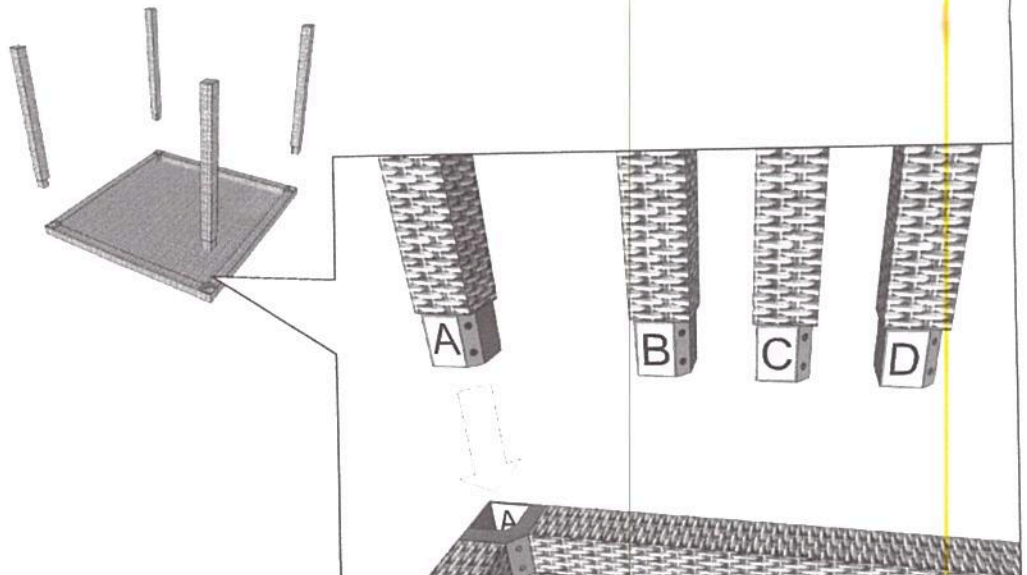



STEP 2

PUT FLAT & LOCK WASHER INTO THE BOLT, THEN PUT IT IN THE LEG HOLE & TIGHTEN IT WITH A WRENCH


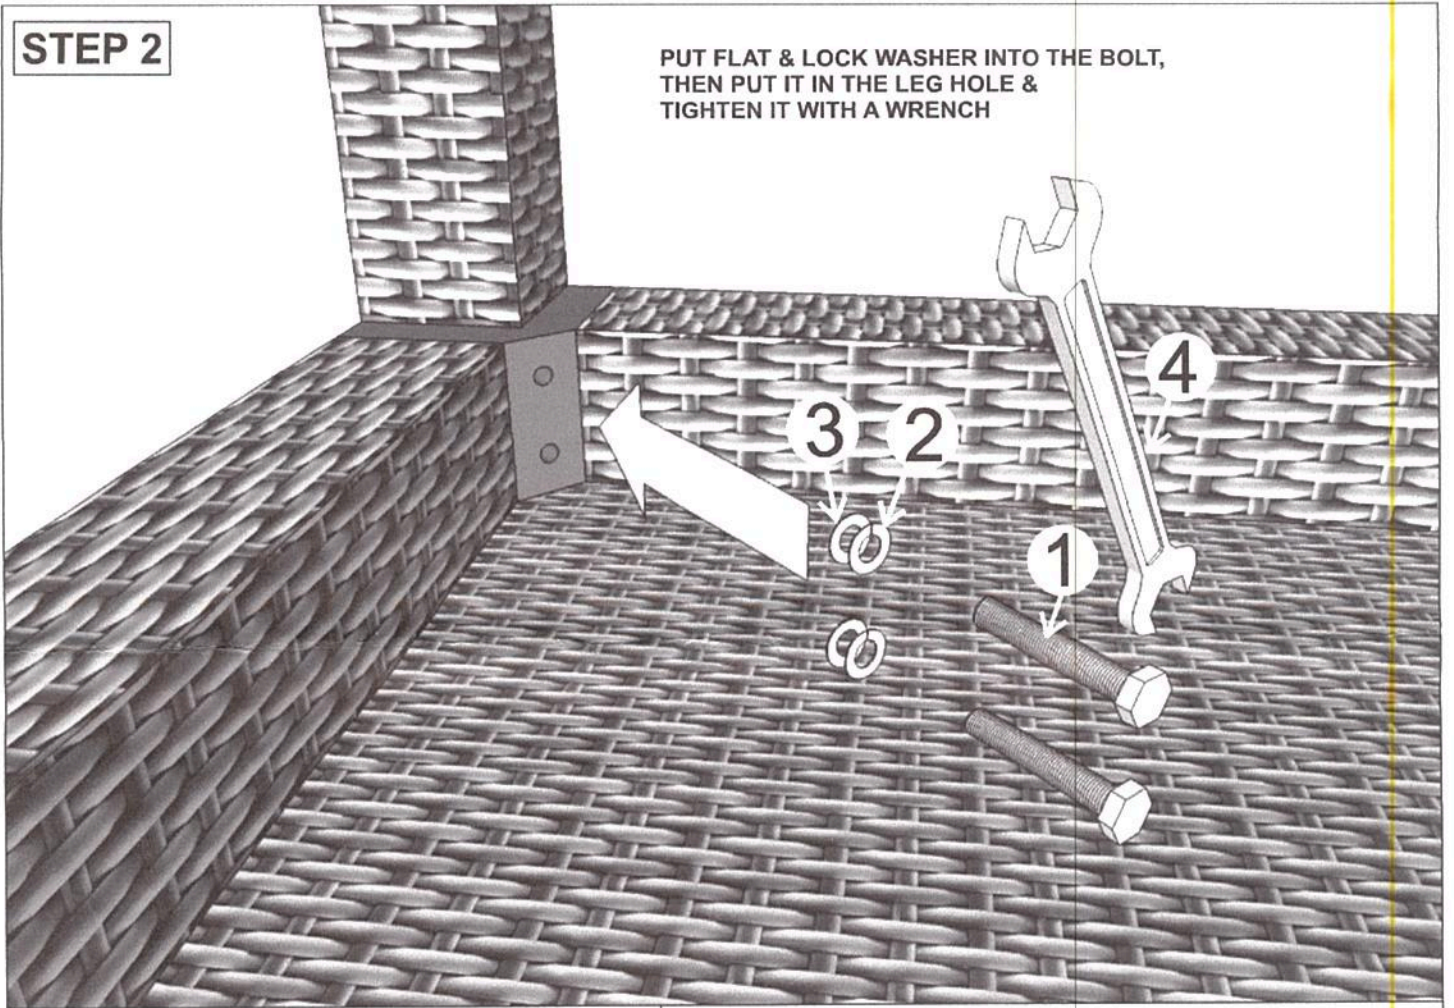


STEP 3

LEG ADJUSTER

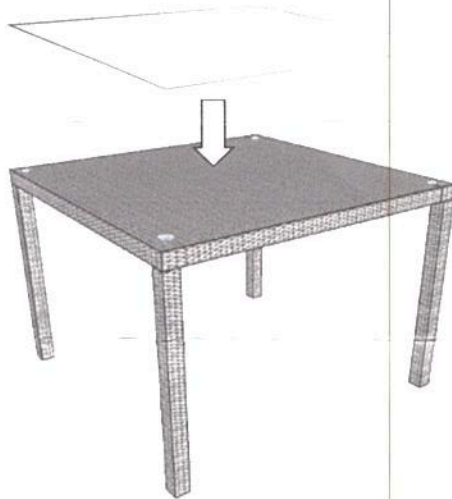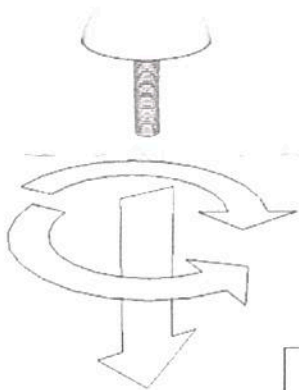

PUT GLASS TAB IN HERE

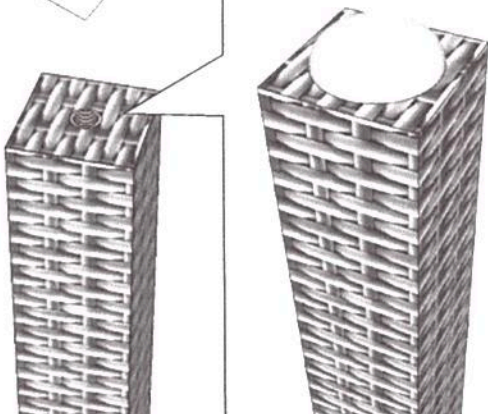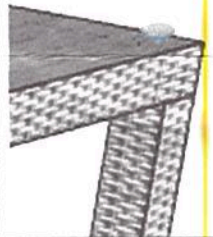

LEVEL ME LABEL

