



ROOMS TO GO PATIO™

MANUFACTURED BY VMDJ FOR ROOMS TO GO







Assembly Instructions


VMDJ 5432 LAKE BRZ 48" RD D/TBL

W/UMB HOLE

SKU# 75354325

Version #1 - 2024/10/21

Step	Code	Hardware		Q'ty
1,2	A	Mushroom Bolt 6.3x30, B-HEX, SS, Head Ø10 (1/4"-20)		04 pcs
2	B	Mushroom Bolt 6.3x20, B-HEX, SS, Head Ø10 (1/4"-20)		08 pcs
1,2	C	Plain Washer 6.5x16x1, SS		12 pcs
3	D	Bolt Cap 11.7 x 4.7 PL		12 pcs
4	E	Umbrella Hole Plug 56x17xt(3), AL		01 pc
1,2,3	F	Allen key 4x98		01 pc

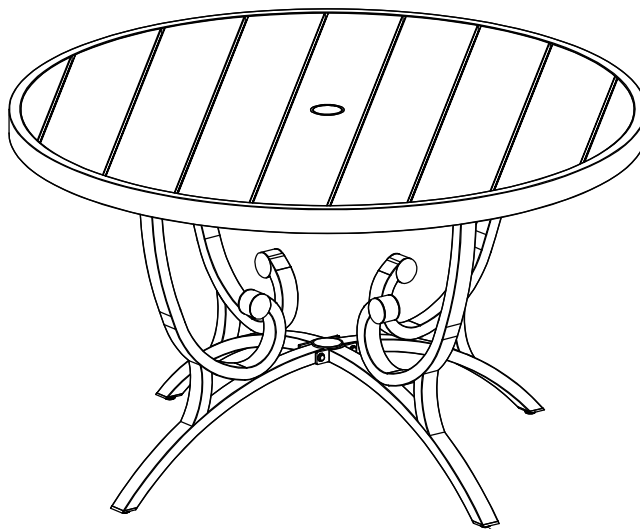

Adjustable levelers (4pcs)

Hardware Pack Location (s):

LAKE BRZ 48" RD D/TBL W/UMBRELLA HOLE, SKU# 75354325




Assembly Instructions

VMDJ 5432 LAKE BRZ 48" RD D/TBL

W/UMB HOLE


SKU# 75354325

Version #1 - 2024/10/21

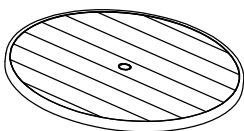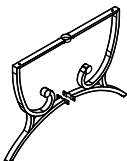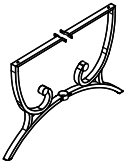Step	Code	Component		Q'ty
1	G	Table Top Frame		01 pc
1	H	Leg Frame 1		01 pc
2	I	Leg Frame 2		01 pc

*****Caution:** Please read all instructions carefully before starting the assembly process. Always place parts on a flat surface lined with an anti-scratch fabric. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.


STEP 1

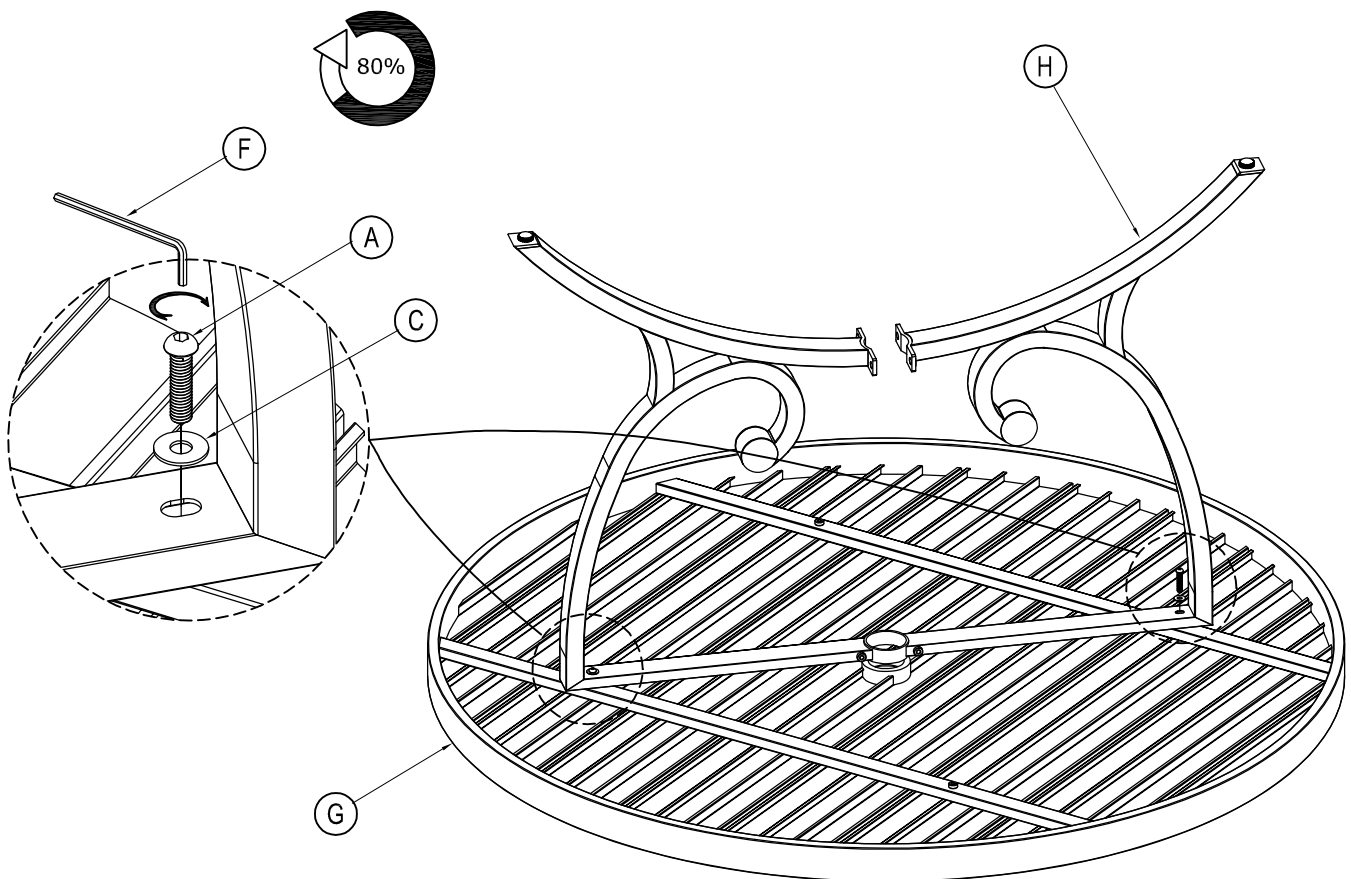

Attach the Leg Frame (H) to the below of the Table Top Frame (G) with the Mushroom-Bolt (A), Plain Washer (C).
Tighten with Allen key (F) to 80% tightness




STEP 2

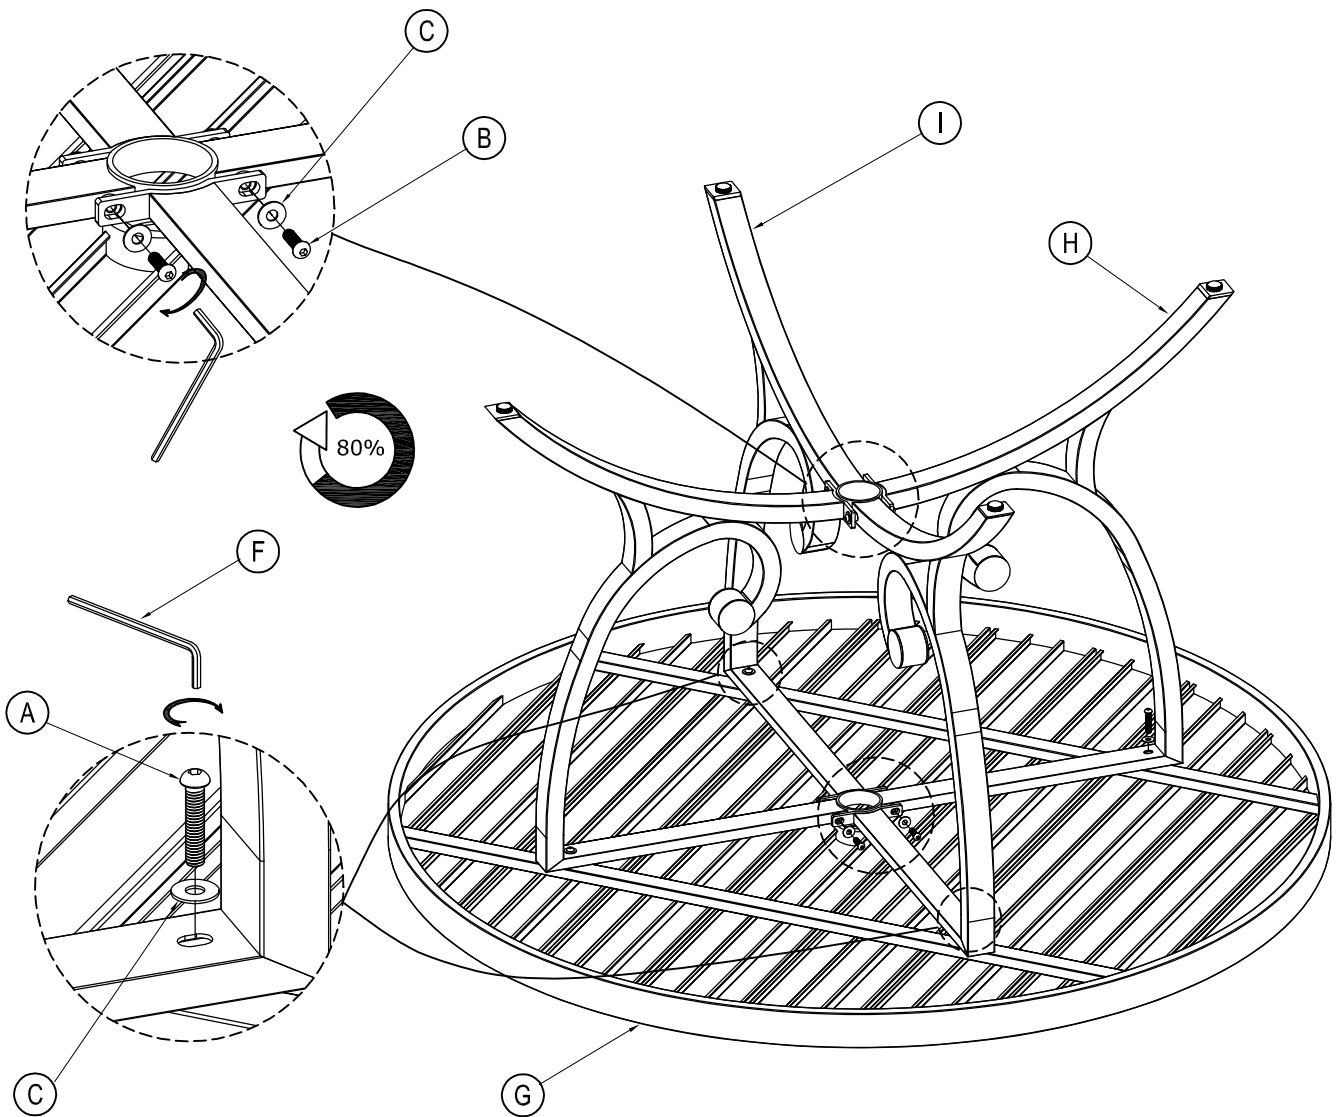


Attach the Leg Frame (I) to the Leg Frame (H) with the Mushroom-Bolt (B), Plain Washer (C). Similarly, attach the Leg Frame (I) to the Table Top Frame (G) with the Mushroom-Bolt (A), Plain Washer (C). Tighten with Allen key (F) to 80% tightness.

STEP 3

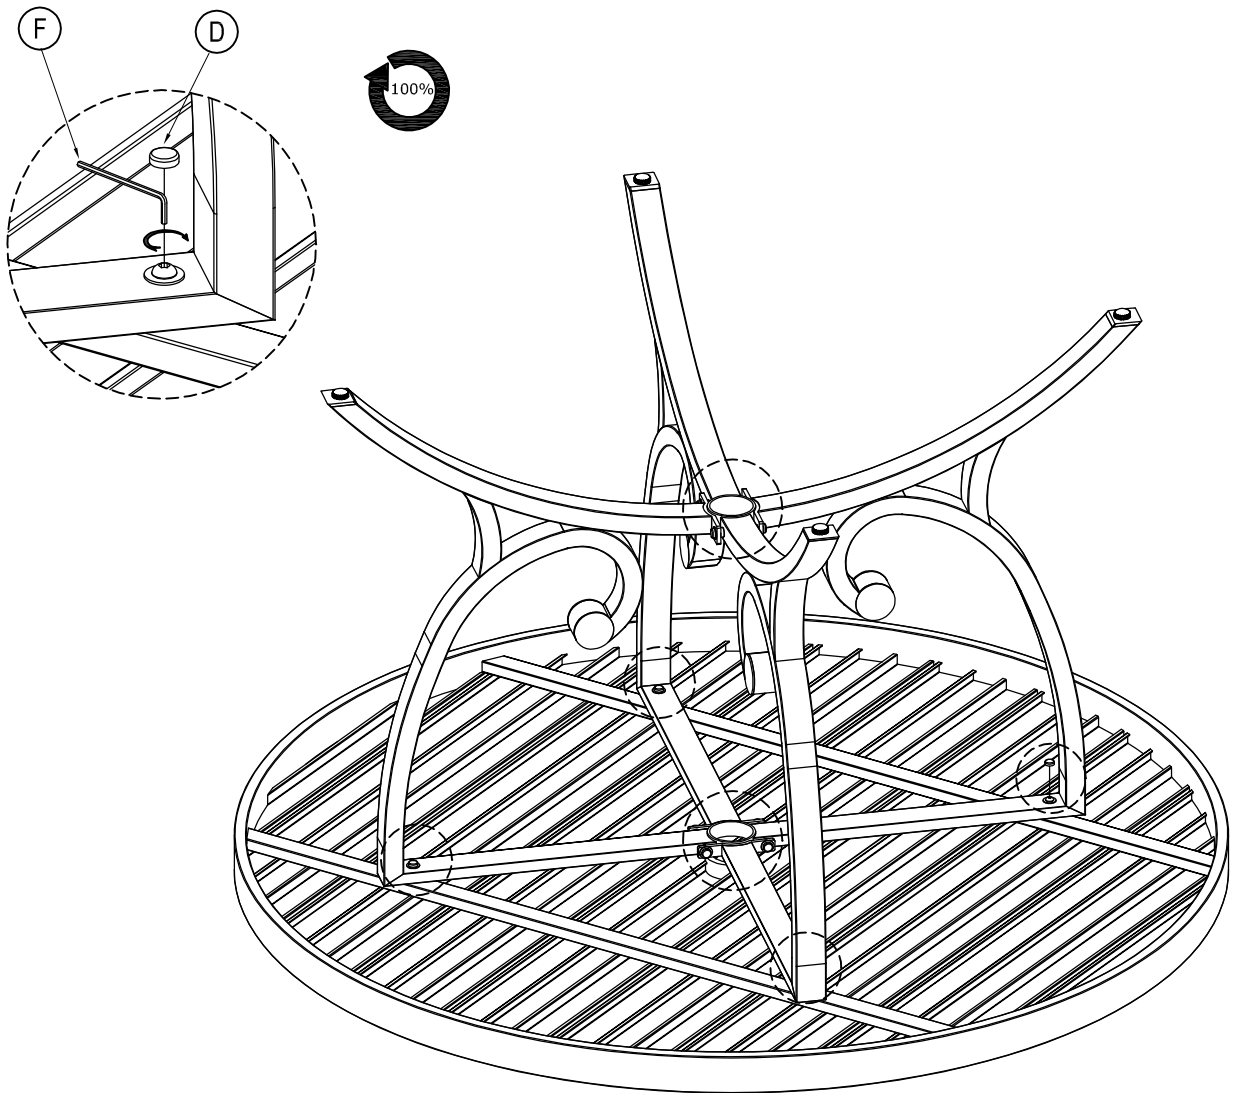

Tighten 100% tightness all positions.
Attach Bolt Cap (D) on the Mushroom- Bolt.

STEP 4

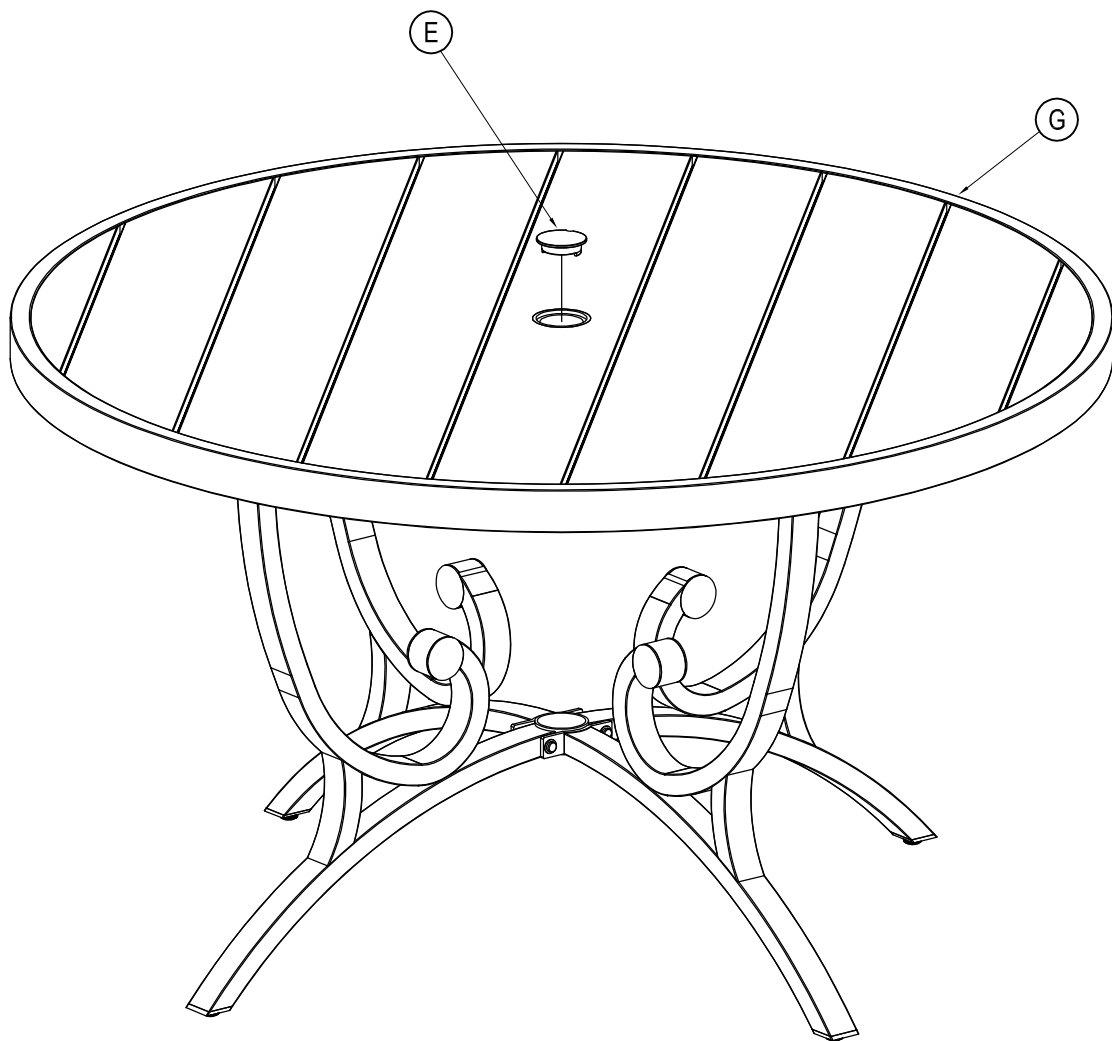

Attach the Umbrella Hole Plug (E) to the Table Top Frame (G).
Assembling Completed.