

ASSEMBLY INSTRUCTIONS

SHGP ADDY BALCONY SIDE TABLE

SKU 76014427/76014439/76014441 76014453/76014465/76014477/76014489


Manufactured for Rooms To Go

Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below

Caution: Loosely pre-assemble all the bolts first. Do not fully turn until all bolts are inserted into the proper holes.



Step 1: Place the Tops(Part A &B) on a clean, soft surface as a blanket or carpet. Assemble the Legs(Part C) to the Tops(Part A &B) by Bolt(M6*50) (Part D) and tighten with Allen key (Part Z).

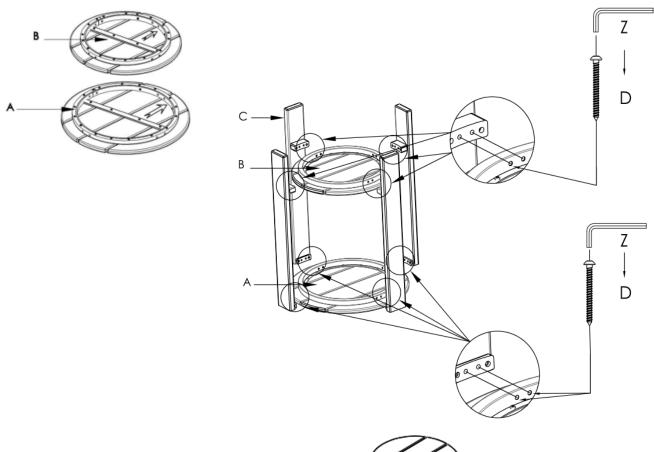

Step 2: After tightening all bolts, your product is ready for use.



PARTS LIST

NO.:	PIC	DESC	QTY
А		Top 1	1pc
В		Top 2	1pc
С		Leg	1pc

PARTS LIST

NO.:	PIC	DESC	QTY
D	-dummummumm()	Bolt(M6*50)	16pcs
Z		Allen Key	1pc

Periodically check and make sure all bolts are fully tightened.