






Step	Code	Hardware		Q'ty
1,2	A	Mushroom Bolt 6.3x35, B-PHL, SS, Head Ø10 (1/4"-20)		20 pcs
1,2	B	Plain Washer 6.5x16x1, SS		20 pcs
1,2,3	C	Allen key 4x98		01 pc
4	D	Umbrella Hole Plug 56x17xt(3), AL		01 pc



*Adjustable levelers (4pcs)*




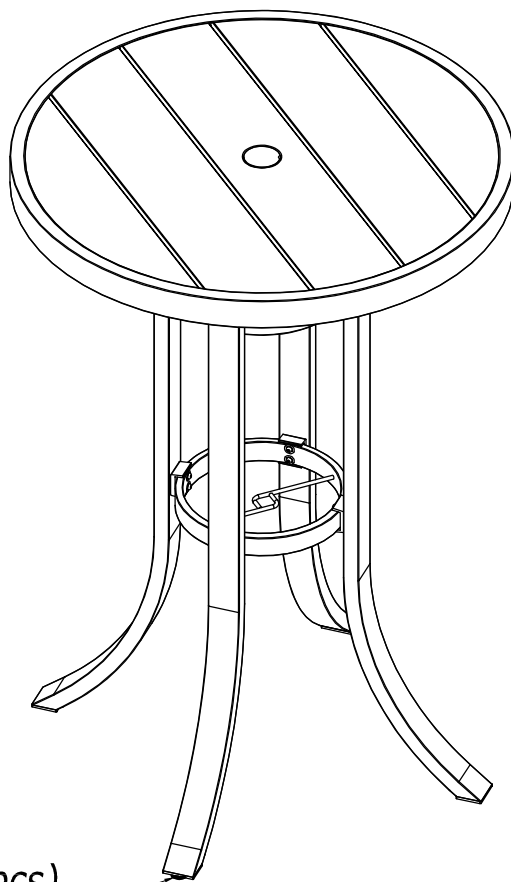


MANUFACTURED BY VMDJ FOR ROOMS TO GO

# Assembly Instructions

VMDJ 1215 SIESTA RD 30" BAR TBL  
W/ UMB HOLE  
SKU# 76412154

Version #1 - 2024/10/04


Step	Code	Component		Q'ty
2	E	Table top frame		01 pc
1	F	Leg frame		04 pcs
1	G	Top Support Frame		01 pc
1	H	Bottom Support Frame		01 pc

Hardware Pack Location (s):

SIESTA RD 30" BAR TBL W/ UMB HOLE, SKU# 76412154


**\*\*\*Caution:** Please read all instructions carefully before starting the assembly process. Always place parts on a flat surface lined with an anti-scratch fabric. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

## STEP 1

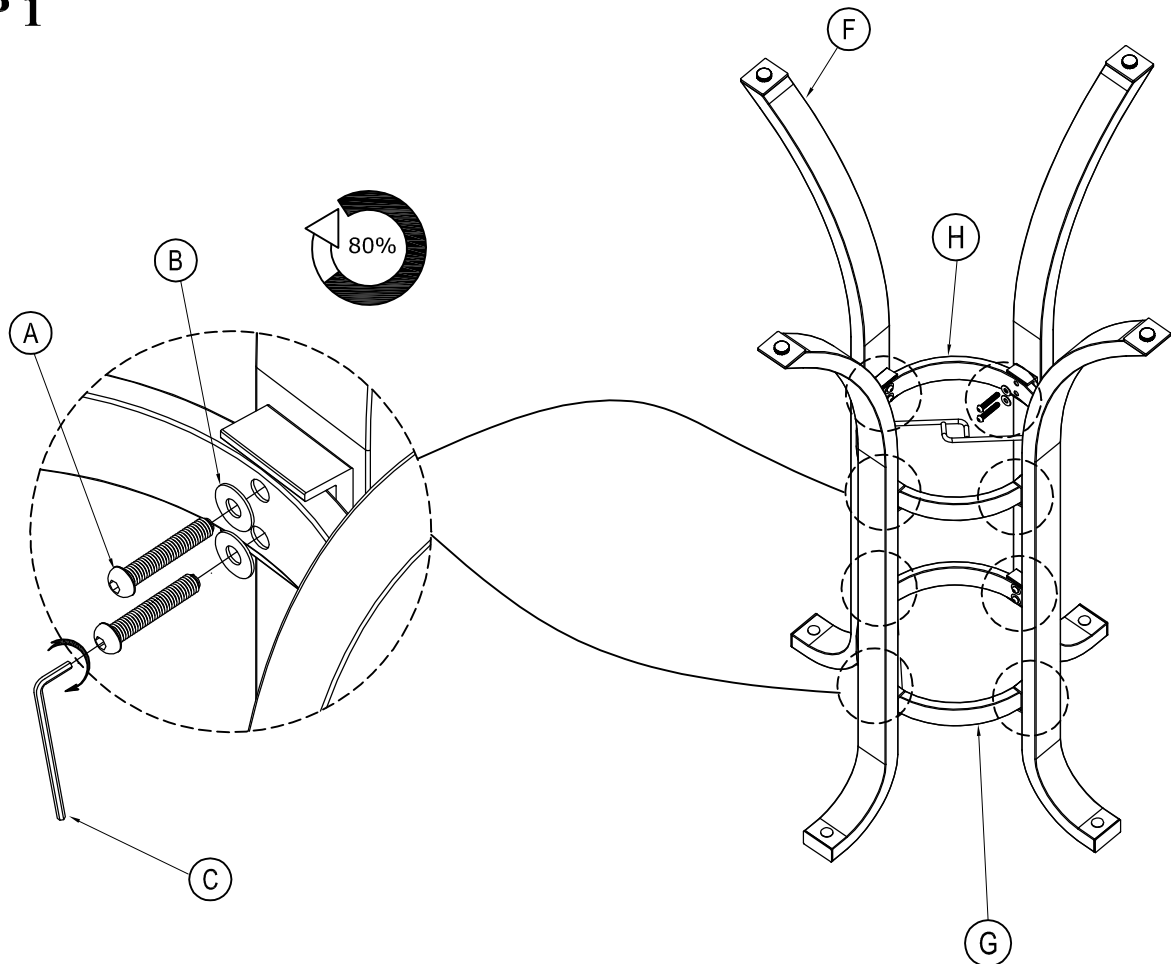


Attach the support frame (G) and (H) to the leg frame (F) with the Mushroom-Bolt (A), Plain Washer (B). Tighten with Allen key (C) to 80% tightness.

## STEP 2

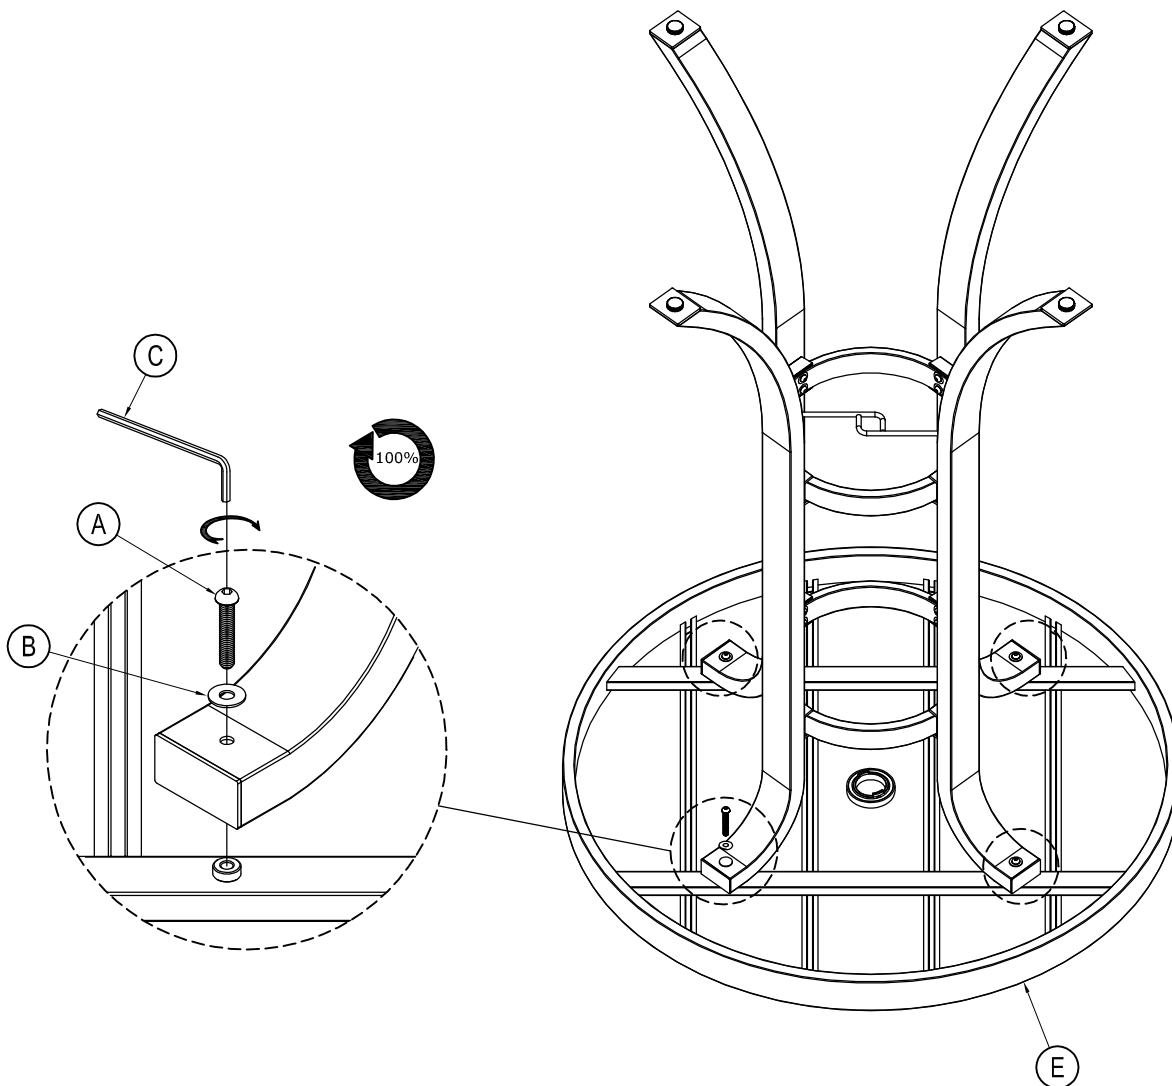


Attach the leg frame (F) to the below of the table top frame (E) with the Mushroom-Bolt (A), Plain Washer (B). Tighten with Allen key (C) to 100% tightness.

## STEP 3

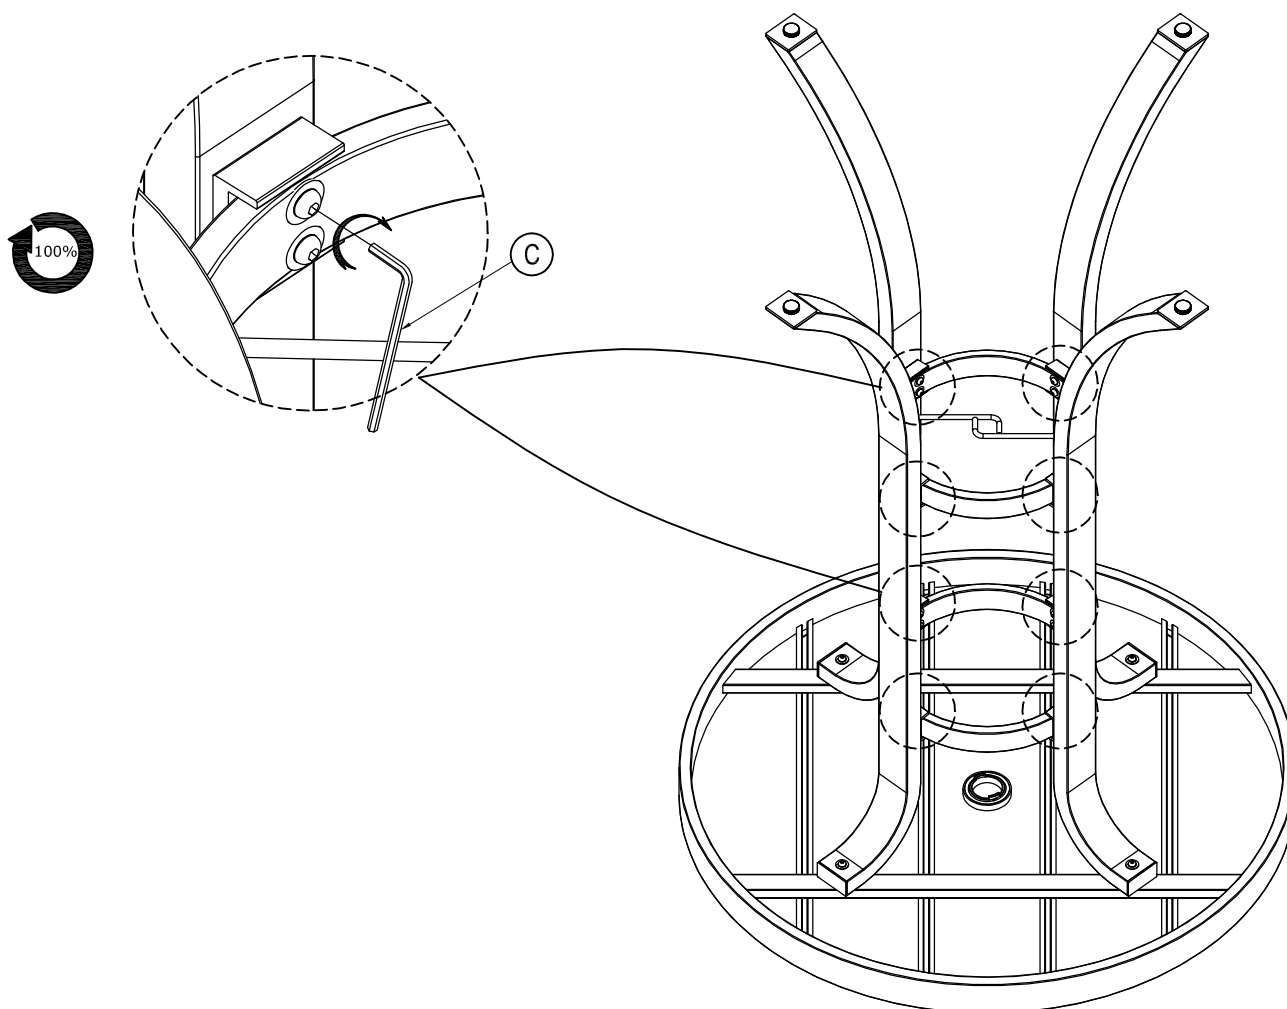

Tighten 100% tightness all positions.

## STEP 4

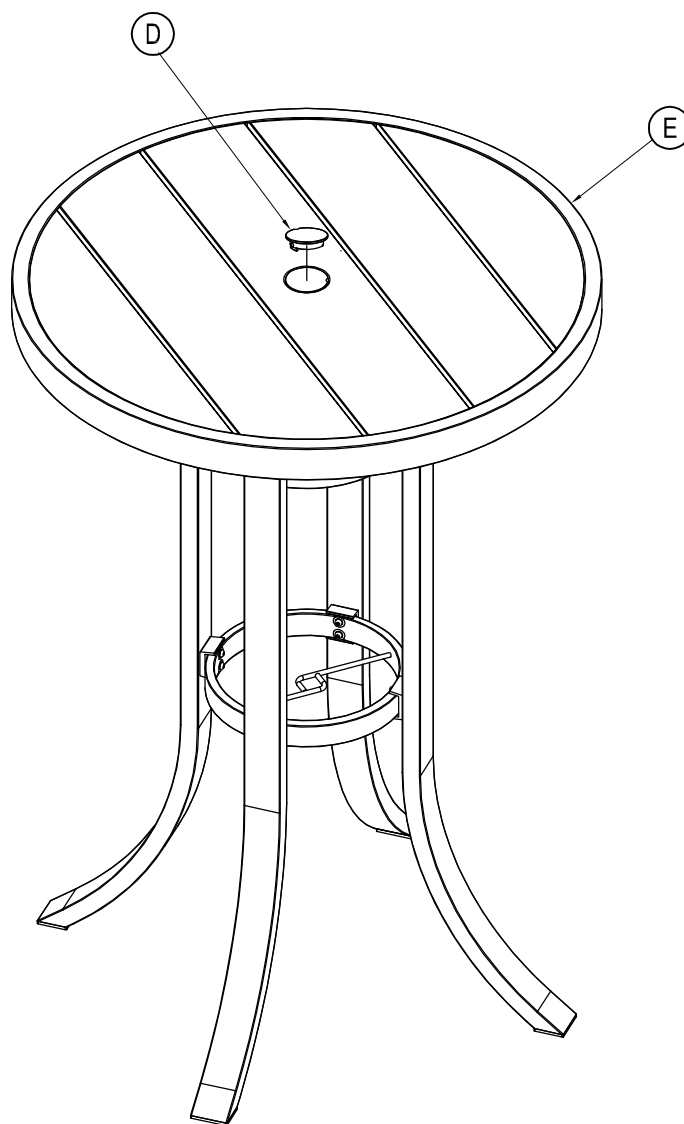

Attach the Umbrella Hole Plug (D) to the table top frame (E)  
Assembling Completed