

ASSEMBLY INSTRUCTIONS

AELV HDPE BARSTOOL WITHOUT BACK

Manufactured for Rooms To Go


SKU 76704026/76704064/76704088/76704038/76704076

Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below


Caution: Loosely pre-assemble all the bolts first. Do not fully turn until all bolts are inserted into the proper holes.



Step 1: Place the Seat(Part A) on a clean, soft surface as a blanket or carpet. Put the Legs(Part B&C) and the Foot Bar(Part D&E) at the right place. Assemble the Left Leg(Part C) to the Top and Foot Bar by Bolt(M6*65)(Part F), put the Bolt(M6*30)(Part E) into the hole on the side of Seat(Part A), and tighten with Allen Key(Part Z).

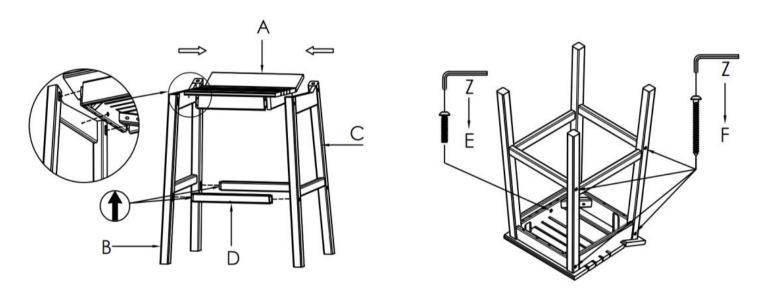

Step 2: Assemble the Right Leg(Part B) to the Seat and Foot Bar by Bolt(M6*65)(Part F), put the Bolt(M6*30)(Part E) into the hole on the side of Seat(Part A), and tighten with Allen Key(Part Z).

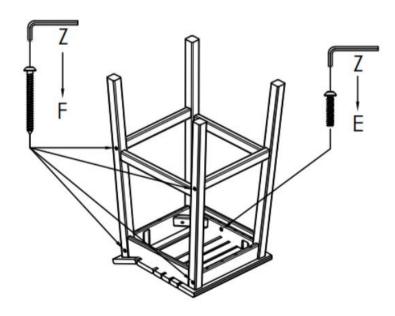

Step 3: After tightening all bolts, your product is ready for use.



PARTS LIST

NO.:	PIC	DESC	QTY
A		Seat	1рс
В		Right Leg	1pc
С		Left Leg	1pc
D		Foot Bar	2pcs

Periodically check and make sure all bolts are fully tightened.

PARTS LIST

NO.:	PIC	DESC	QTY
E	Опшинин	Bolt(M6*30)	2pcs
F	-аппининининт-[]	Bolt(M6*65)	8pcs
Z		Allen Key	1рс