










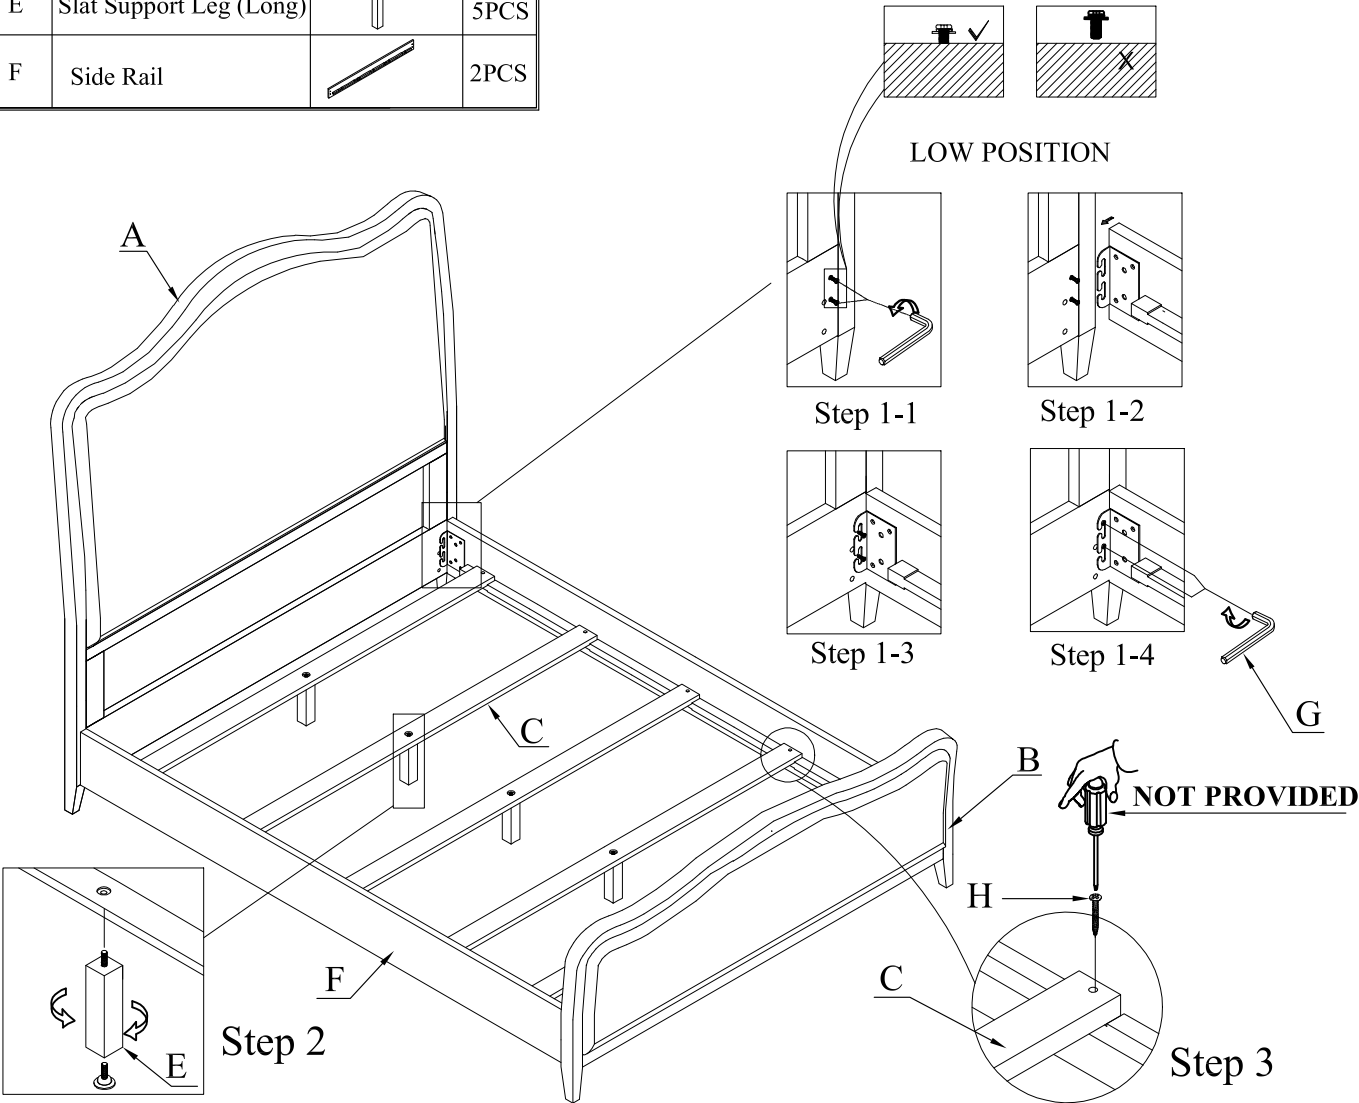
*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

*** Note: Do not tighten all the bolts until the assembly is fully complete

Code	PART LIST:		
A	Headboard		1PC
B	Footboard		1PC
C	Slat		5PCS
D	Slat Support Leg (Short)		5PCS
E	Slat Support Leg (Long)		5PCS
F	Side Rail		2PCS

Code	HARDWARE LIST		
G	Allen Key 4mm		1PC
H	Screw 8#*1"		10PCS

TOOLS REQUIRED (NOT PROVIDED)	
Description	Sketch
Phillips Screwdriver	




Hardware Pack Location(s):

4021-170 QN UPH HDBD,SKU# 33340213

4021-171 QN UPH FTBD,SKU# 33740211

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

*** Note: Do not tighten all the bolts until the assembly is fully complete

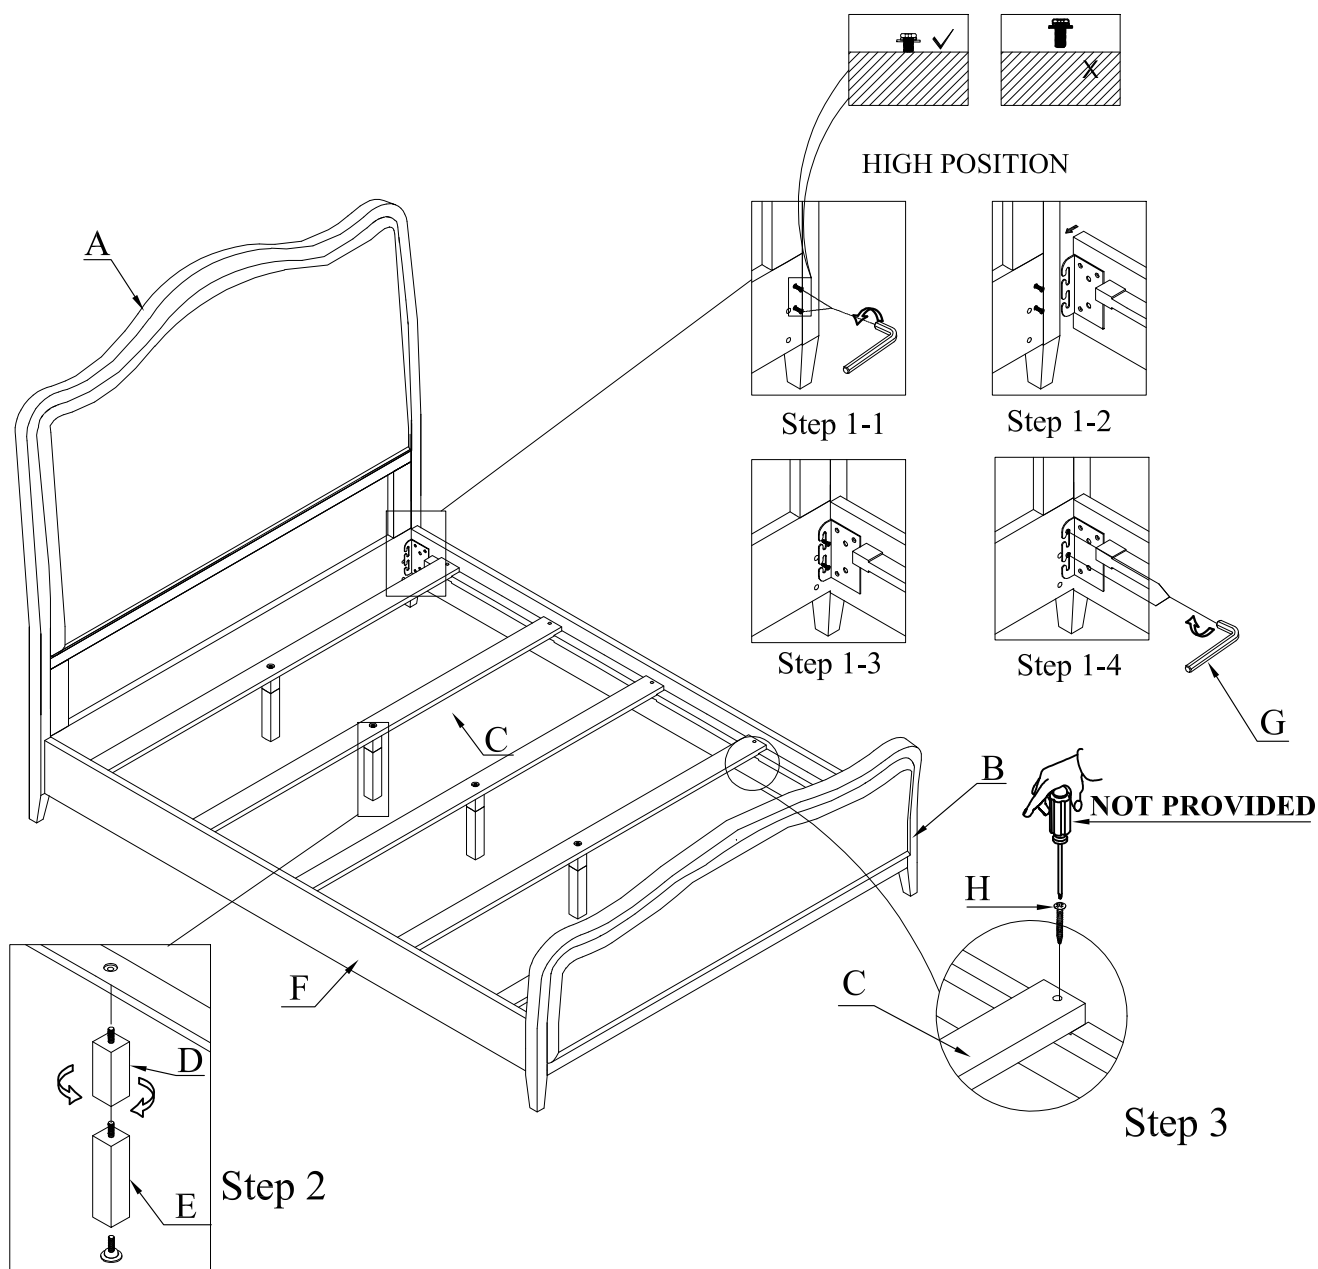

Hardware Pack Location(s):

4021-170 QN UPH HDBD,SKU# 33340213

4021-171 QN UPH FTBD,SKU# 33740211