















# Assembly Instructions


Item: 95472

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside carton during shipment . (Note: Loosely thread all screws/bolts first. Once the item is assembled then completely tighten).

Code	Hardware List	Qty
A	Blot 5/16" x 55mm 	2PCS
B	Blot 1/4" x 60mm 	4PCS
C	Blot 1/4" x 40mm 	4PCS
D	5/16" Flat Washer 	2PCS
E	5/16" Spring Washer 	2PCS
G	1/4" Flat Washer 	4PCS
H	1/4" Spring Washer 	4PCS
I	Allen Key M4 	1PC
K	Cork 	4PCS

Code	Parts List	Qty
1	Left Arm 	1PC
2	Right Arm 	1PC
3	Seat frame 	1PC
4	Backrest frame 	1PC
5	Supporting bar 	1PC

## Step 1

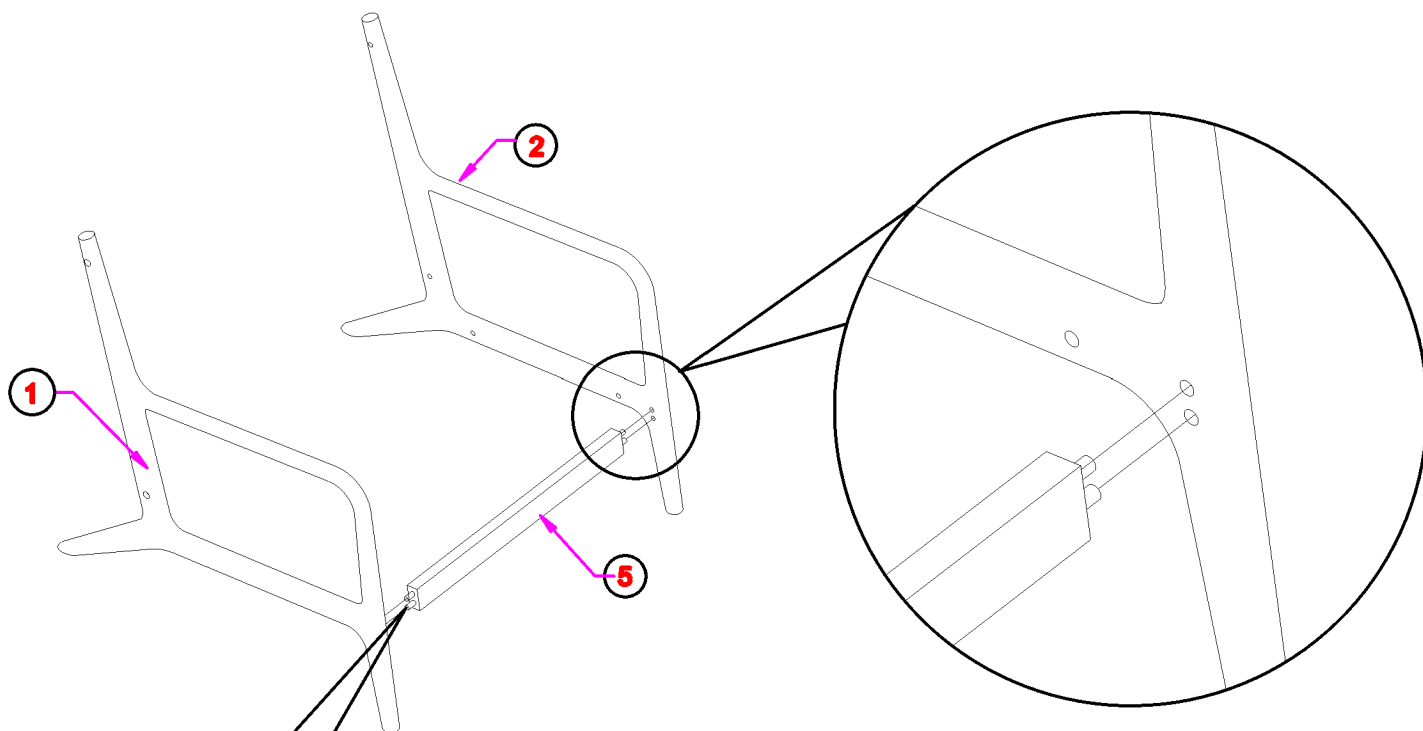


**Note: Need to place wood dowels and drillhole properly**


# Assembly Instructions

Item: 95472

## Step 2

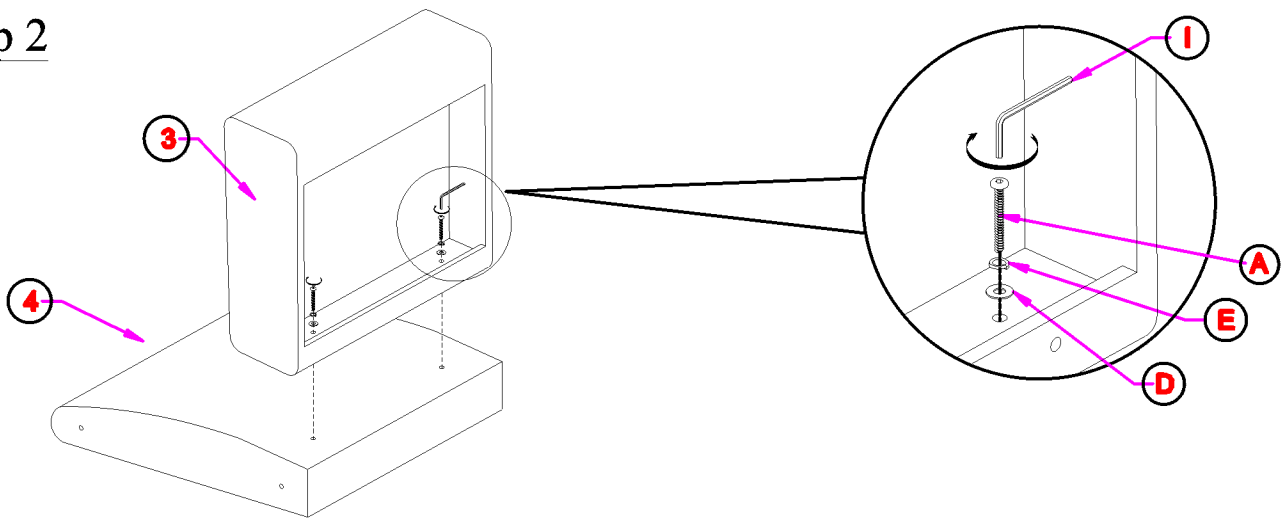

## Step 3

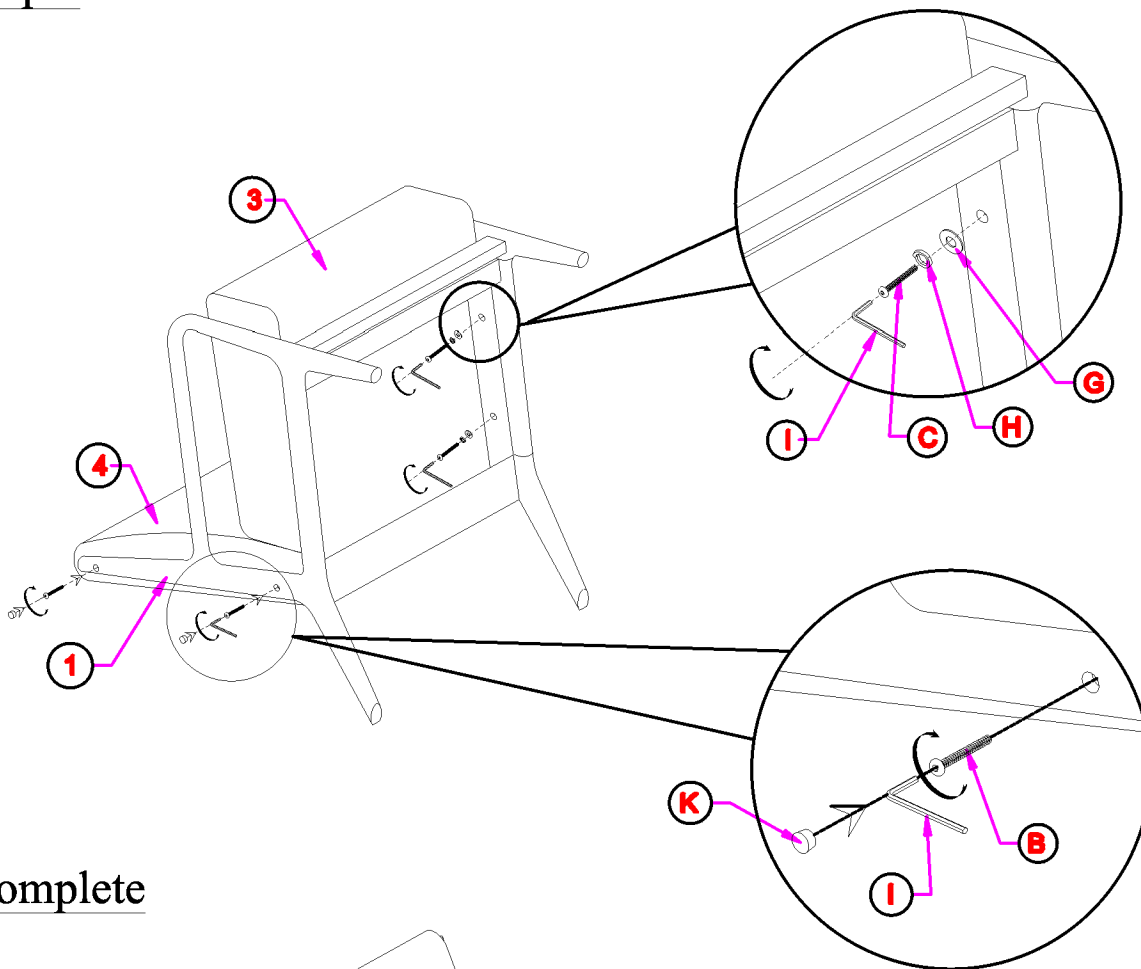

## Complete

