




SW 8591 - F/Q/K

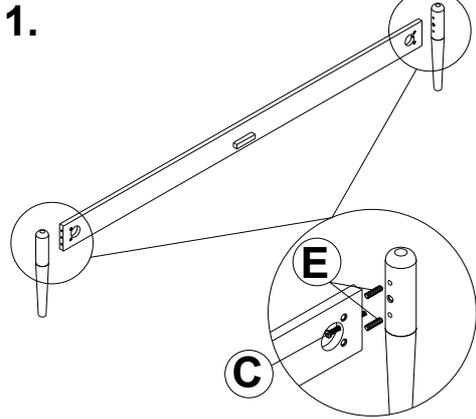


Attach the footboard post (P4) to the rail (P5).
You will need to use hardware:
C = 2pcs
E = 4pcs
G = 1pc

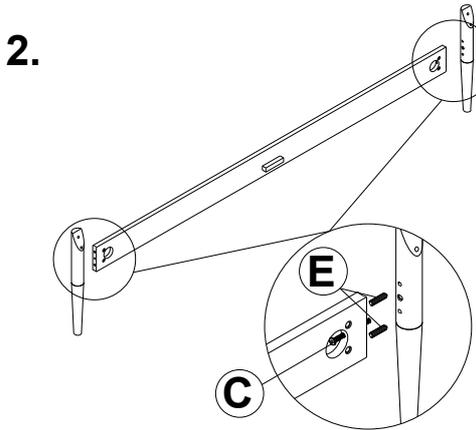

Attach the headboard lower post (P3) to the rail (P5).
You will need to use hardware:
C = 2pcs
E = 4pcs
G = 1pc

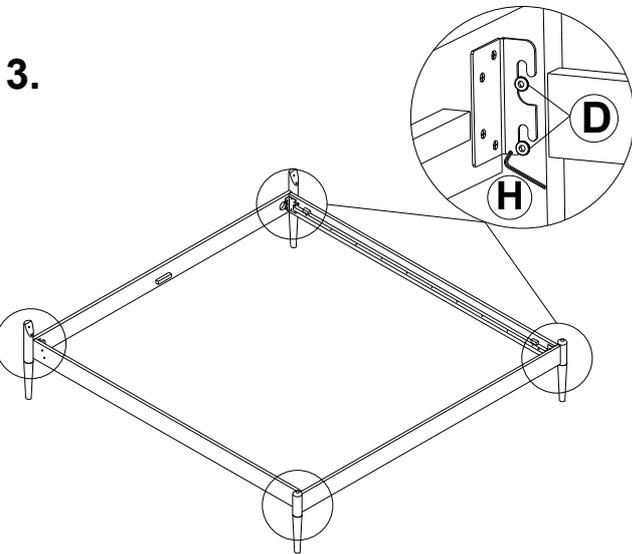

After that, attach the side rail (P6) to the rail (P5) using hardware:
D = 8pcs
H = 1pc

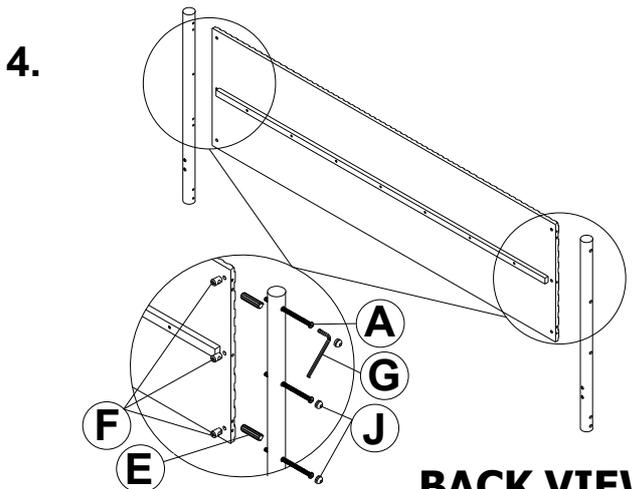

Attach the headboard panel (P1) to the headboard upper post (P2) using hardware:
A = 6pcs
E = 4pcs
F = 6pcs
G = 1pc
J = 6pcs

BACK VIEW

WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST


P1		Headboard Panel =	1pc
P2		Headboard Upper Post =	L-1pc R-1pc
P3		Headboard Lower Post =	L-1pc R-1pc
P4		Footboard Post =	2pcs
P5		Rail =	2pcs
P6		Side Rail =	L-1pc R-1pc
P7		Center Rail =	1pc
P8		Support Leg =	2pcs
P9		Bed Slats =	14pcs

HARDWARE LIST

A		M6 X 80MM JCBC =	6pcs
B		M6 X 50MM JCBC =	6pcs
C		M6 X 60MM JCBC =	8pcs
D		M8 X 16MM JCBB =	8pcs
E		M8 X 30MM WOOD DOWEL =	12pcs
F		M6 X 13MM BARREL NUT =	6pcs
G		ALLEN KEY M4 =	1pc
H		ALLEN KEY M5 =	1pc
I		M4 X 25MM SCREW =	14pcs
J		WOODEN BUTTON PLUG =	14pcs
K		ADJUSTER =	2pcs



5.

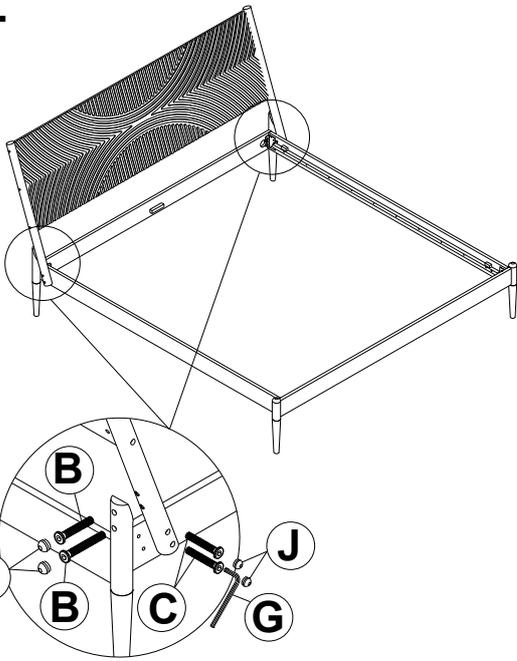


First, attach the headboard lower post (P3) to the headboard upper post (P2). You will need to use hardware:

B = 4pcs
G = 1pc
J = 4pcs

After that, attach the headboard upper post (P2) to the side rail (P6) using hardware:

C = 4pcs
G = 1pc
J = 4pcs

6.

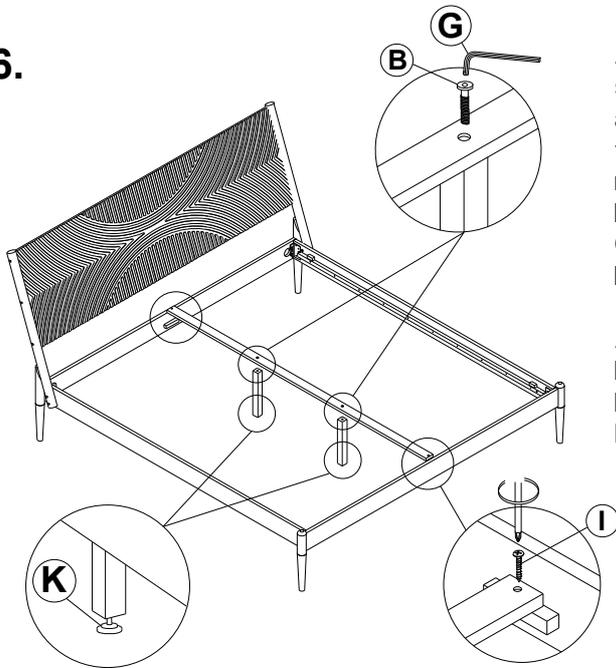


Attach the adjuster (K) to the support leg (P8). After that, attach the support leg (P8) to the center rail (P7). You will need to use hardware :

B = 2pcs
G = 1pcs
K = 2pcs

Attach the center rail (P7) between the rail (P5) using hardware:

I = 2pcs

7.

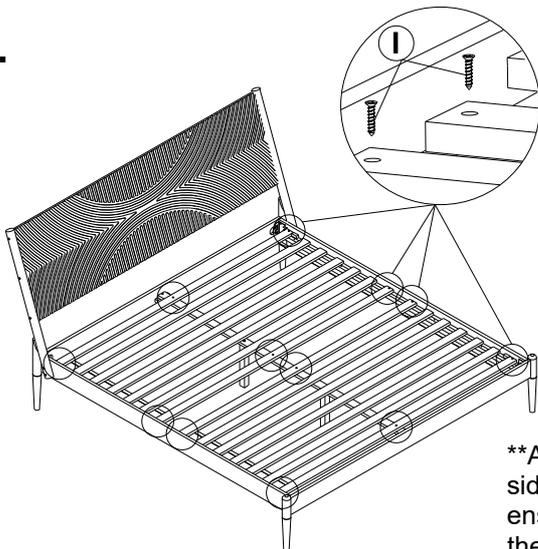

Lastly, lay the bed slats (P9) between the side rail (P6) using hardware:
I = 12pcs

**Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of the side rail.

WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

P1		Headboard Panel =	1pc
P2		Headboard Upper Post =	L-1pc = R-1pc
P3		Headboard Lower Post =	L-1pc = R-1pc
P4		Footboard Post =	2pcs
P5		Rail =	2pcs
P6		Side Rail =	L-1pc = R-1pc
P7		Center Rail =	1pc
P8		Support Leg =	2pcs
P9		Bed Slats =	14pcs

HARDWARE LIST

A		M6 X 80MM JCBC =	6pcs
B		M6 X 50MM JCBC =	6pcs
C		M6 X 60MM JCBC =	8pcs
D		M8 X 16MM JCBB =	8pcs
E		M8 X 30MM WOOD DOWEL =	12pcs
F		M6 X 13MM BARREL NUT =	6pcs
G		ALLEN KEY M4 =	1pc
H		ALLEN KEY M5 =	1pc
I		M4 X 25MM SCREW =	14pcs
J		WOODEN BUTTON PLUG =	14pcs
K		ADJUSTER =	2pcs

