


ASSEMBLY INSTRUCTION












SW 8000-61CH3D

REAR


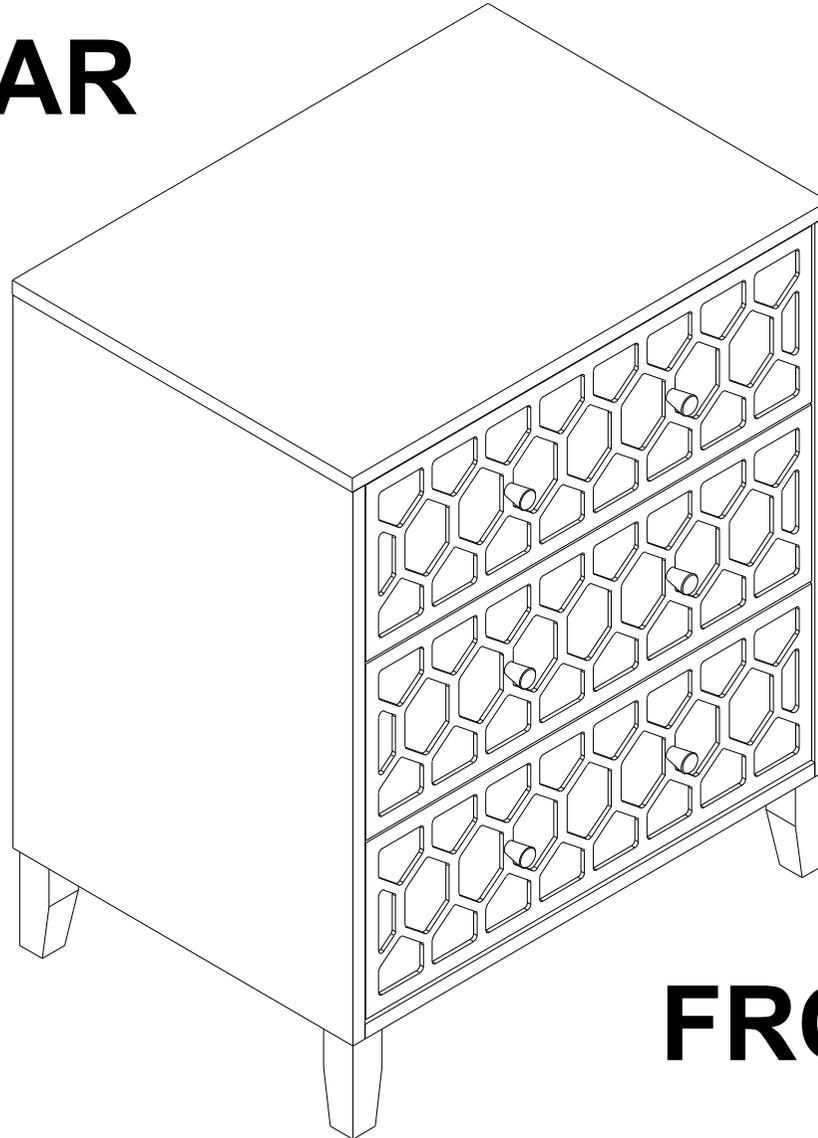


FRONT



PART LIST
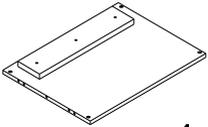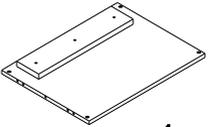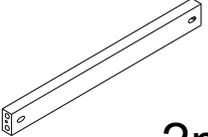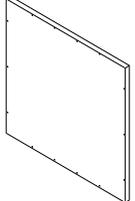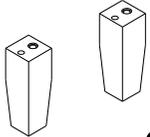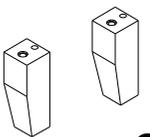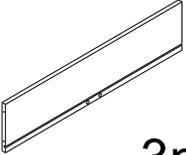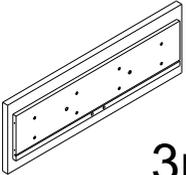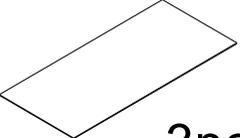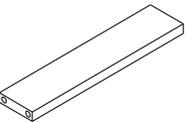
<p>1 Top Panel</p>  <p>1pc</p>	<p>2 Bottom Panel</p>  <p>1pc</p>	<p>3 Side Panel (left)</p>  <p>1pc</p>	<p>4 Side Panel (right)</p>  <p>1pc</p>	<p>5 Support Rail</p>  <p>2pcs</p>	<p>6 Back Panel</p>  <p>1pc</p>
<p>7 Post (left)</p>  <p>2pcs</p>	<p>8 Post (right)</p>  <p>2pcs</p>	<p>9 Drawer Side Panel (left)</p>  <p>3pcs</p>	<p>10 Drawer Side Panel (right)</p>  <p>3pcs</p>	<p>11 Drawer Back Panel</p>  <p>3pcs</p>	<p>12 Drawer Front Panel</p>  <p>3pcs</p>
<p>13 Drawer Base Panel</p>  <p>3pcs</p>	<p>14 Drawer Support Rail</p>  <p>3pcs</p>				


HARDWARE LIST
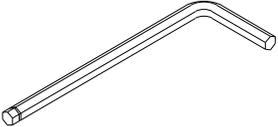
<p>A MINI FIX SPREADING BOLT 24MM</p>  <p>12pcs</p>	<p>B MINIFIX HOUSING Ø15*12MM</p>  <p>12pcs</p>	<p>C WOOD DOWEL M8*30MM</p>  <p>32pcs</p>	<p>D CSK SCREW M4*30MM</p>  <p>18pcs</p>	<p>E JCBC M6X40MM</p>  <p>4pcs</p>	<p>F CSK SCREW M4*25MM</p>  <p>24pcs</p>
<p>G HANDLE</p>  <p>6sets</p>	<p>H M4 ALLEN KEY</p>  <p>1pc</p>				

STEP 1

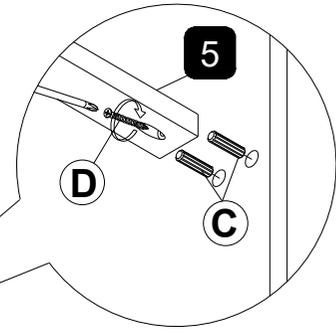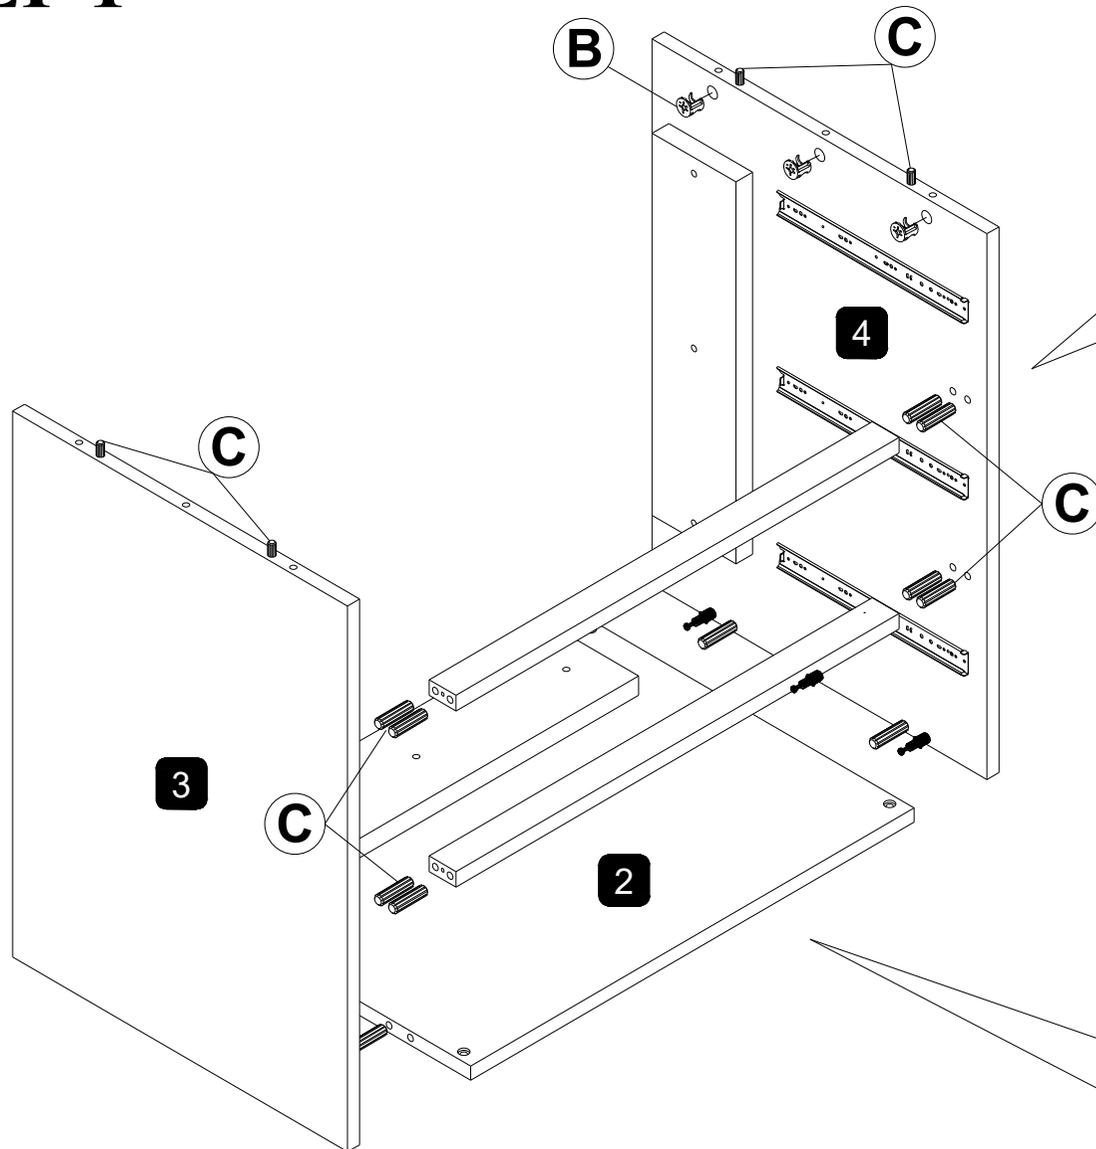

BOTTOM PANEL

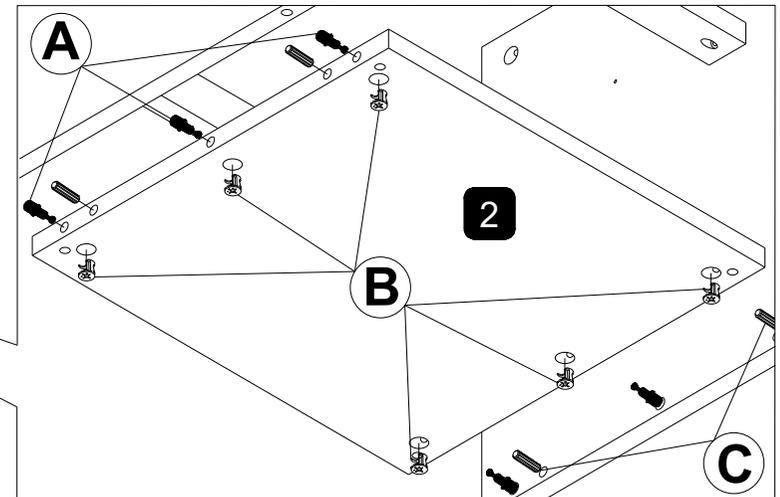

A X 6pcs



B X 12pcs




C X 16pcs




D X 4pcs






STEP 2

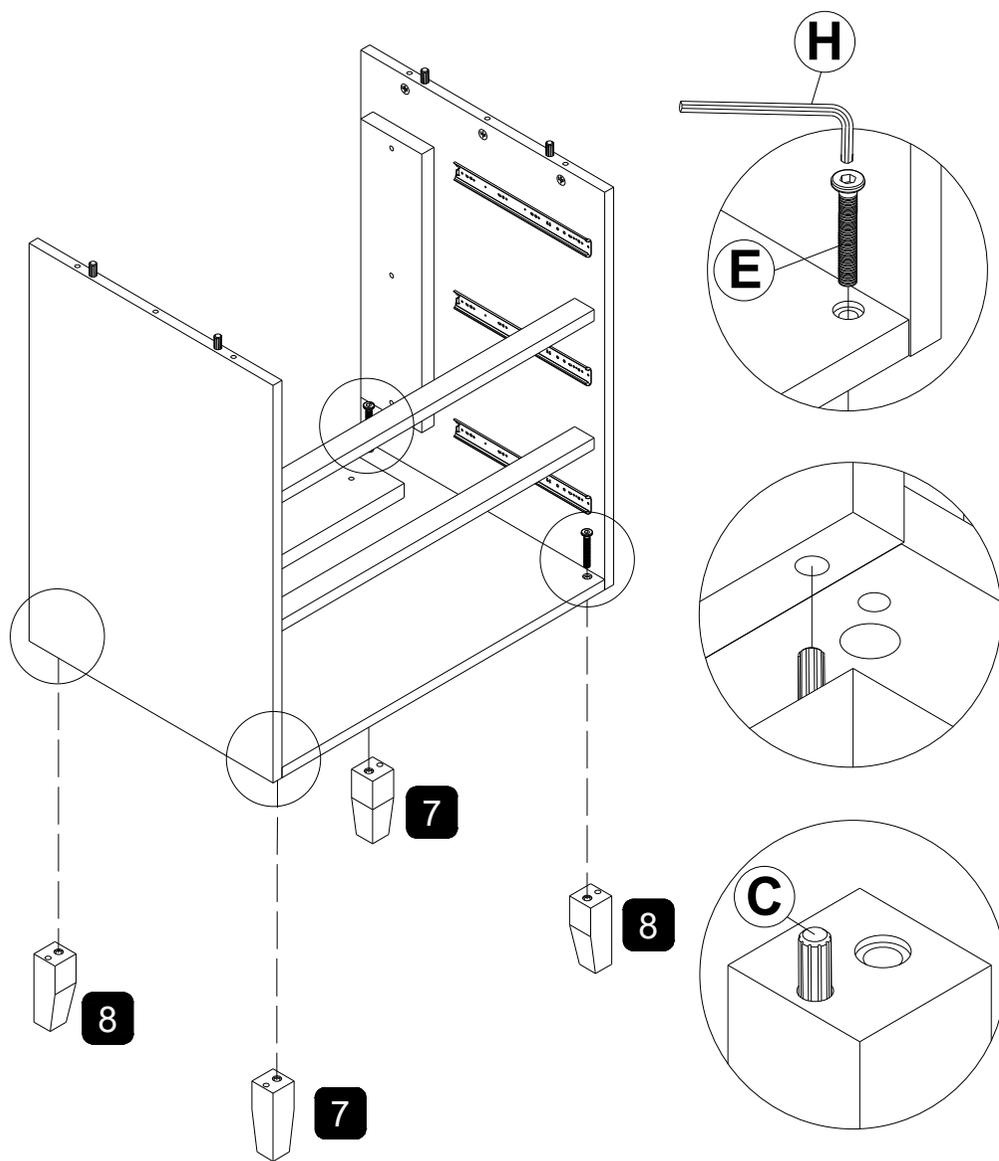



STEP 3

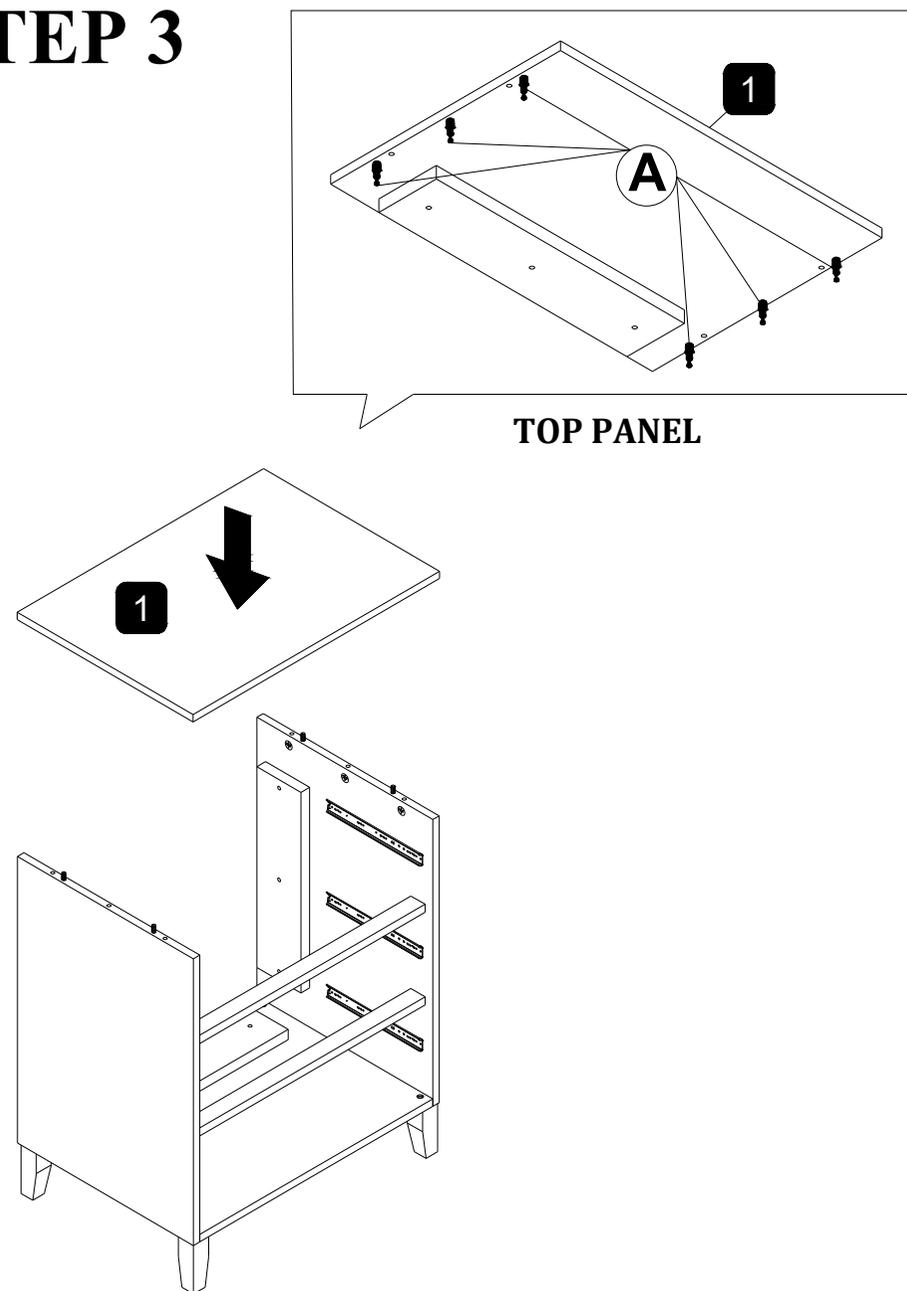

TOP PANEL




STEP 4

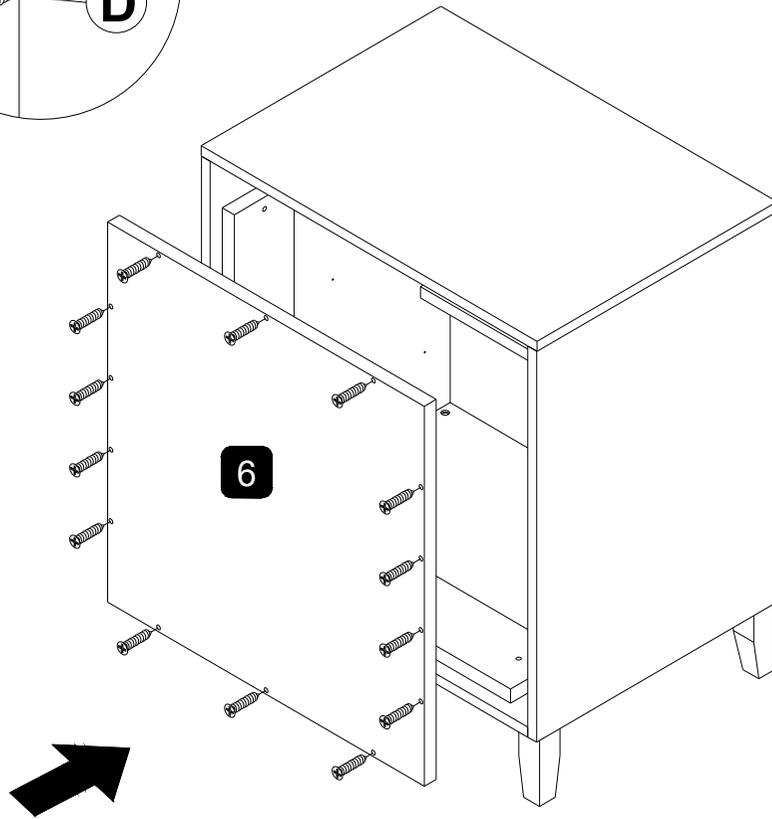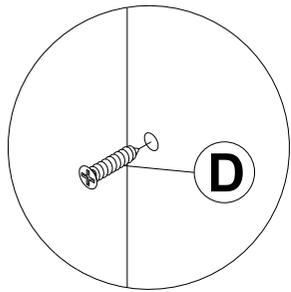

STEP 5


DRAWER X 3

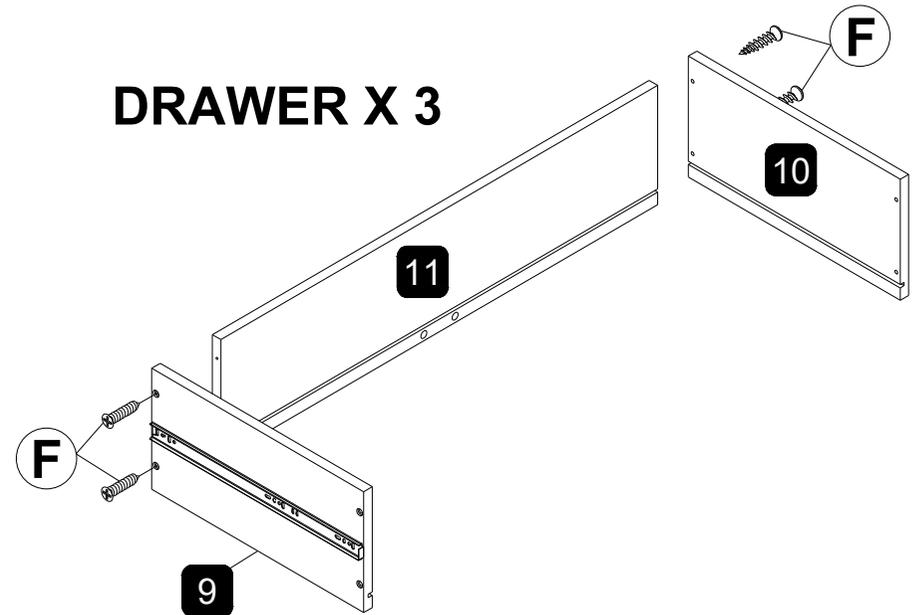

D X 14pcs




F X 12pcs




STEP 6

DRAWER X 3

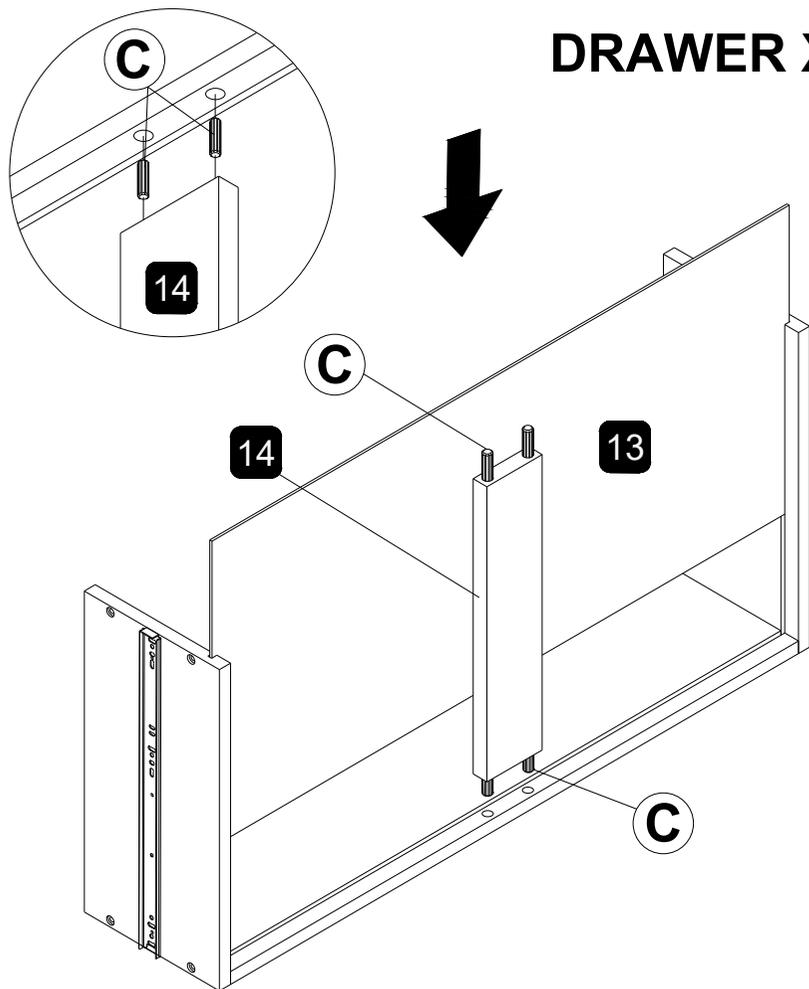

STEP 7

DRAWER X 3

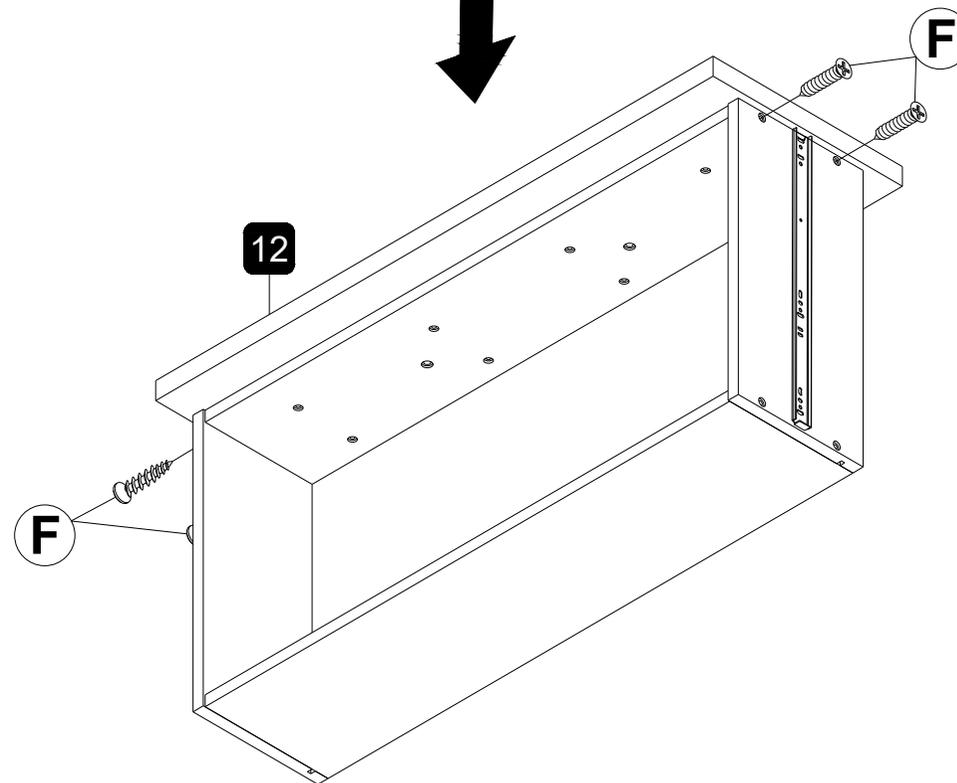



C X 12pcs


F X 12pcs




STEP 8

DRAWER X 3

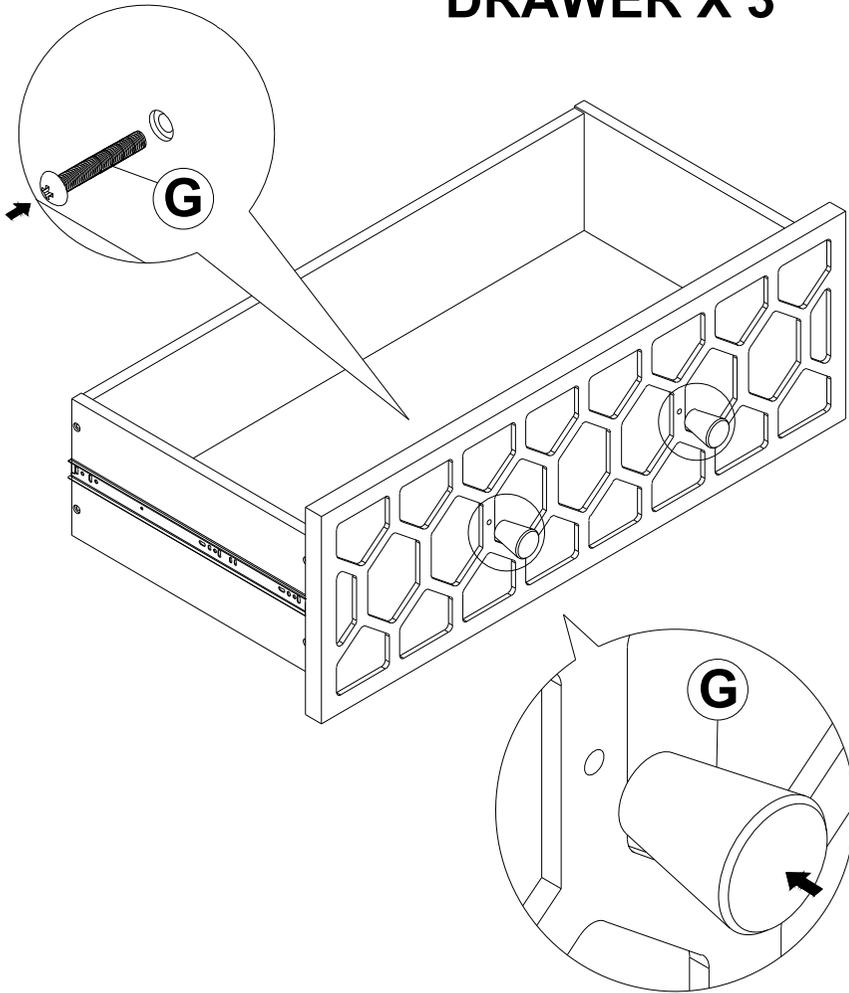

STEP 9

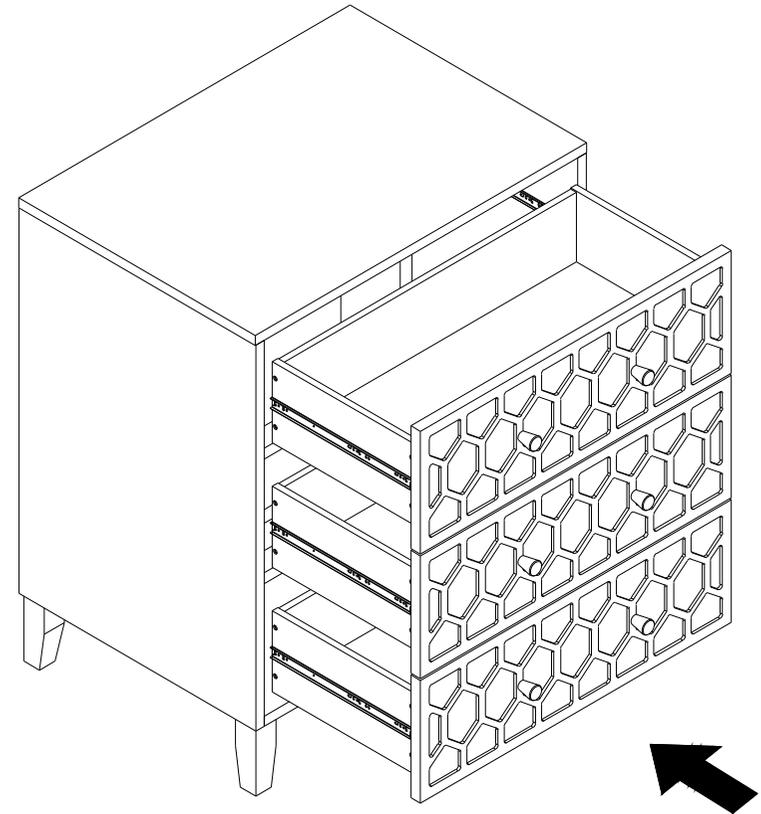


G X 6set



ASSEMBLY COMPLETE

***CONTINUE TO ASSEMBLY
ANTI TIPPING KITS***

