


ASSEMBLY INSTRUCTION

SW 8000 - 63D6D










REAR

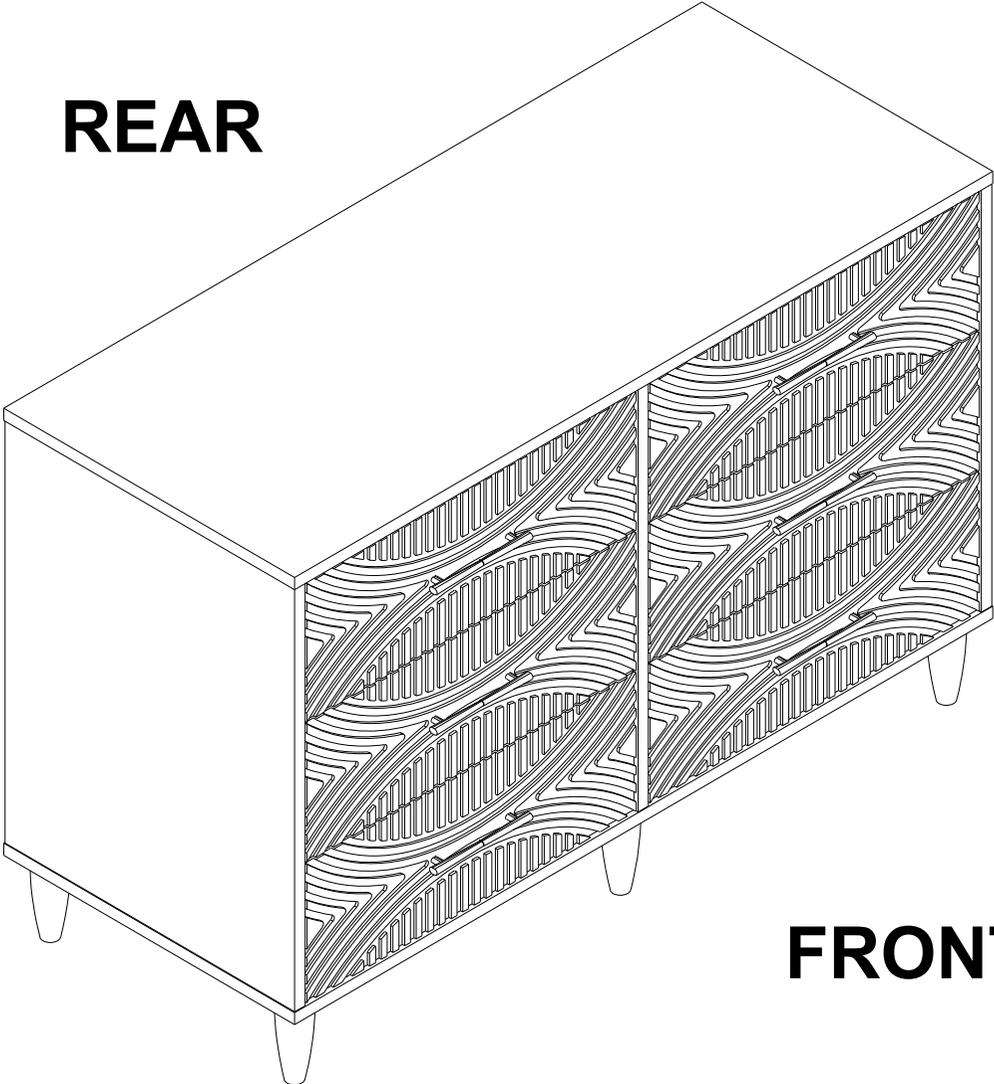







FRONT




PART LIST
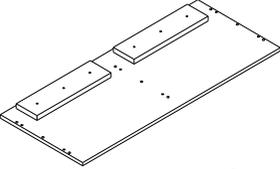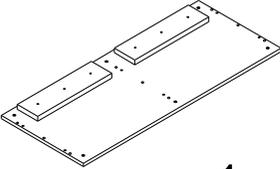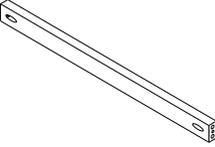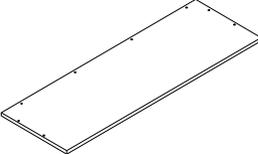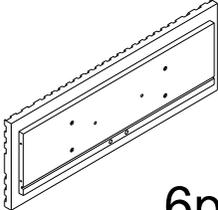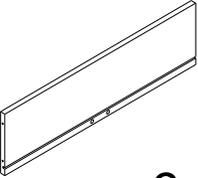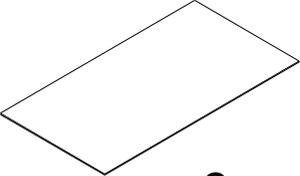
<p>1 Top Panel</p>  <p>1pc</p>	<p>2 Bottom Panel</p>  <p>1pc</p>	<p>3-L Side Panel (L)</p>  <p>1pc</p>	<p>3-R Side Panel (R)</p>  <p>1pc</p>	<p>4 Division</p>  <p>1pc</p>	<p>5 Rail</p>  <p>4pcs</p>
<p>6 Post</p>  <p>6pcs</p>	<p>7 Back Panel</p>  <p>2pcs</p>	<p>8 Dw Front Panel</p>  <p>6pcs</p>	<p>9-L Dw Side Panel (L)</p>  <p>6pcs</p>	<p>9-R Dw Side Panel (R)</p>  <p>6pcs</p>	<p>10 Dw Rear Panel</p>  <p>6pcs</p>
<p>11 Dw Support Rail</p>  <p>6pcs</p>	<p>12 Dw Base Panel</p>  <p>6pcs</p>				


HARDWARE LIST
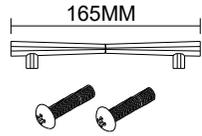
<p>A MINIFIX SPREDING DOWEL 24MM</p>  <p>18pcs</p>	<p>B MINIFIX HOUSING Ø15*12MM</p>  <p>18pcs</p>	<p>C WOOD DOWEL M8*30MM</p>  <p>52pcs</p>	<p>D SCREW M4*25MM</p>  <p>48pcs</p>	<p>E SCREW M4*30MM</p>  <p>24pcs</p>	<p>F M6 X 40MM JCBC</p>  <p>6pcs</p>
<p>G ALLEN KEY M4</p>  <p>1pc</p>	<p>H HANDLE</p>  <p>6sets</p>				

STEP 1

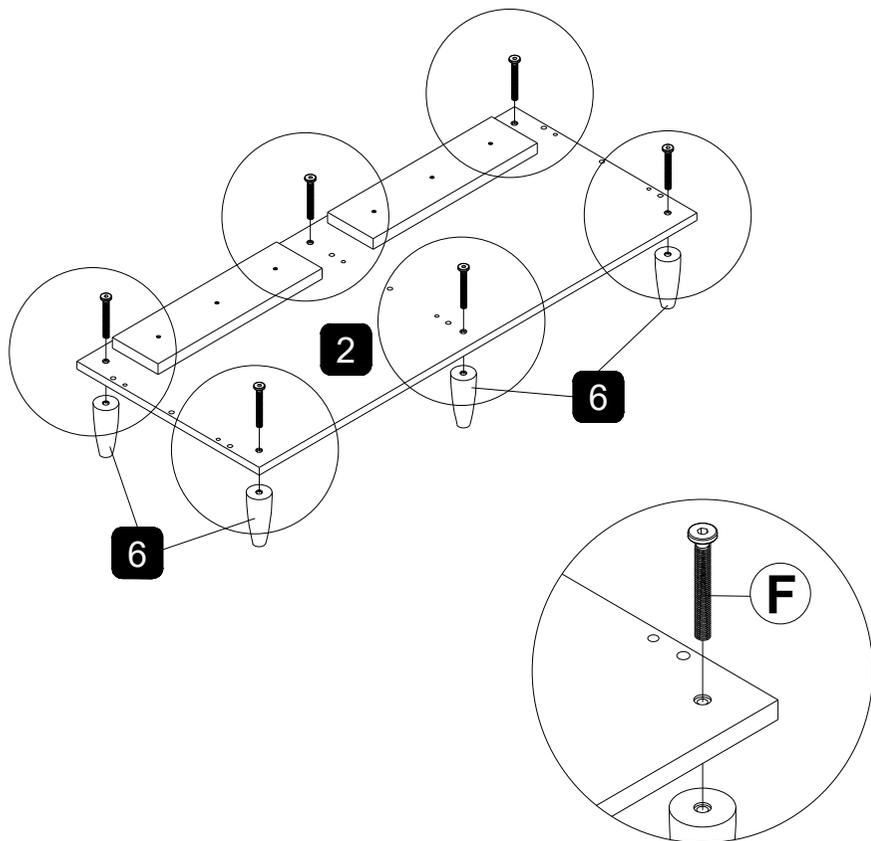

STEP 2

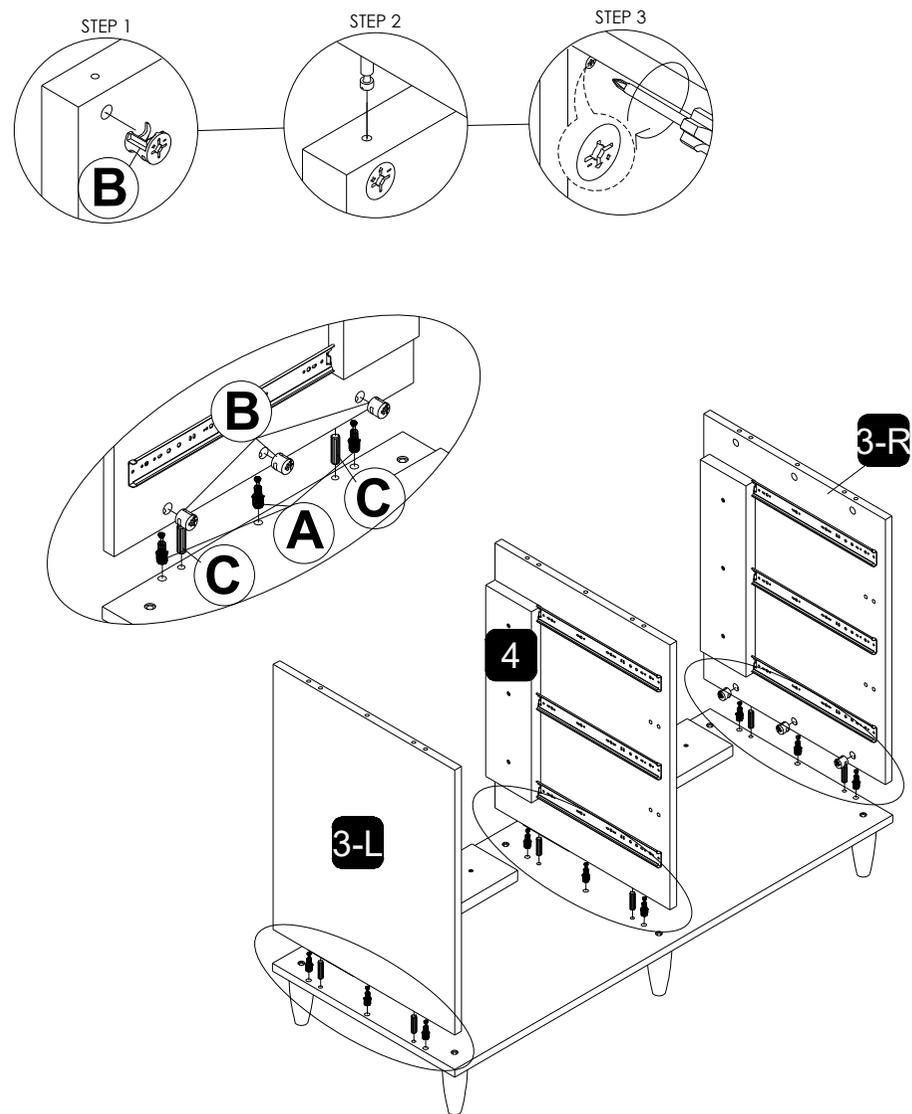

F X 6pcs



G X 1pc



A X 9pcs




B X 9pcs




C X 6pcs



STEP 3

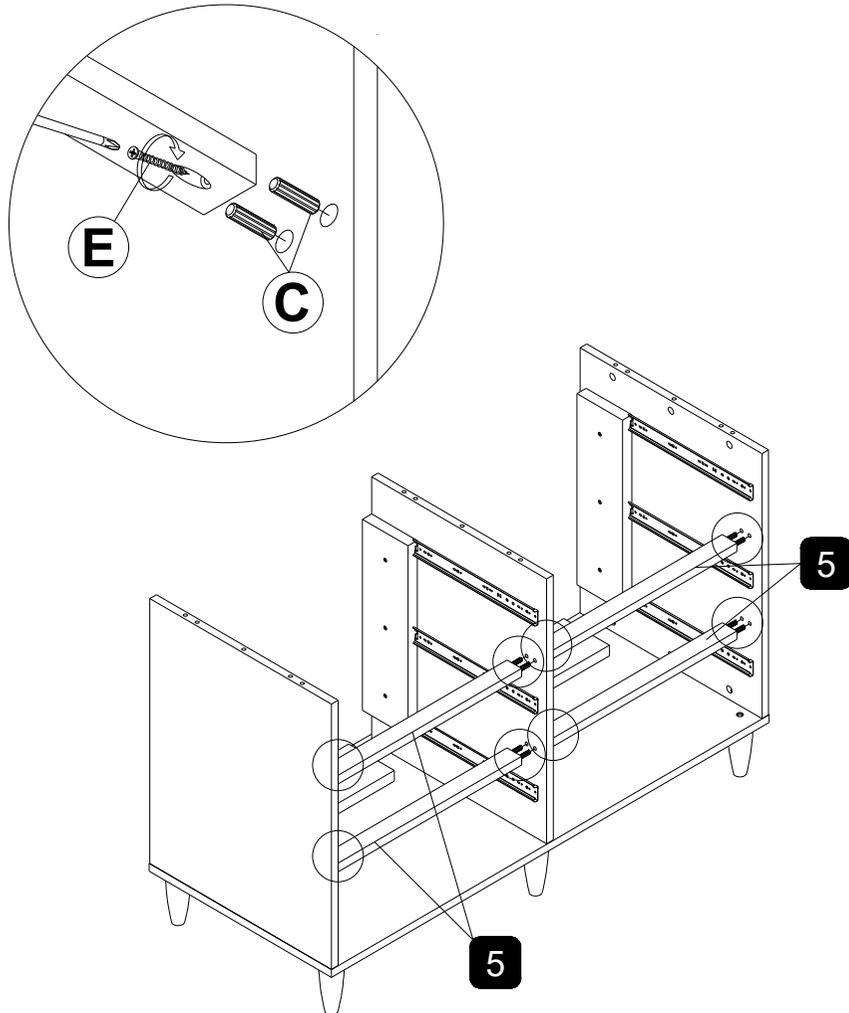


STEP 4

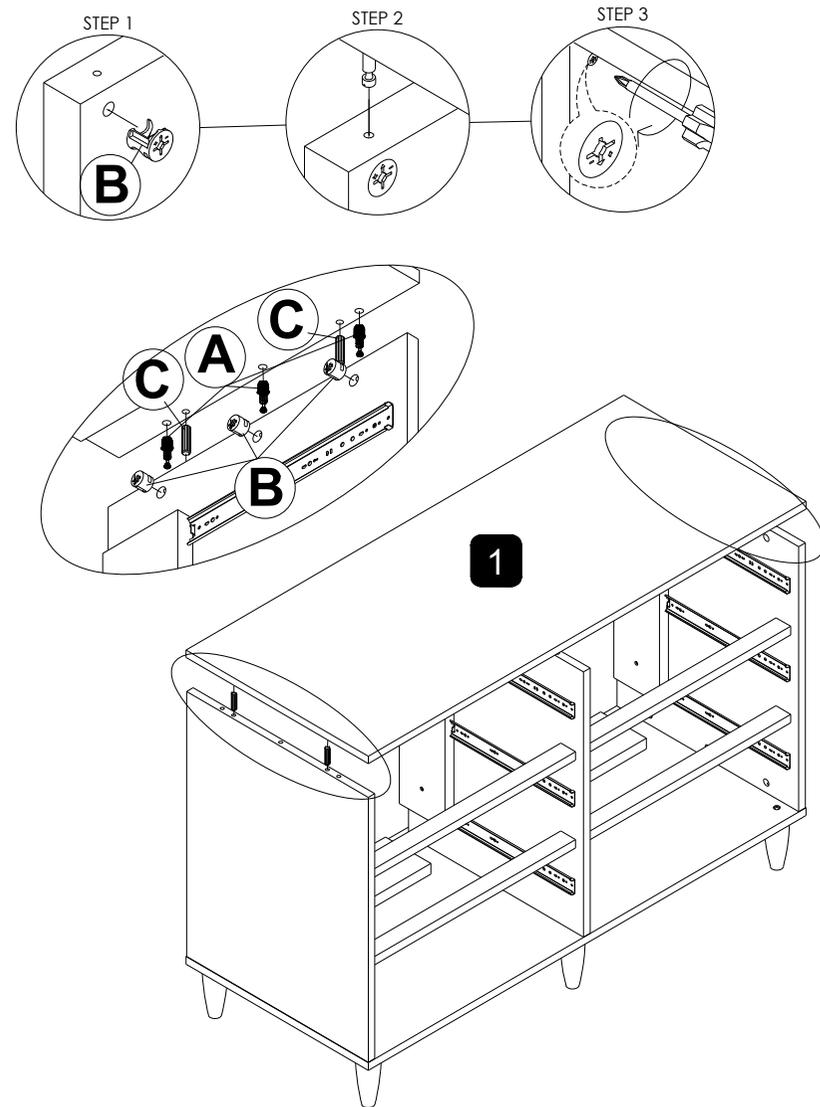


C X 16pcs



E X 8pcs





A X 9pcs


B X 9pcs



C X 6pcs



STEP 5

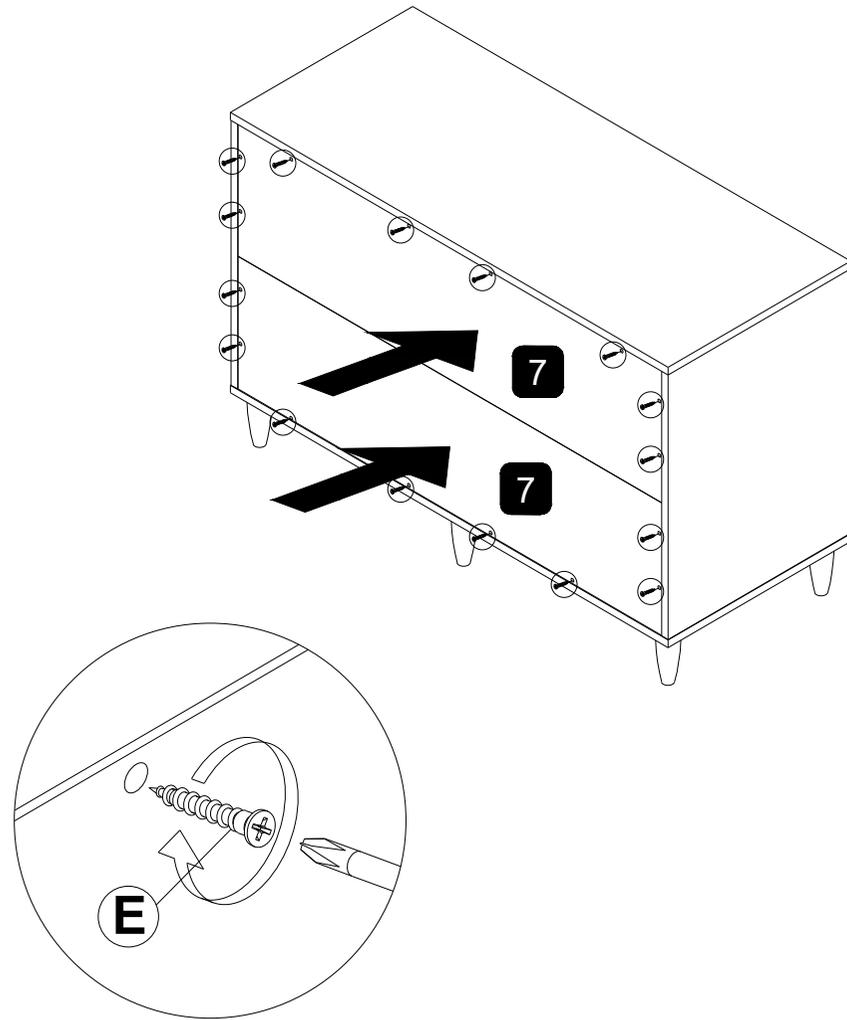

STEP 6

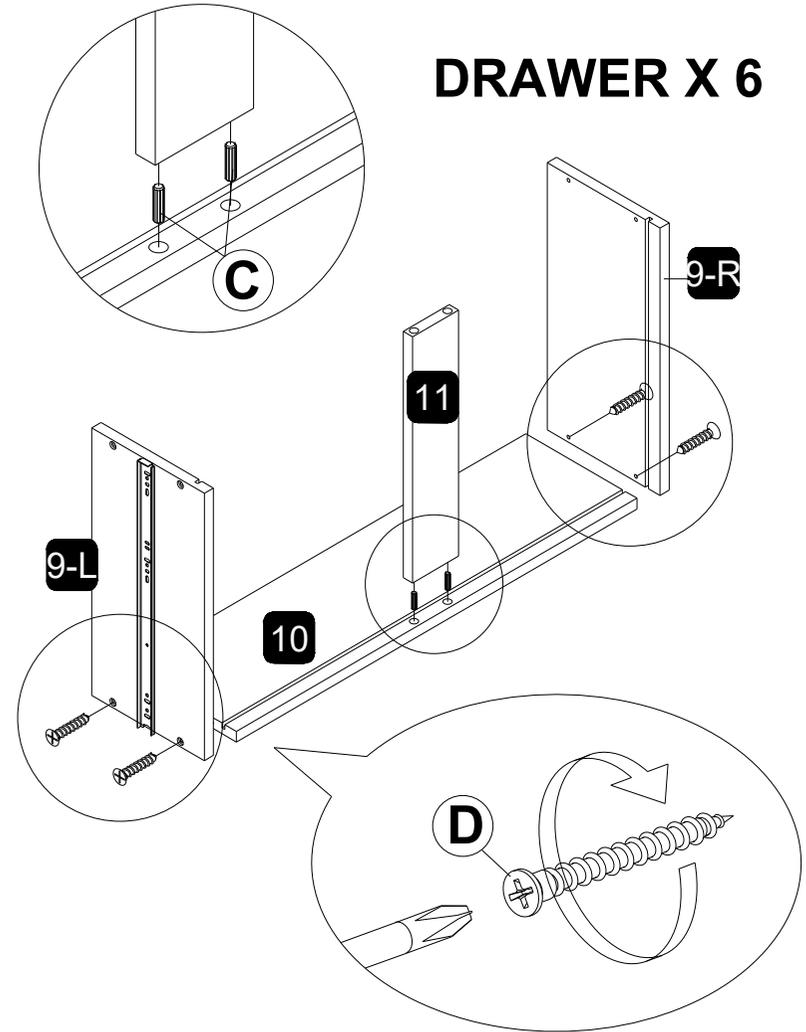


E X 16pcs



C X 12pcs





D X 24pcs






STEP 7

DRAWER X 6

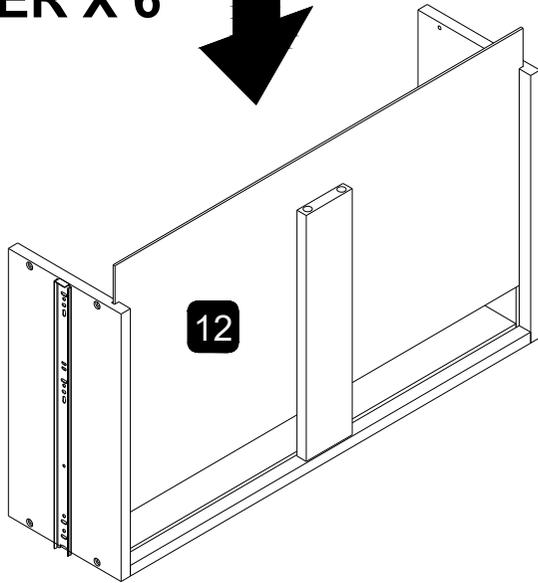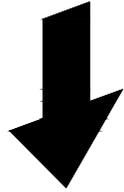

STEP 8


DRAWER X 6

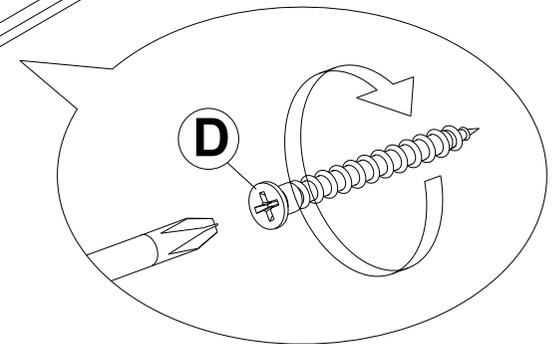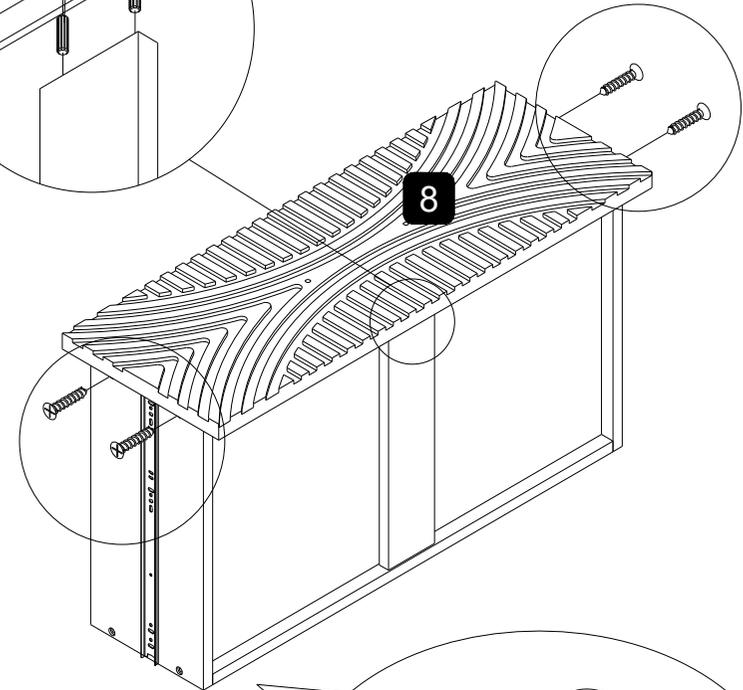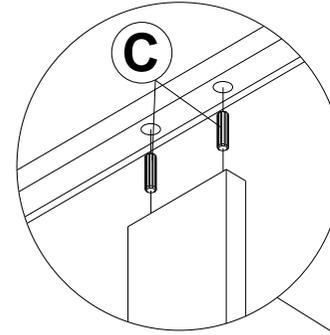

C X 12pcs




D X 24pcs



STEP 9

DRAWER X 6

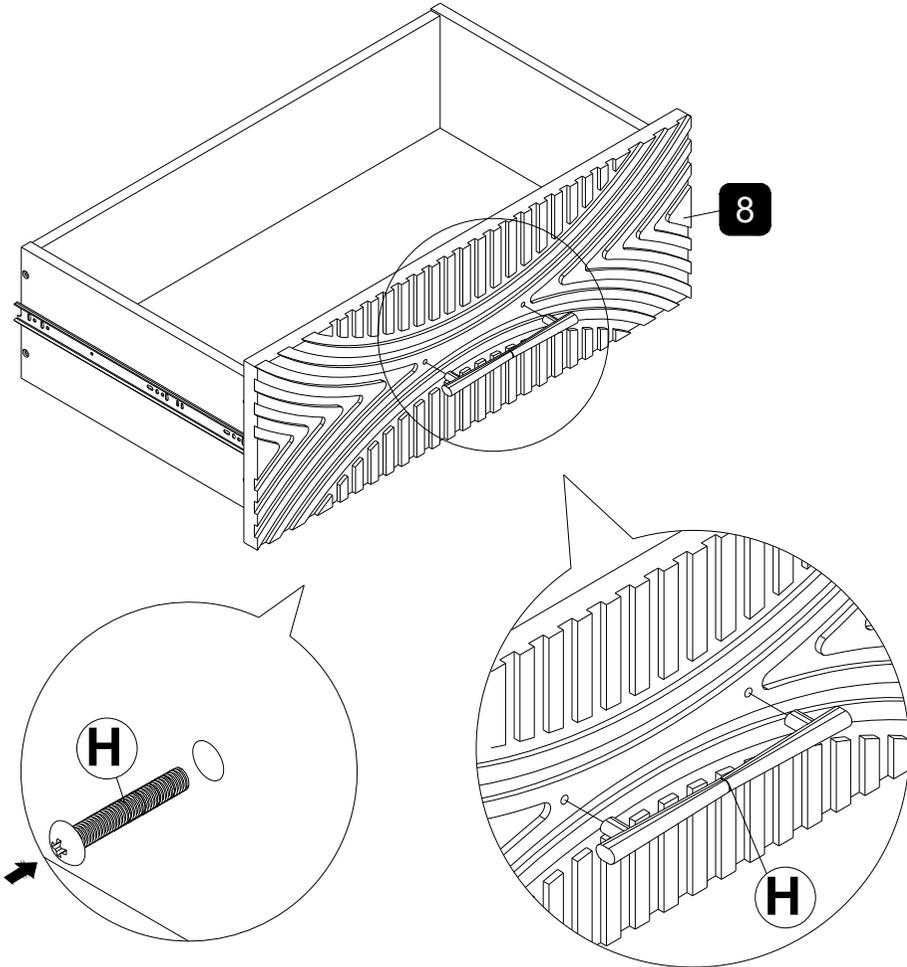

STEP 10

*CONTINUE TO ASSEMBLY
ANTI TIPPING KITS*

