
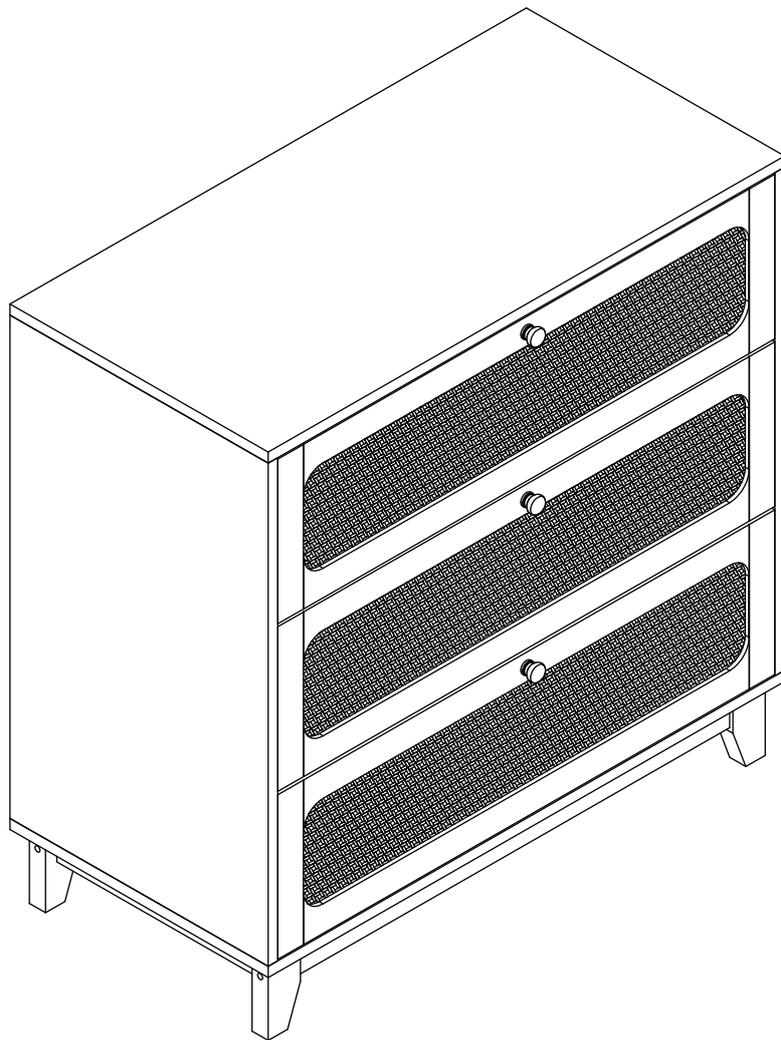





Chest of drawers




ASSEMBLY INSTRUCTION


HARDWARE LIST

<p>A</p> <p>31 PCS</p>		<p>B</p> <p>31 PCS</p>		<p>C</p> <p>22 PCS</p>		<p>D</p> <p>24 PCS</p>	
<p>E</p> <p>42 PCS</p>	 <p>Ø3.5x12mm</p>	<p>F</p> <p>3 PCS</p>	<p>F-1 F-2</p> 	<p>G</p> <p>4 PCS</p>	<p>G-1 G-2</p> 	<p>H</p> <p>8 PCS</p>	
<p>I</p> <p>1 PCS</p>		<p>J</p> <p>4 PCS</p>		<p>K</p> <p>2 PCS</p>	<p>K-1 K-2</p> 	<p>L</p> <p>2 PCS</p>	<p>L-1 L-2</p> 
<p>M</p> <p>19 PCS</p>		<p>N</p> <p>8 PCS</p>	<p>N-1 N-2</p> 	<p>CL</p> <p>3 PCS</p>		<p>CR</p> <p>3 PCS</p>	
<p>DL</p> <p>3 PCS</p>		<p>DR</p> <p>3 PCS</p>					

PARTS LIST

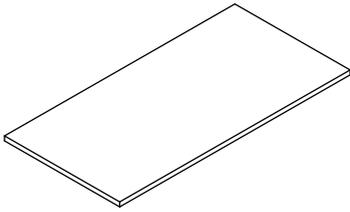


1- 1PCS

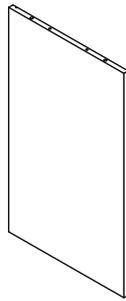

2- 1PCS




3- 1PCS

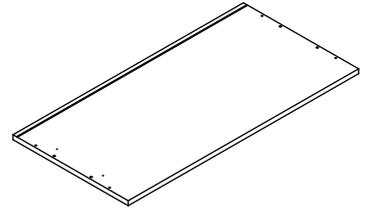


4- 1PCS




5- 1PCS

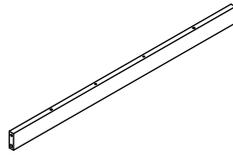

6- 1PCS

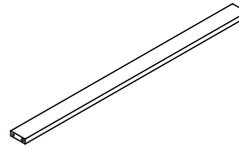


7- 1PCS

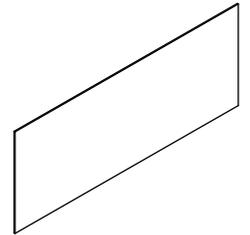

8- 2PCS




9- 2PCS




10- 2PCS




11- 2PCS

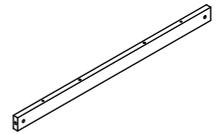


12- 2PCS

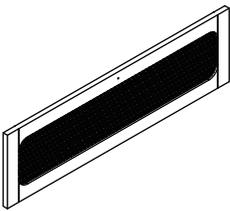


13- 3PCS

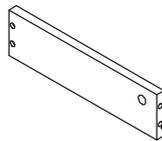


14- 3PCS

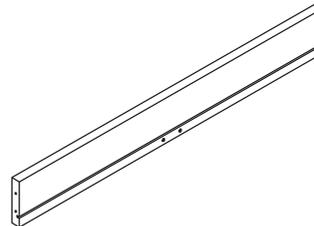


15- 3PCS

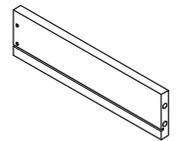

16- 3PCS

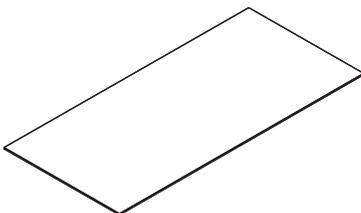

17- 3PCS






18- 3PCS

ASSEMBLY STEPS




STEP 1.

Fix outer drawer runners (CL) and (CR) to part 2 and part 3 using screws (E), as shown.

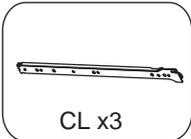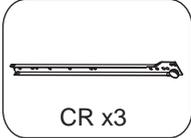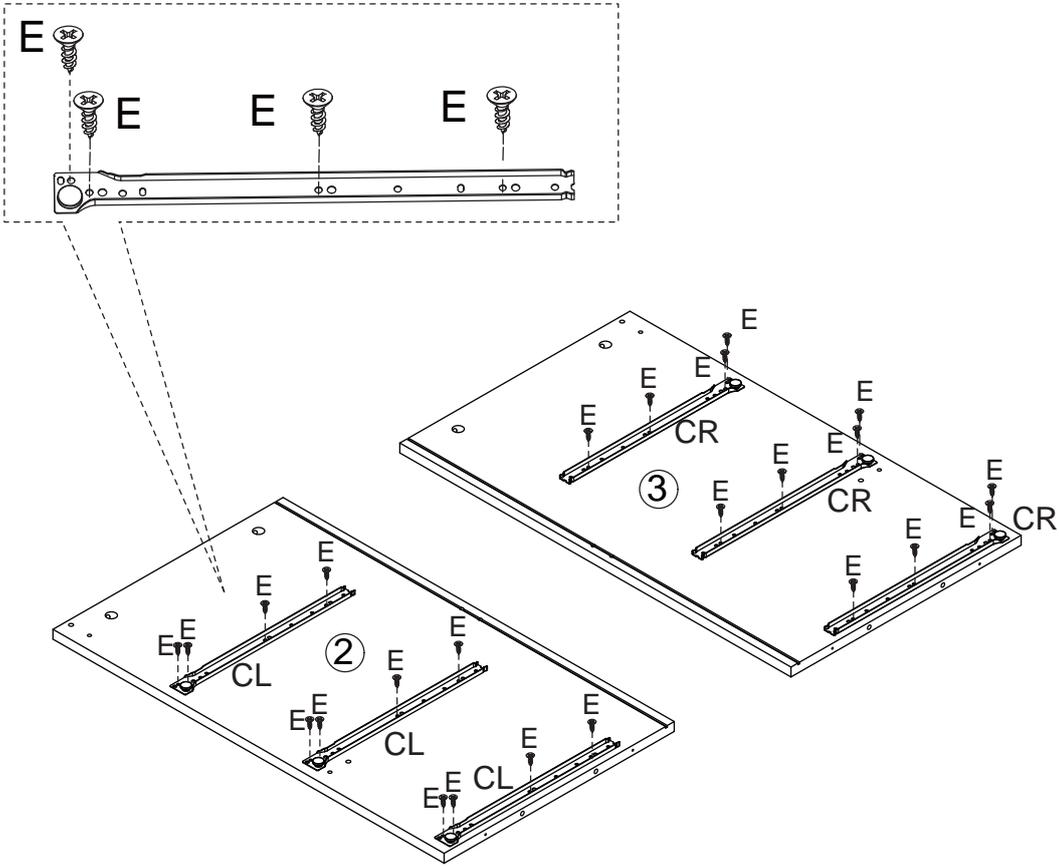

STEP 2.







Insert quickfit screws (A) into parts 2 and 3, as shown.

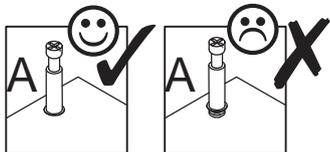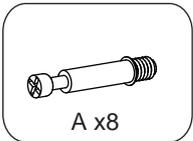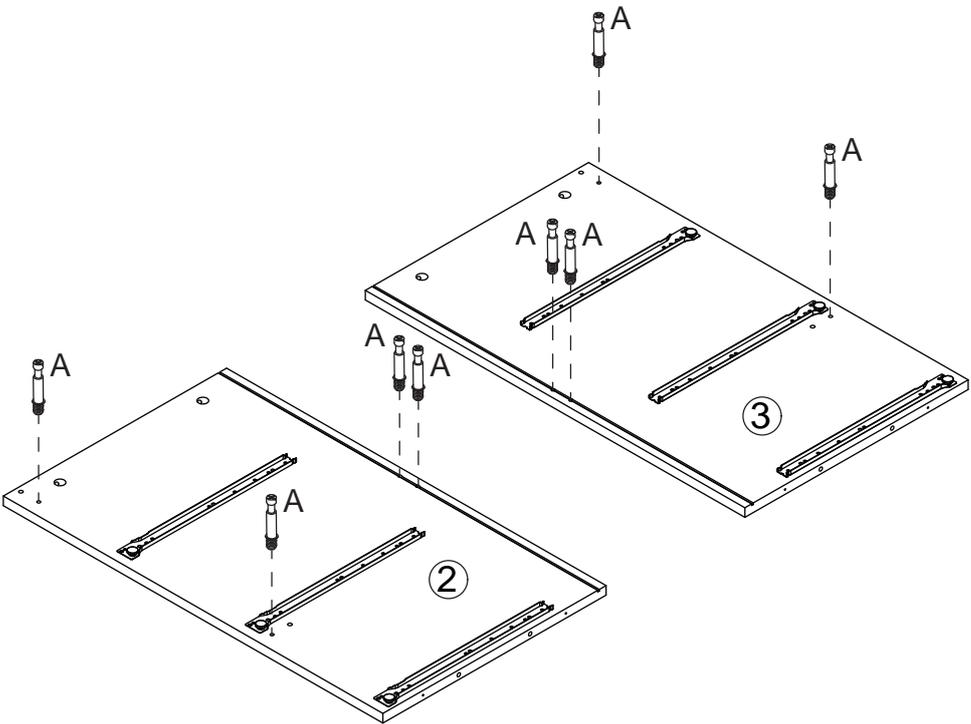

ASSEMBLY STEPS







STEP 3.

Insert cam locks (B) and wooden dowels (C) into parts 5, 6 and 7, as shown.
Attach parts 5, 6 and 7 to part 2.
Turn cam locks clockwise to tighten.

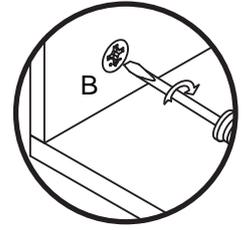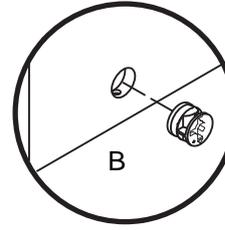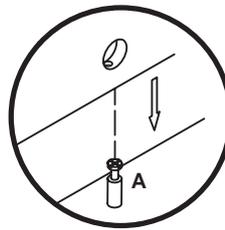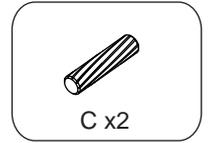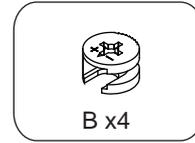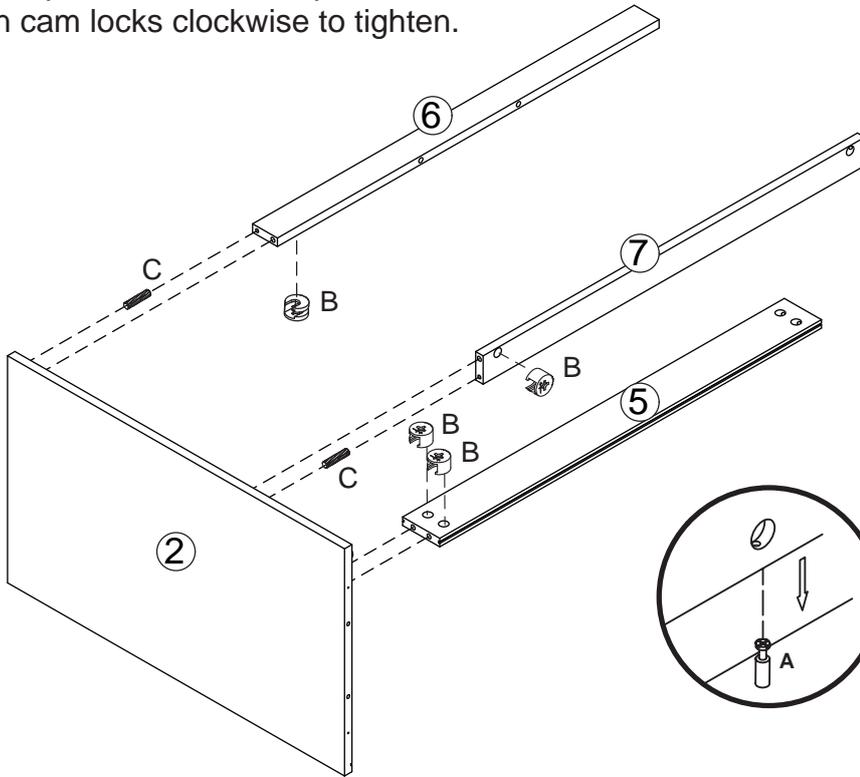

STEP 4.


Insert cam locks (B) and wooden dowels (C) into parts 5, 6 and 7, as shown.
Attach parts 5, 6 and 7 to part 3.
Turn cam locks clockwise to tighten.

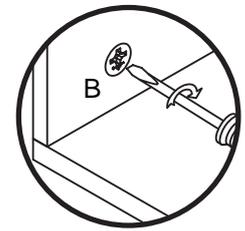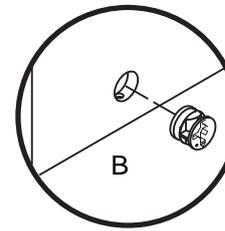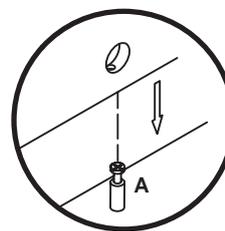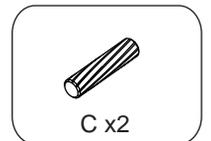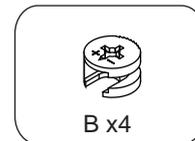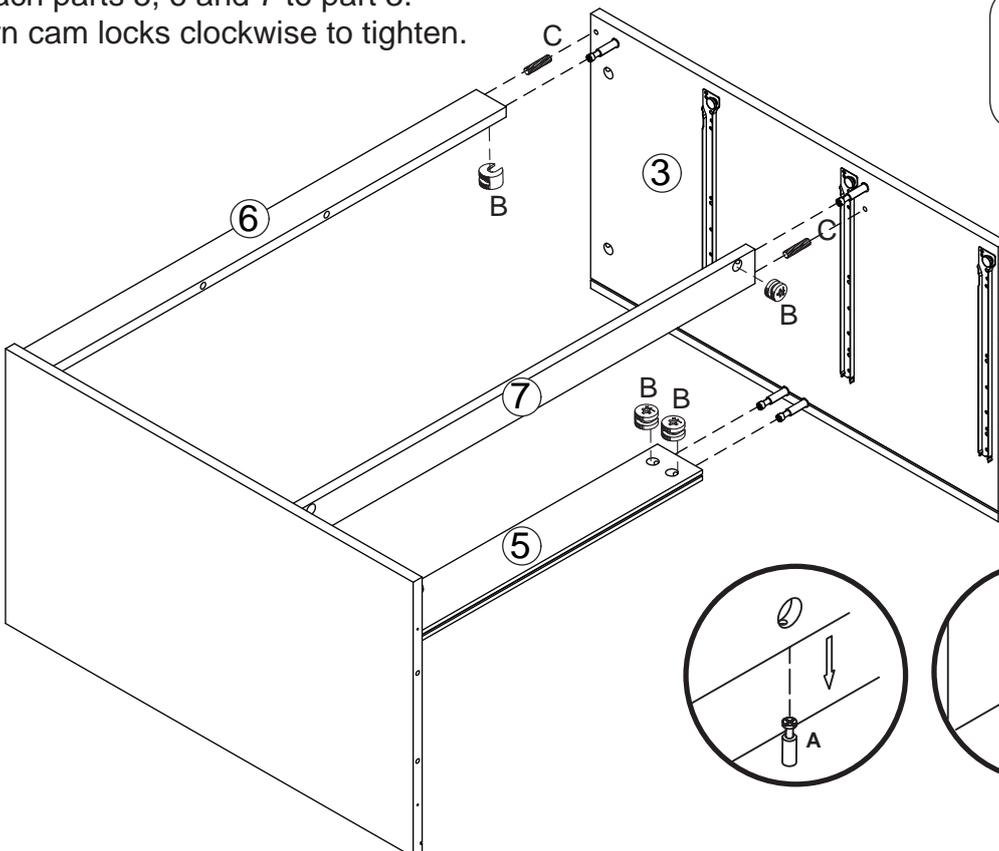

ASSEMBLY STEPS


STEP 5.

Slide part 8 into grooves between parts 2, 5 and 3, as shown.

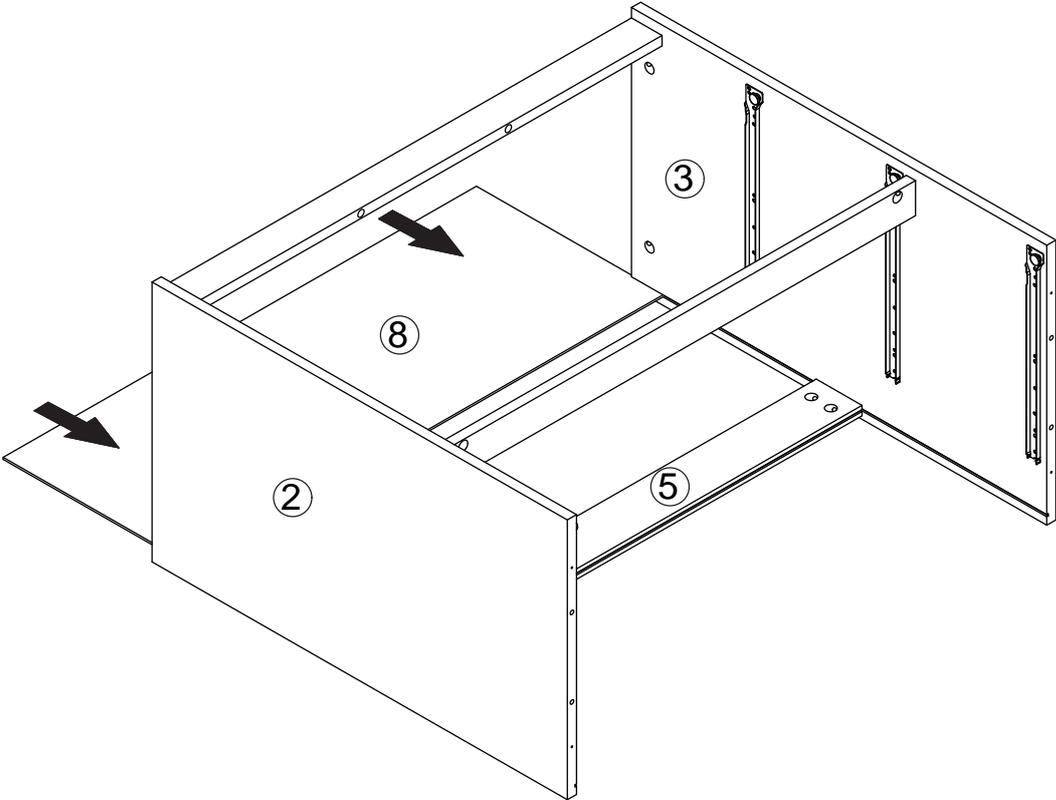

STEP 6.








Insert quickfit screws (A) into part 1, as shown.

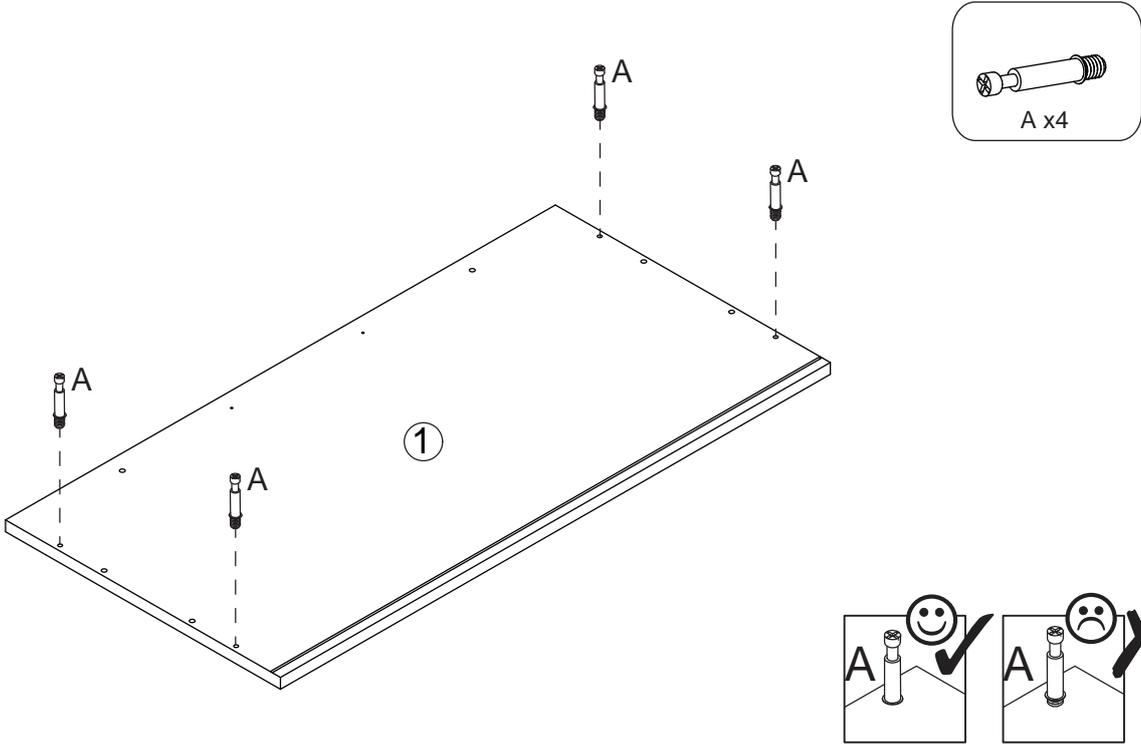

ASSEMBLY STEPS


STEP 7.

Insert cam locks (B) and wooden dowels (C) into parts 2 and 3, as shown.
Fit part 1 to parts 2 and 3, as shown.
Turn cam locks clockwise to tighten.
Secure part 1 to part 6 using screws (D), as shown.

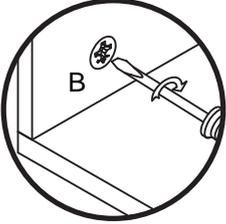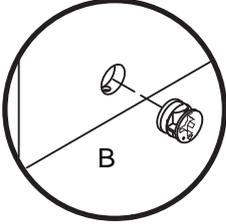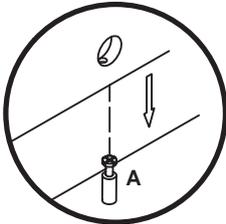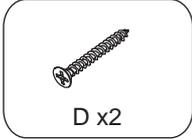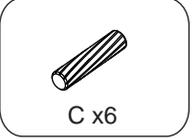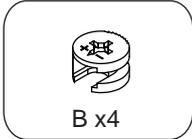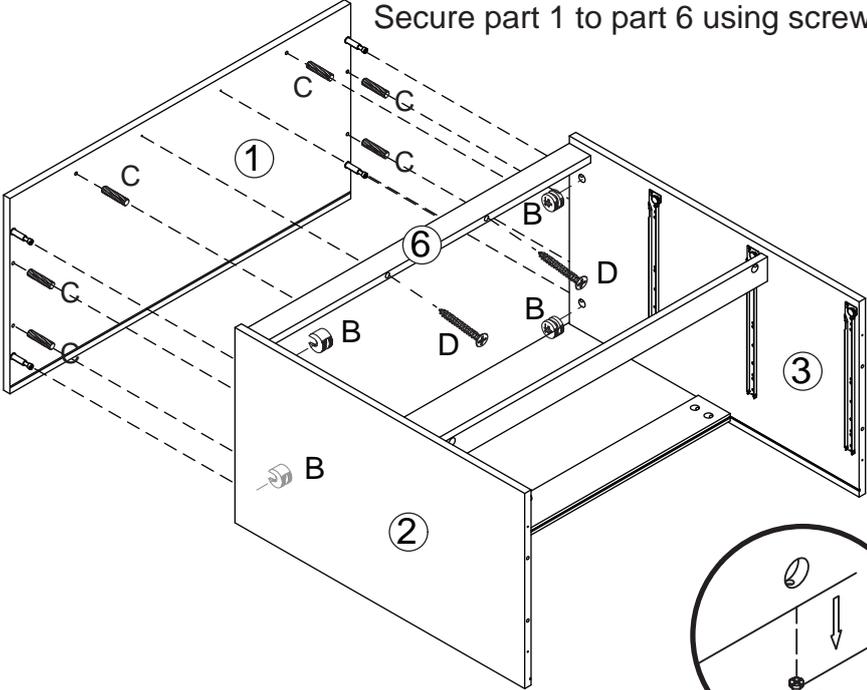

STEP 8.


Slide part 8 into grooves between parts 2, 5 and 3, as shown.

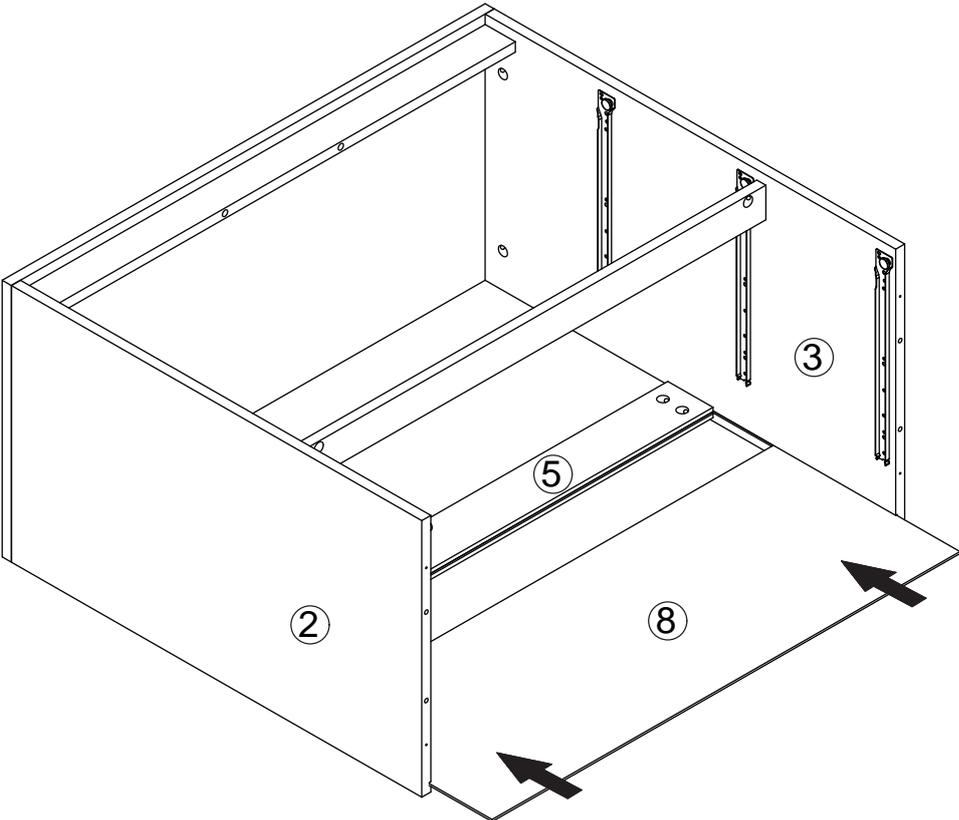

ASSEMBLY STEPS

STEP 9.

Fix part 4 to assembled unit with wooden dowels (C) and screws (D), as shown.

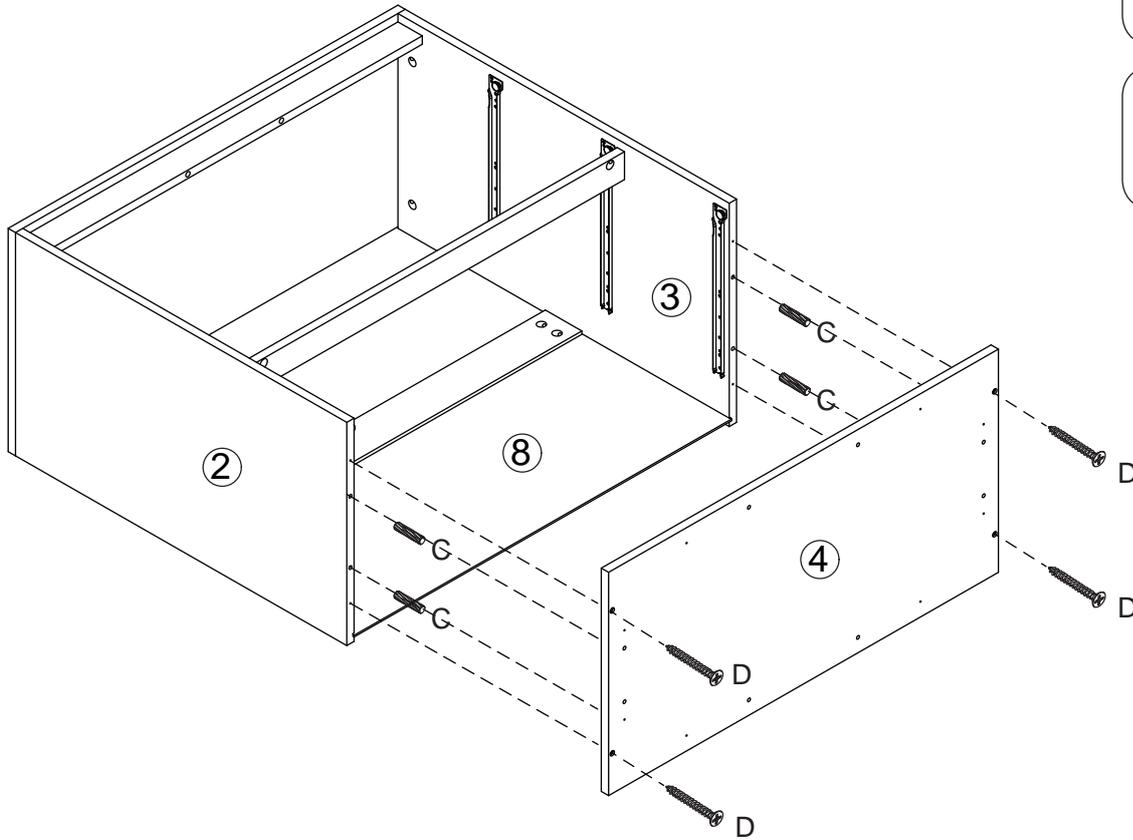



C x4




D x4

STEP 10. **x2**

Insert quickfit screws (A) into parts 9 and 11, as shown.

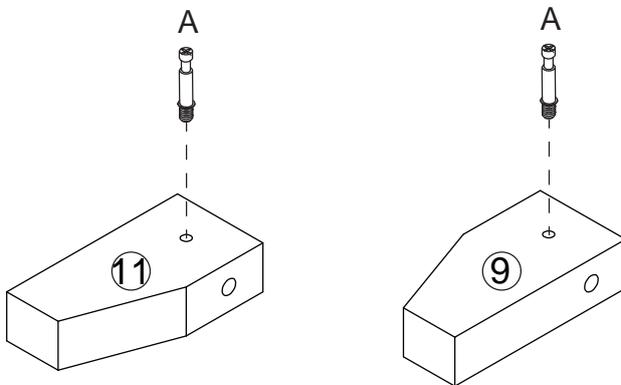


A x4

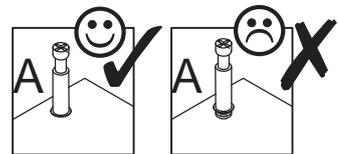

ASSEMBLY STEPS


STEP 11. **x2**

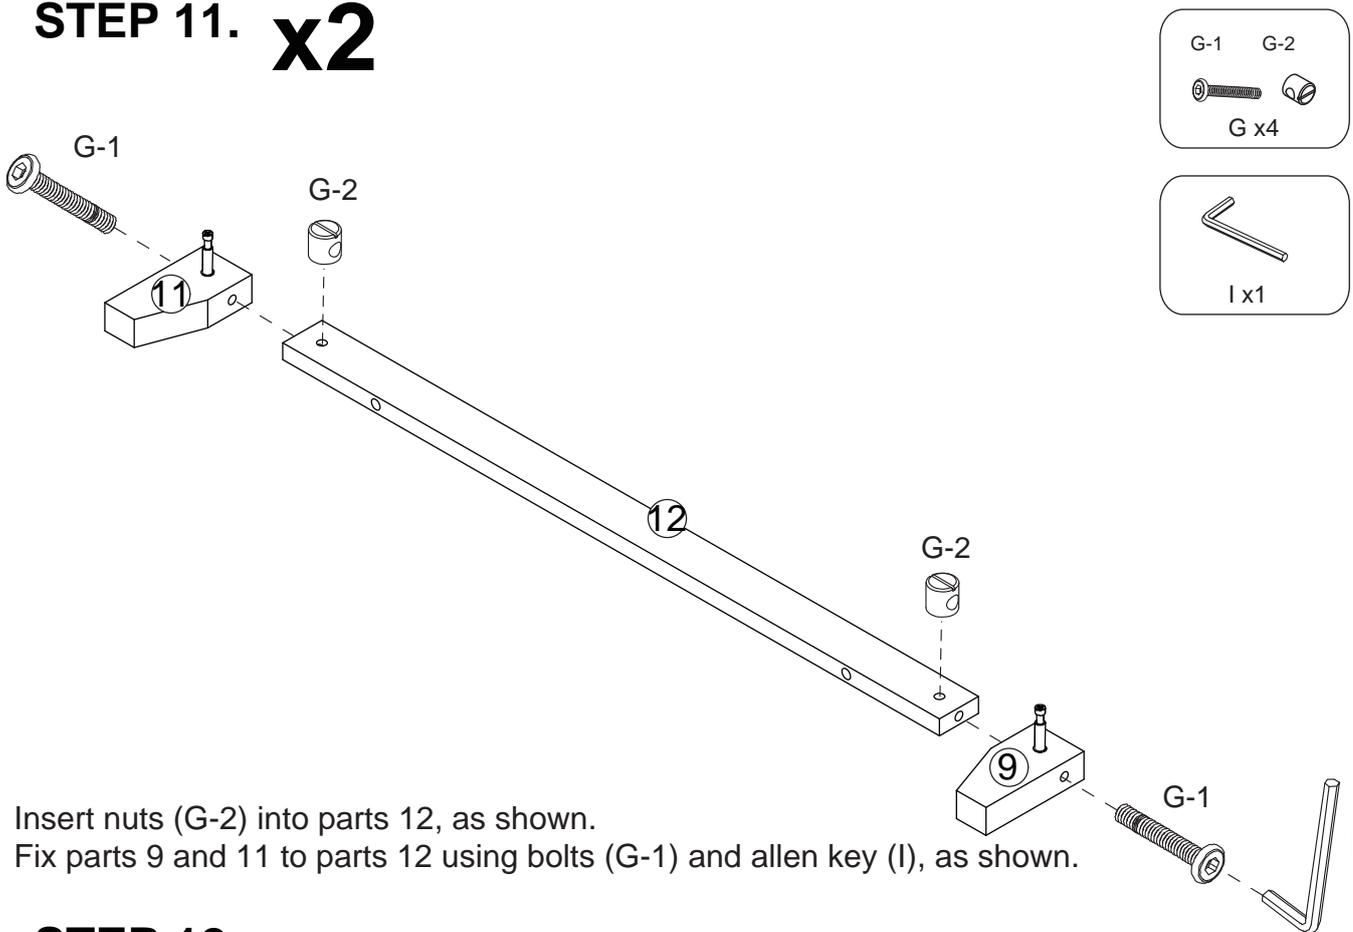

Insert nuts (G-2) into parts 12, as shown.
Fix parts 9 and 11 to parts 12 using bolts (G-1) and allen key (I), as shown.


STEP 12.

Insert cam locks (B) into parts 10.
Fit part 10 to parts 9 and 11, as shown.
Turn cam locks clockwise to tighten.

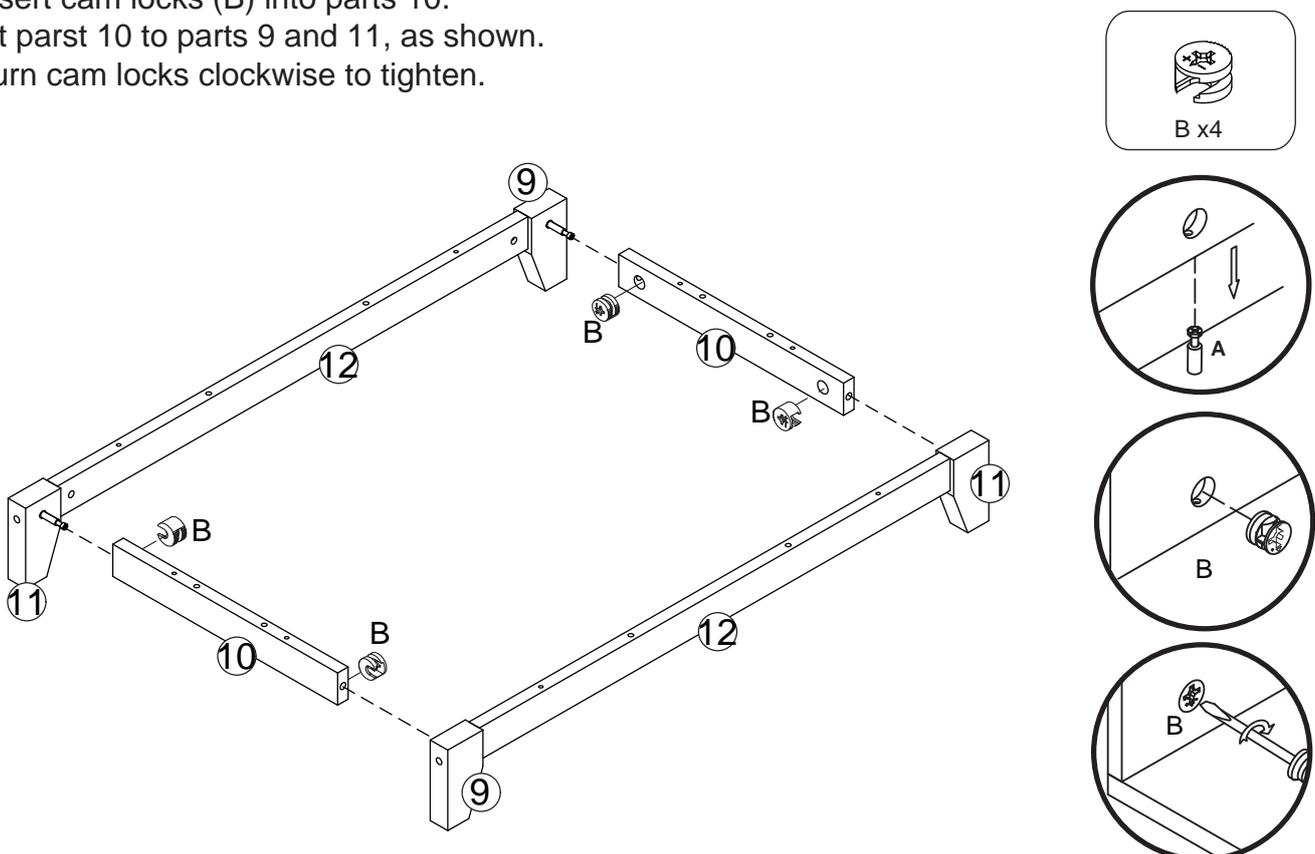

ASSEMBLY STEPS

STEP 13.

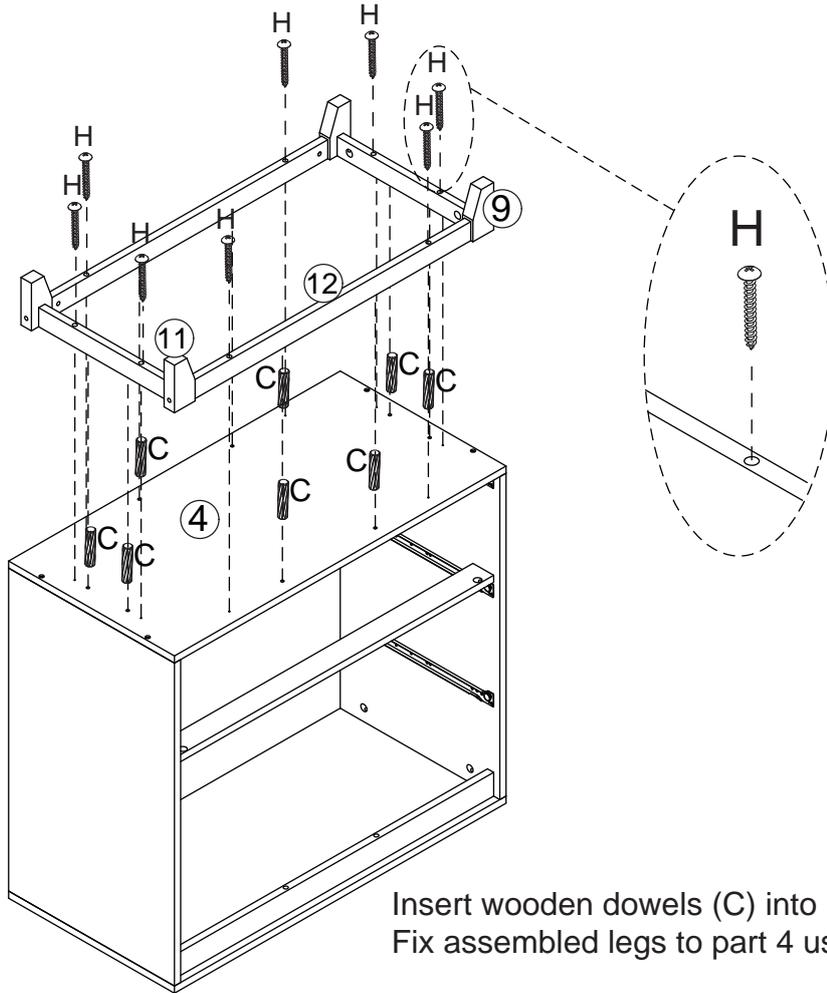

C x8




H x8

Insert wooden dowels (C) into part 4.
Fix assembled legs to part 4 using screws (H), as shown.

STEP 14.

Fix foot nails (J) to legs 9 and 11, as shown.
Attach screw covers (M) to the legs, as shown.

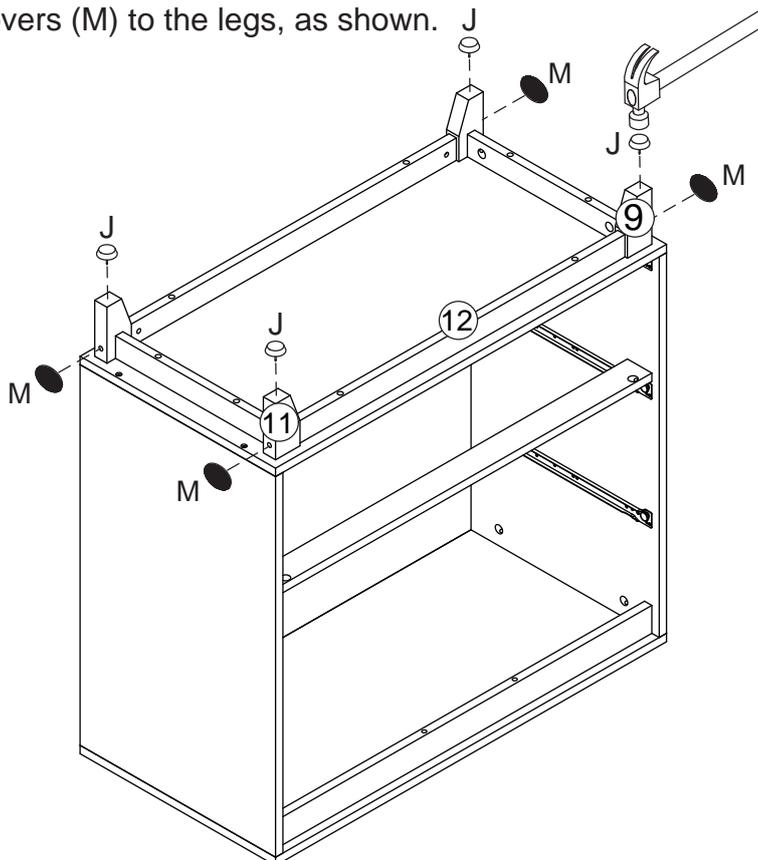

J x4









M x4

ASSEMBLY STEPS


STEP 15. x3

Insert quickfit screws (A) into parts 13, as shown.


Fix handles (F-2) to parts 13 using screws (F-1), as shown.

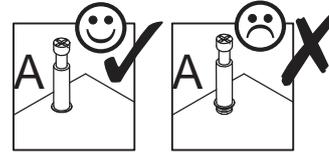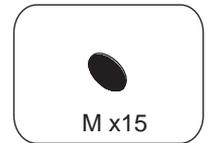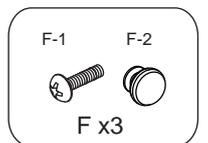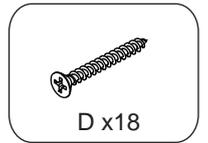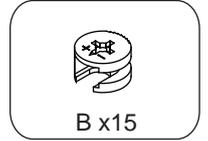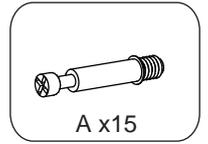

Fix parts 14, 16 and 18 to parts 15 using screws (D), as shown.

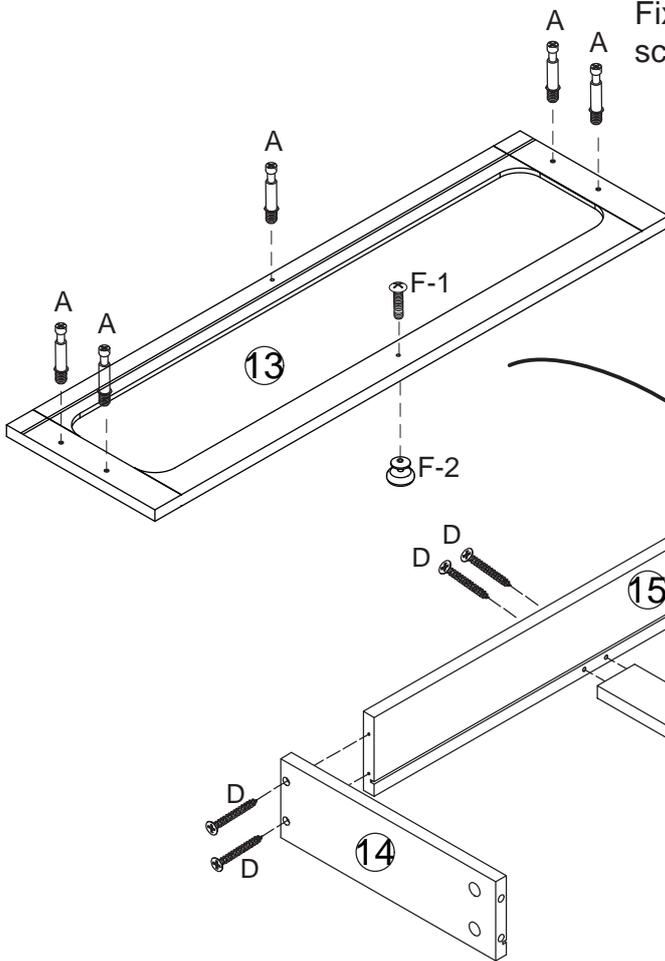

Slide parts 17 into grooves between parts 14, 15 and 16, as shown.




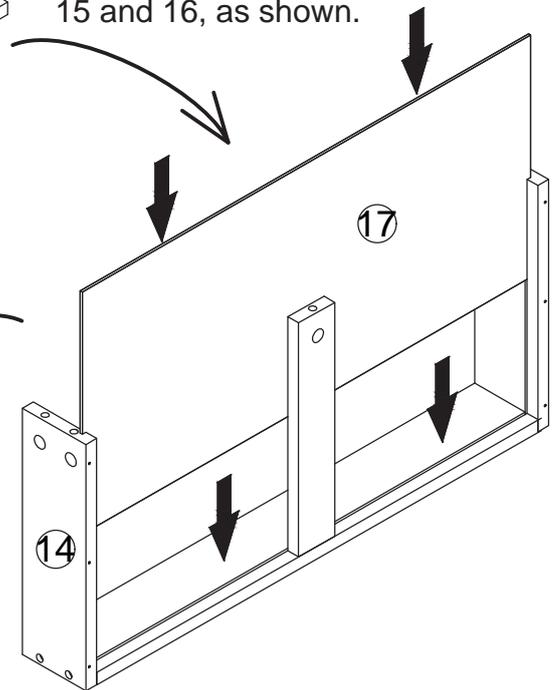


Insert cam locks (B) into parts 14, 16 and 18, as shown.

Fit parts 13 to parts 14, 16 and 18.





Turn cam locks clockwise to tighten.

Attach screw covers (M) to drawers, as shown.

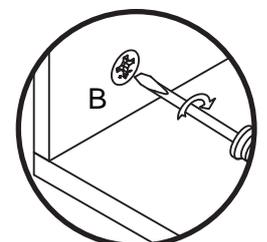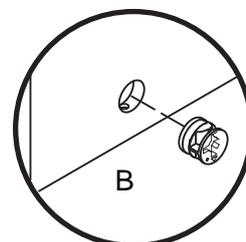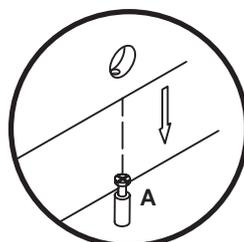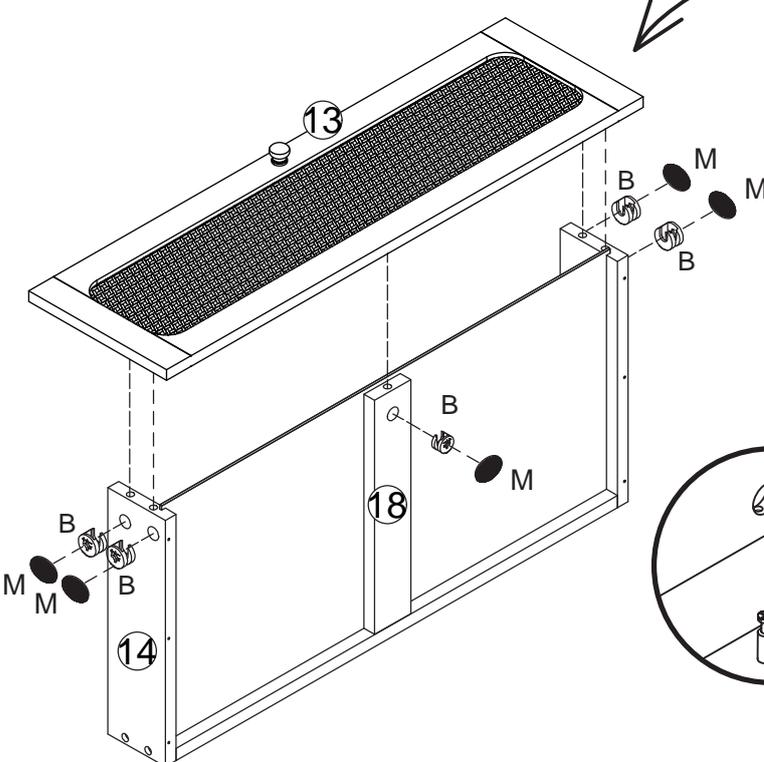

ASSEMBLY STEPS



STEP 16. **x3**

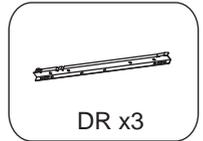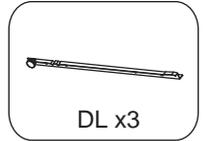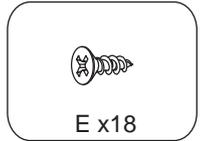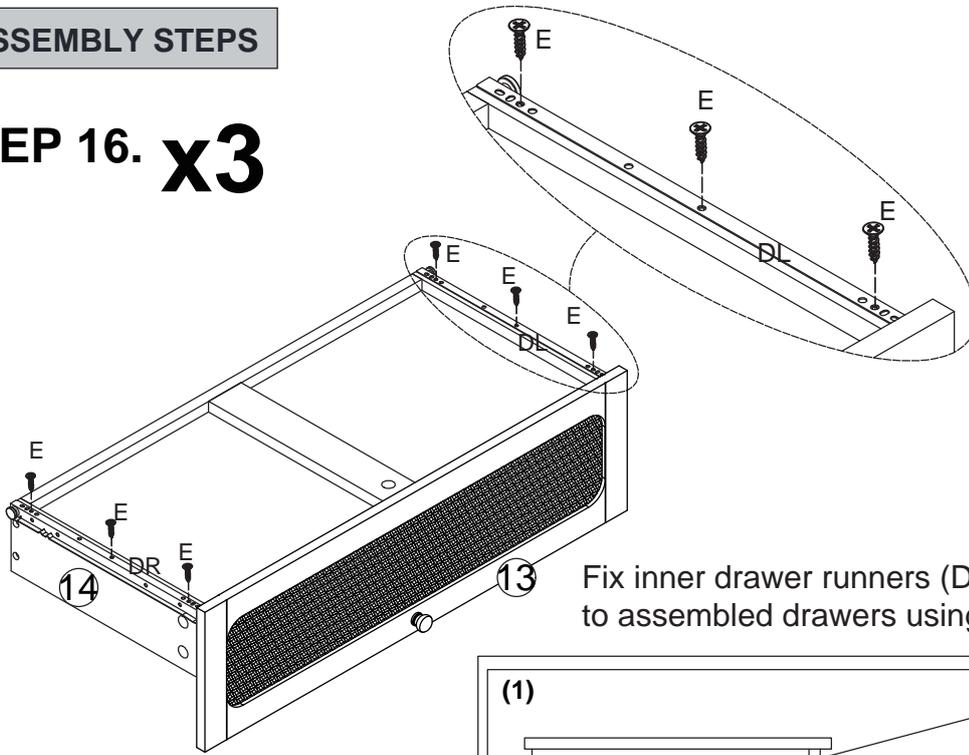

Fix inner drawer runners (DL) and (DR) to assembled drawers using screws (E), as shown.

STEP 17.


Fit drawers into assembled unit, as shown.

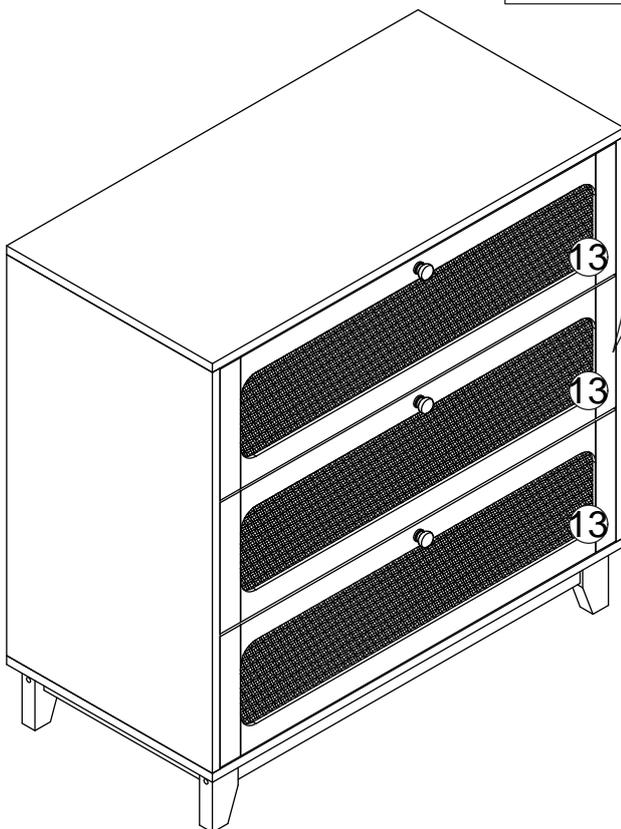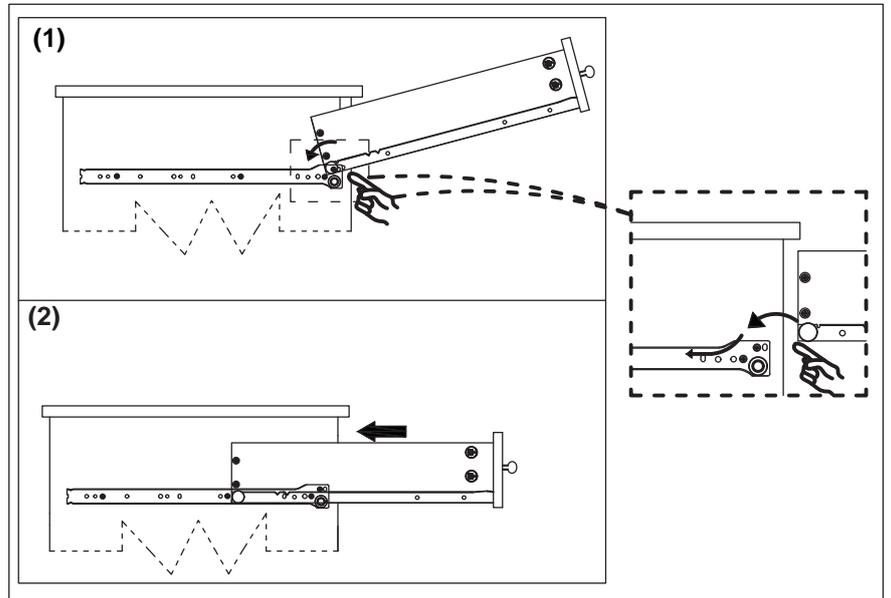

ASSEMBLY STEPS

STEP 18.

Fix wall straps (K-1) on to parts 2 and 3 using screws (K-2), as shown.
Fix corner brackets (N-2) to parts 8 using screws (N-1), as shown.

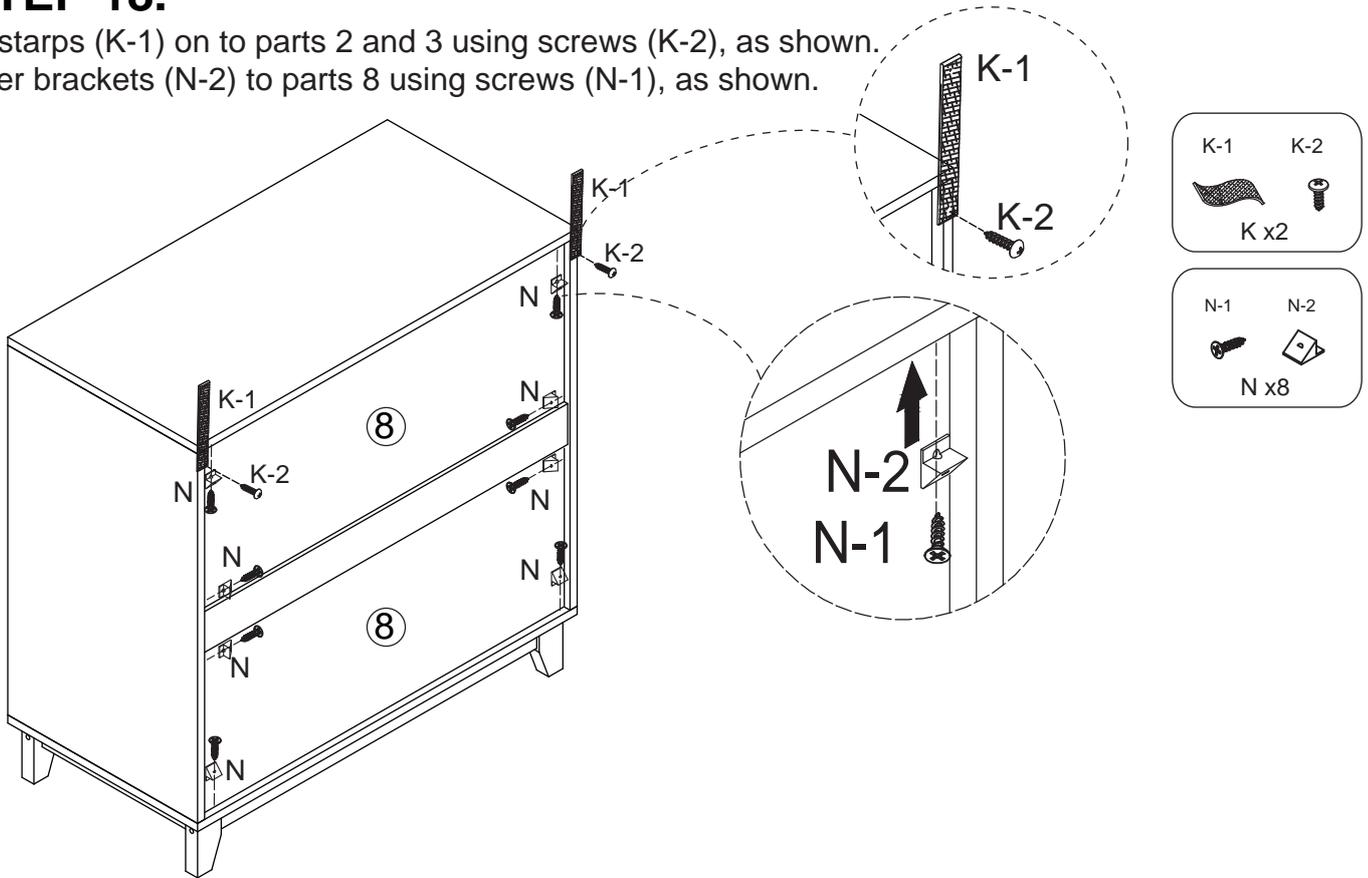

STEP 19.

For extra stability, you must fix your chest of drawers to the wall using hardware (L-1 and L-2), as shown.
Screws (L-2) are fixed through wall straps and into the wall plugs (L-1).
Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

