
## ASSEMBLY INSTRUCTION SKU# 97522

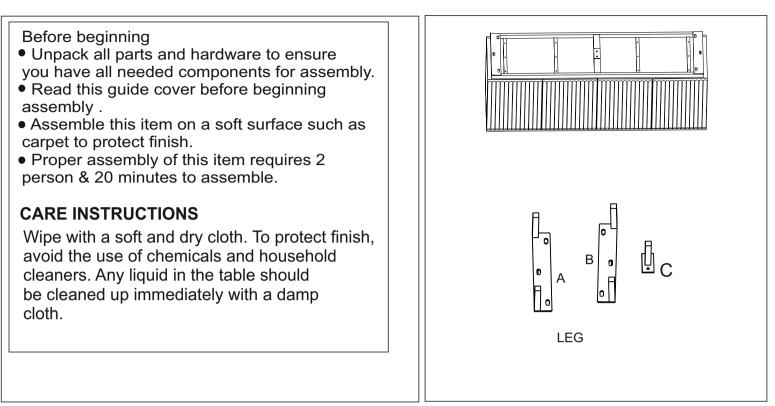

HOW	то	ASSEMBLE

- STEP-1 Place the sideboard upside on rug and match marking A with A and B With B and C with C respectively.
- STEP-2 Insert allen bolt E with spring washer G and flat washer F then tighten with allen key D.
- STEP-3 Turn the sideboard upside down, sideboard ready to use.

No.	Sketch	Description.	Size (IN)	Qty.	Ext.
D		ALLEN KEY	0.19"	1	0
E		ALLEN BOLT	0.31X0.78"	08	1
F	0	WASHER	0.35X1 ''	08	1
G	$\bigcirc$	SPRING WASHER	0.35X0.5 <sup>"</sup>	08	1
Н		SCREWDRIVER		1	0

