








PROGRESSIVE FURNITURE

A780-71 DESK

ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment, clarify and count all hardware and compare with the hardware list below. Do not completely tighten until the item has been fully assembled.

HARDWARE LIST				PARTS LIST			
A		ALLEN WRENCH	4 mm	1PC	1		Brace 1PC
B		BOLT	ø1/4"×2 1/4"	4 PCS	2		Top 1PC
C		BOLT	ø1/4"× 3"	6 PCS	3		Leg 2PCS

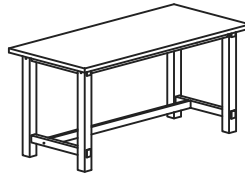

*Front Side see
Back Side

Begin by placing the desk top upside down on a non-abrasive surface.

Step 1. Place legs in numbered position as shown in Diagram 1. Both legs are numbered for easy set up.

Step 2. Fasten both legs to top using parts A & B as shown in Diagram 2. Do not tighten bolts.







Step 3. Fasten legs to top using parts A & C as shown in Diagram 2. Do not tighten bolts.


PROGRESSIVE FURNITURE

A780-71 DESK

ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment, clarify and count all hardware and compare with the hardware list below. Do not completely tighten until the item has been fully assembled.

HARDWARE LIST				PARTS LIST			
A		ALLEN WRENCH	4 mm	1PC	1		Brace 1PC
B		BOLT	ø1/4"×2 1/4"	4 PCS	2		Top 1PC
C		BOLT	ø1/4"× 3"	6 PCS	3		Leg 2PCS

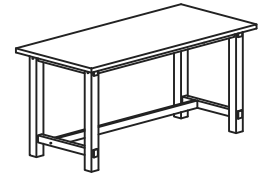

*Front Side see
Back Side

Begin by placing the desk top upside down on a non-abrasive surface.

Step 1. Place legs in numbered position as shown in Diagram 1. Both legs are numbered for easy set up.

Step 2. Fasten both legs to top using parts A & B as shown in Diagram 2. Do not tighten bolts.







Step 3. Fasten legs to top using parts A & C as shown in Diagram 2. Do not tighten bolts.


PROGRESSIVE FURNITURE

A780-71 DESK

ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment, clarify and count all hardware and compare with the hardware list below. Do not completely tighten until the item has been fully assembled.

HARDWARE LIST				PARTS LIST			
A		ALLEN WRENCH	4 mm	1PC	1		Brace 1PC
B		BOLT	ø1/4"×2 1/4"	4 PCS	2		Top 1PC
C		BOLT	ø1/4"× 3"	6 PCS	3		Leg 2PCS

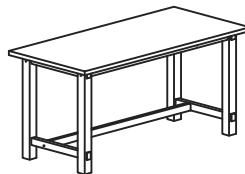

*Front Side see
Back Side

Begin by placing the desk top upside down on a non-abrasive surface.

Step 1. Place legs in numbered position as shown in Diagram 1. Both legs are numbered for easy set up.

Step 2. Fasten both legs to top using parts A & B as shown in Diagram 2. Do not tighten bolts.







Step 3. Fasten legs to top using parts A & C as shown in Diagram 2. Do not tighten bolts.


PROGRESSIVE FURNITURE

A780-71 DESK

ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment, clarify and count all hardware and compare with the hardware list below. Do not completely tighten until the item has been fully assembled.

HARDWARE LIST				PARTS LIST			
A		ALLEN WRENCH	4 mm	1PC	1		Brace 1PC
B		BOLT	ø1/4"×2 1/4"	4 PCS	2		Top 1PC
C		BOLT	ø1/4"× 3"	6 PCS	3		Leg 2PCS

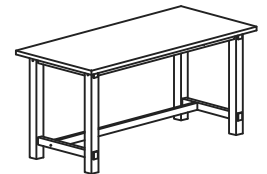

*Front Side see
Back Side

Begin by placing the desk top upside down on a non-abrasive surface.

Step 1. Place legs in numbered position as shown in Diagram 1. Both legs are numbered for easy set up.

Step 2. Fasten both legs to top using parts A & B as shown in Diagram 2. Do not tighten bolts.

Step 3. Fasten legs to top using parts A & C as shown in Diagram 2. Do not tighten bolts.

Step 4. Assemble the brace by lining up the hole in the leg with the insert in the brace. Use the parts A & B as shown in Diagram 3. Tighten all Bolts.

Step 5. Turn the Desk right side up.

Diagram 1

*Make sure Leg is facing correct location with hole in back.

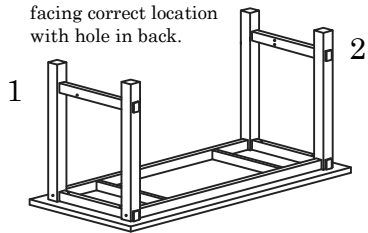


Diagram 2



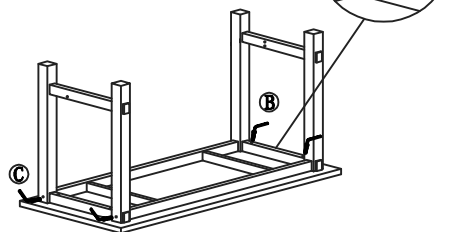


Diagram 3

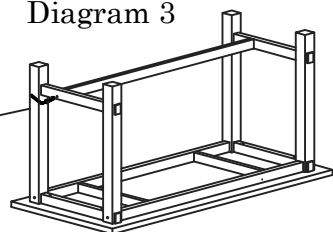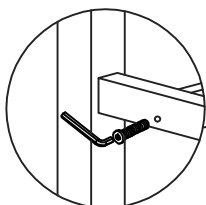

*Back Side see Front Side

Step 4. Assemble the brace by lining up the hole in the leg with the insert in the brace. Use the parts A & B as shown in Diagram 3. Tighten all Bolts.

Step 5. Turn the Desk right side up.

Diagram 1

*Make sure Leg is facing correct location with hole in back.

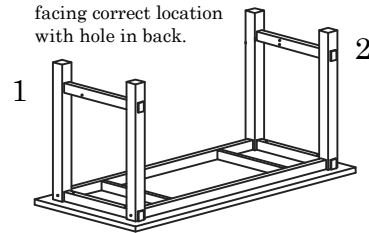


Diagram 2



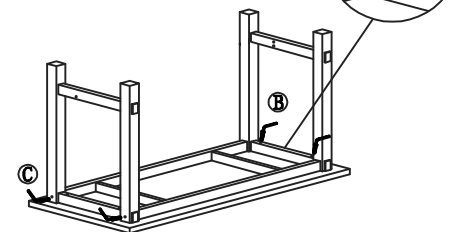


Diagram 3

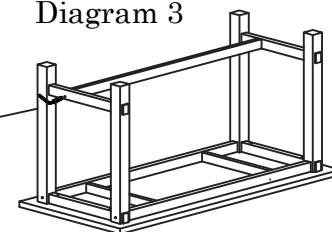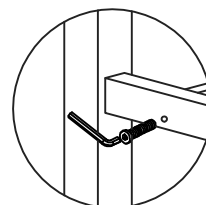

*Back Side see Front Side

Step 4. Assemble the brace by lining up the hole in the leg with the insert in the brace. Use the parts A & B as shown in Diagram 3. Tighten all Bolts.

Step 5. Turn the Desk right side up.

Diagram 1

*Make sure Leg is facing correct location with hole in back.

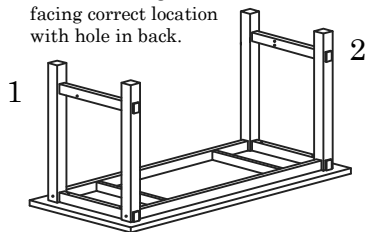


Diagram 2



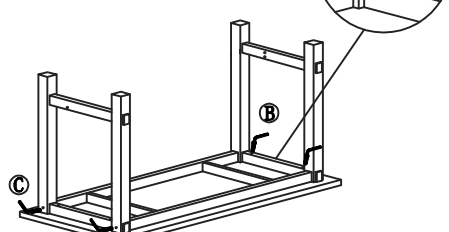


Diagram 3

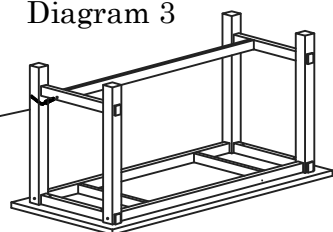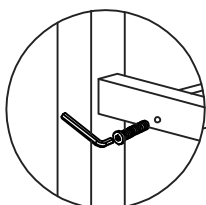

*Back Side see Front Side

Step 4. Assemble the brace by lining up the hole in the leg with the insert in the brace. Use the parts A & B as shown in Diagram 3. Tighten all Bolts.

Step 5. Turn the Desk right side up.

Diagram 1

*Make sure Leg is facing correct location with hole in back.

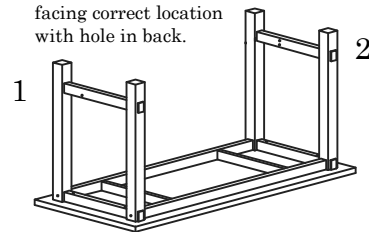


Diagram 2



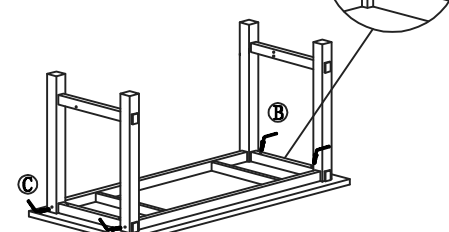


Diagram 3

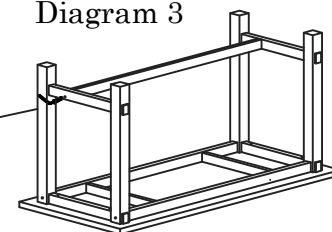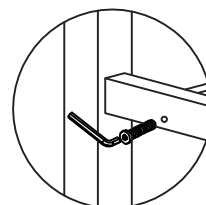

*Back Side see Front Side