
Progressive ® furniture

ASSEMBLE INSTRUCTION

Model No: T252-04 END TABLE

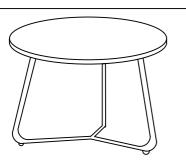


- MPORTANT NOTE:


 Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children!
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- Don't attempt to modify parts!

| PART LIST | | | | | |
|-----------|-------------|------------|---------|--|--|
| NO | DESCRIPTION | | QTY/PCS | | |
| 1 | | TABLE TOP | 1 PC | | |
| 2 | 1 | CENTER BAR | 2 PC | | |
| 3 | LLL | TABLE LEG | 3 PC | | |

| PART LIST | | | | | |
|-----------|-------------|-------------------------|---------|--|--|
| NO | DESCRIPTION | | QTY/PCS | | |
| A | | BOLT M6 x 35MM | 3 PC | | |
| В | | BOLT M6 x 15MM | 6 PC | | |
| С | | ALLEN KEY M4 x 60MM | 1 PC | | |
| D | © | SPRING WASHER M6 x 12MM | 3 PC | | |
| Е | 0 | FLAT WASHER M6 x 19MM | 3 PC | | |
| F | Ø | LEVELLER | 3 PC | | |



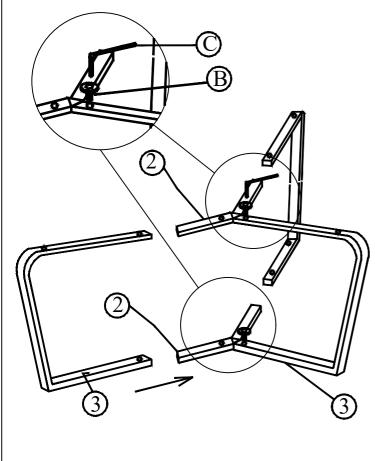

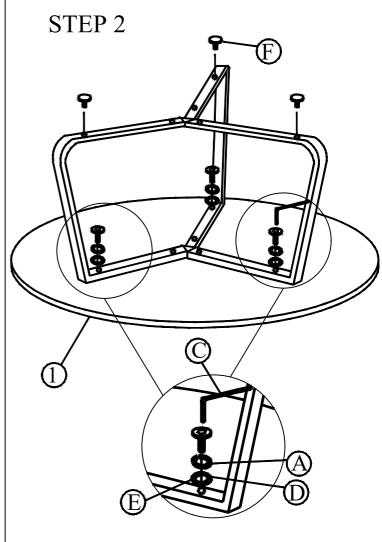

MADE IN MALAYSIA PAGE 1 OF 1