

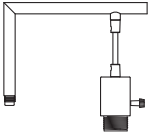








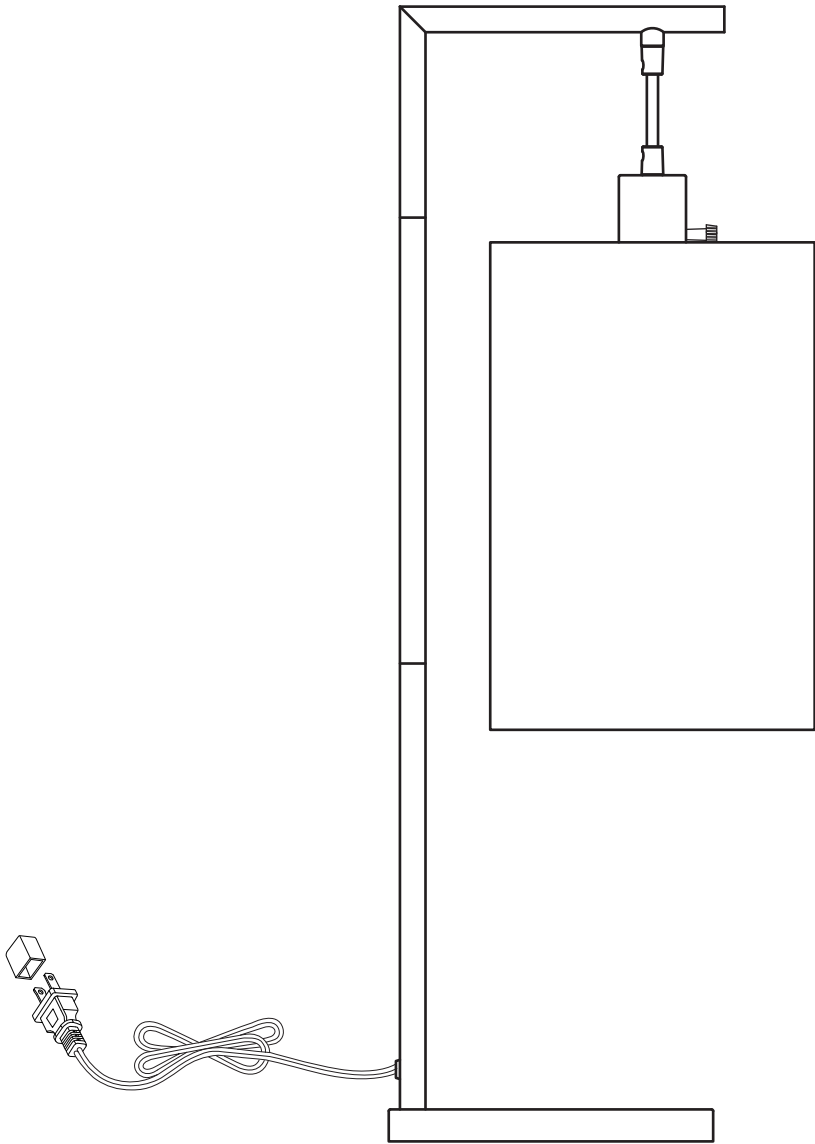
ASSEMBLY INSTRUCTION FOR

ADEO 5583 Antq Brass


Vendor Code: ADEO Model# HW-T5583 SKU# 90155904

Included parts diagram:

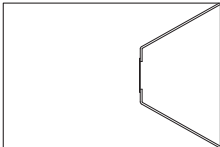
A		Tube	1 PC
B		Tube	1 PC
C		Tube	1 PC
D		Base	1 PC
E		Washer	1 PC
F		Screw	1 PC
G		Wrench	1 PC
H		Shade	1 PC
I		Socket ring	1 PC




1. Screw tube (A), (B) and (C) until tight. You may need to pull out excess cord gently from the cord outlet of tube (C).

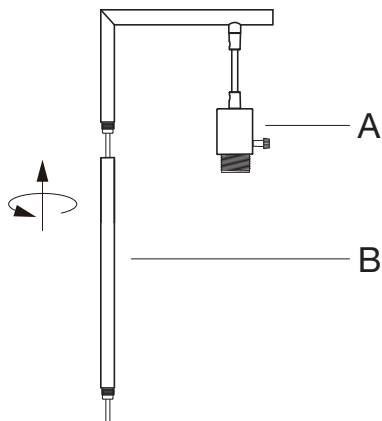


2. Unscrew and remove pre-set washer (E) and screw (F) from tube (C).

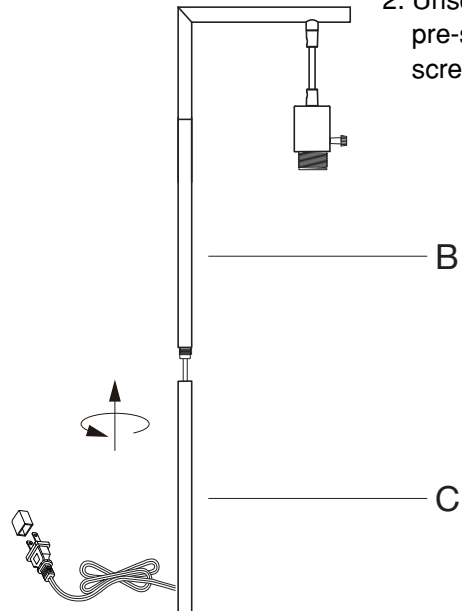

3. Insert the tube (C) onto the base and securing it by tightening washer (E) and screw (F) by wrench (G). Attention: Be sure to align the consistency of the curve on the arm.

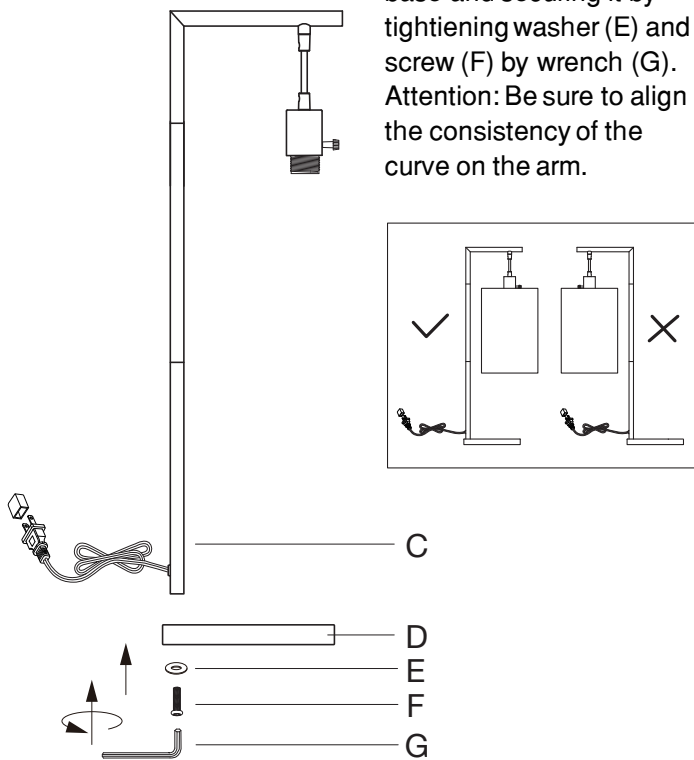

4. Socket rings (I) comes pre-assembled to the sockets. Before placing the shade onto the socket, please unscrew this socket ring.
5. Install shade (H) onto tube (A) and tighten it with socket ring (I).

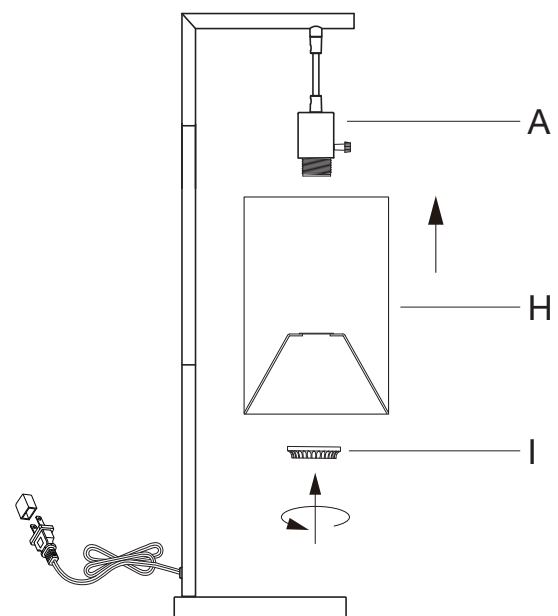

CARE

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.

CARE & MAINTENANCE:

Do not use polishes or cleaners on your lamp.

Unplug lamp, clean with a soft, dry cloth.



IMPORTANT SAFETY INSTRUCTIONS:

This portable floor lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: 3 x 9 watt maximum E26 LEDs (bulbs included) or 3 x 100 watt maximum incandescent bulbs (bulbs not included).