


ASSEMBLY INSTRUCTION

ITEM# CVNZAM011

Take all parts out of box, be careful not to twist the cord. Put them on a flat ground, following below steps for assembly. Don't insert any plug into outlet before completion.

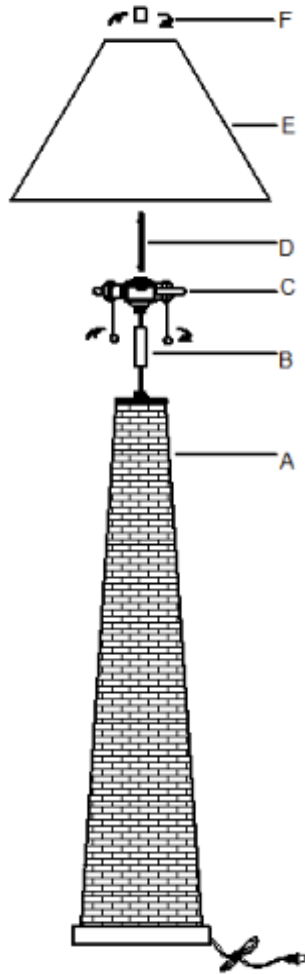

1. Fasten The Lamp body A Into The Base.

Be careful not to Twist The Power Cord.

2. Put The Lamp Body B Into The Lamp A.

3. Put The Lamp Body C Into The Lamp B.

4. Put The Lamp Body D Into The Lamp C.

5. Place The Shade E Onto The Pipe D And Tighten The Finial F.