


ASSEMBLY INSTRUCTIONS FOR RODEO FLOOR LAMP

3349-26 1.0

Model # 3349-26

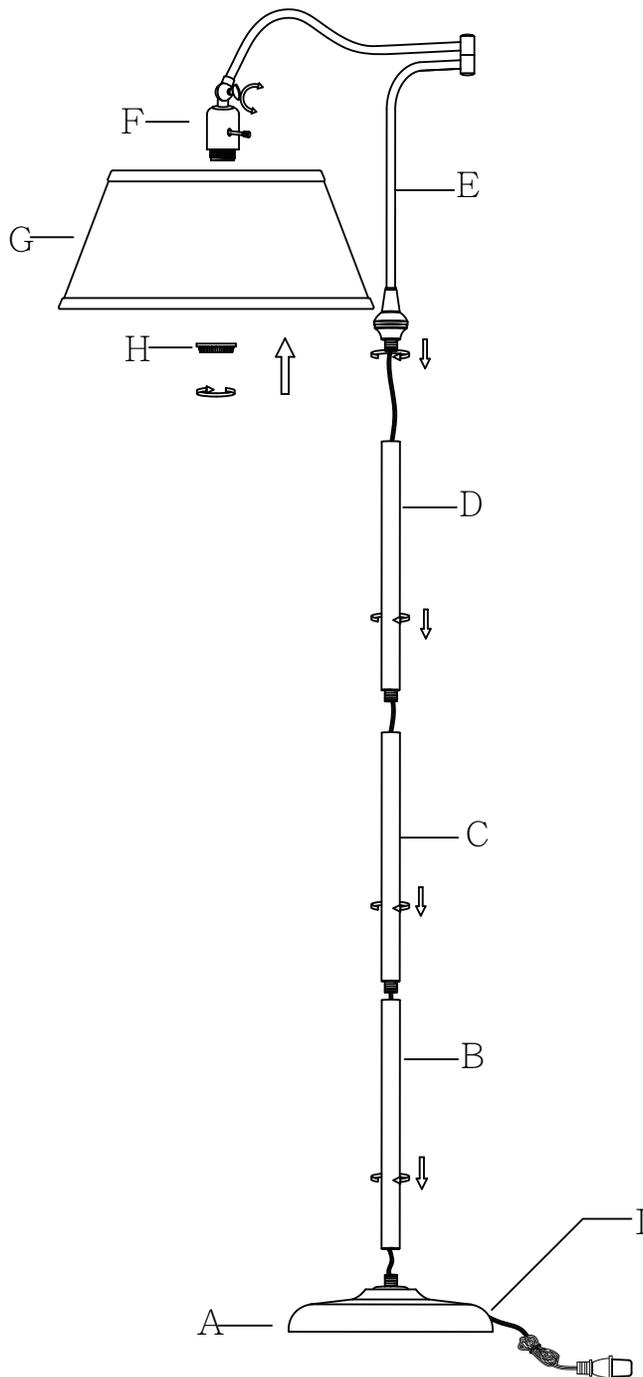

1. Remove all parts and lay on a flat surface.
2. Screw pole (B) clockwise into base (A) to tighten.
3. Screw pole (C) clockwise into pole (B) to tighten.
4. Screw pole (D) clockwise into pole (C) to tighten.
5. Screw parts (E) clockwise into pole (D) to tighten and get the remaining slack of the power cord out carefully from the point (I).
6. Set fabric shade (G) on lamp holder (F) and tighten clockwise socket ring (H) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150 watt 3-way incandescent or
42 watt CFL equivalent .
(not included)