




ASSEMBLY INSTRUCTION FOR


3 Arm Astoria Arc

Vendor Code: ADEO Model# HW-F2314XR SKU# 90231742

Included parts diagram:

A		Arm + Socket	1PC
B		Arm + Socket	1PC
C		Arm + Socket	1PC
D		metal collar	5PCS
E		Tube	1PC
F		Tube	1PC
G		Tube	1PC
H		Tube	1PC
I		Screw	1PC


J		Washer	1PC
K		Tube	1PC
L		Tube	1 PC
M		Washer	1PC
N		Bese	1PC
O		Washer	1PC
P		Nut	1PC
Q		Wrench	1PC
R		Shade	3PCS
S		Socket rings	3PCS

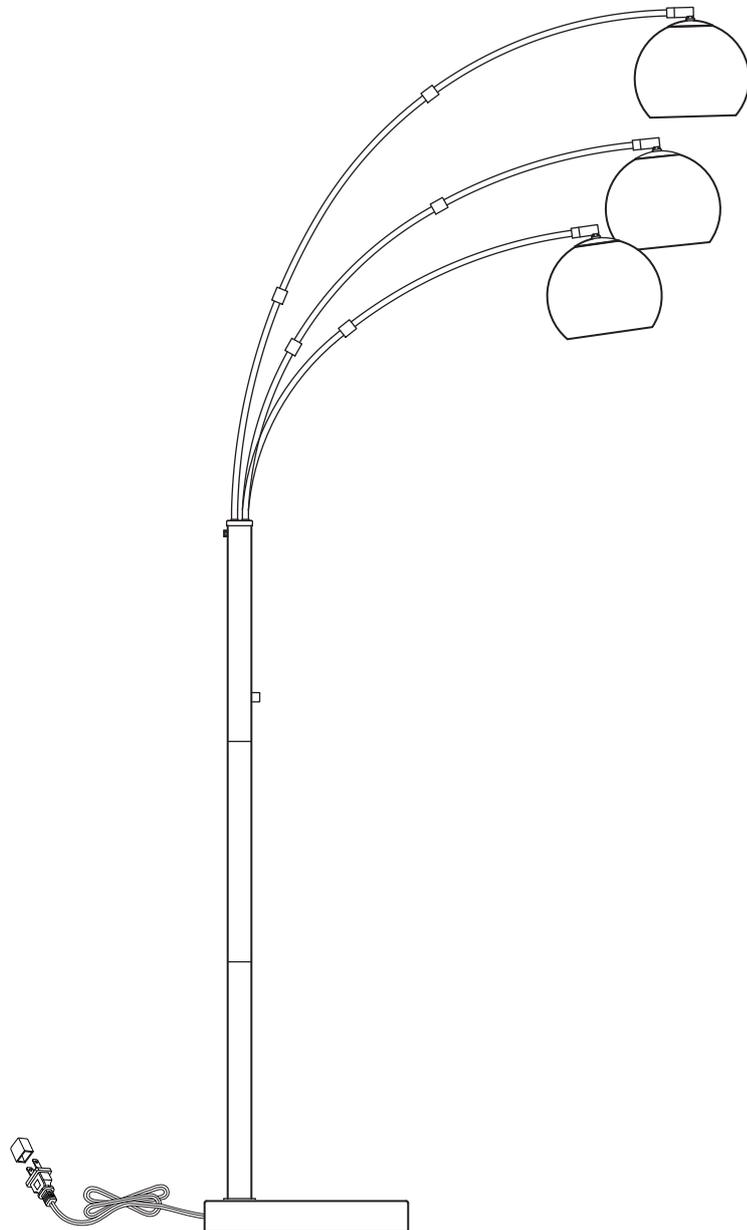


Please begin assembly by laying all parts down on the ground. The arms are easiest to assemble if you assemble them first, before they are attached to the lamp body.

1. Assemble arc arms (A), (E) and (G) by placing the top arc tube into the bottom arc tube and securing each arm by tightening each metal collar joint (D). Simply slide joint (D) over the threaded tube and screw down to tighten. If you have trouble here, slightly lift up the upper arm to relieve the tension on the joint while screwing the parts together.
2. Assemble arc arms (B), (F) and (G) by placing the top arc tube into the bottom arc tube and securing each arm by tightening each metal collar joint (D).
3. Assemble arc arms (C) and (G) by placing the top arc tube into the bottom arc tube and securing each arm by tightening each metal collar joint (D).


Attention: Be sure to align the consistency of the curve on each arm. Do not tighten the metal collar joints all the way yet. This way, when you set the arms onto the base later, you can get the arm curves perfect and then tighten the joints.

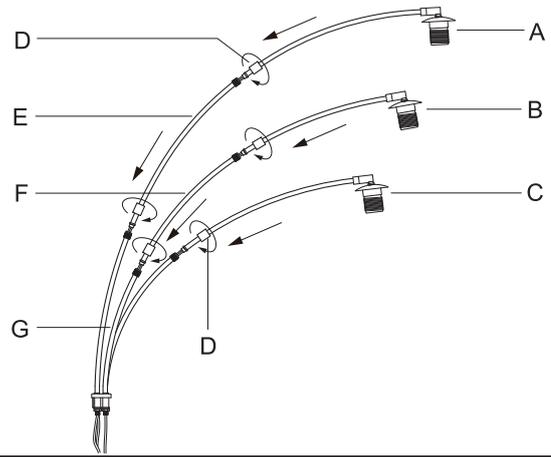



4. Fold the excess cord and insert into tube (H).
5. Screw (I) comes pre-assembled to tube. Before placing the part (G) onto the tube, please unscrew this screw (I).
6. Place part (G) into tube (H), then tighten it with screw (I) by wrench (J).

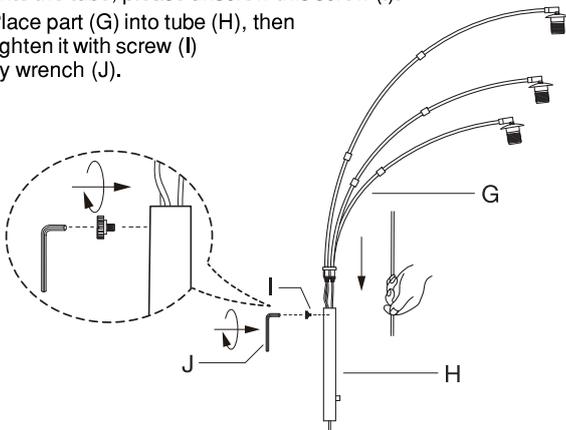

7. Screw tube (H), (K) and (L) together until tight.

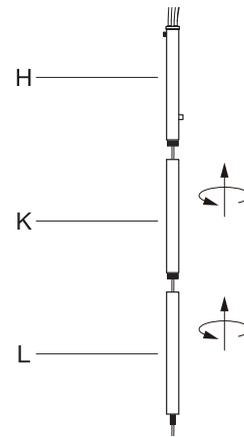


8. Insert tube (L) to washer (M), base (N) & washer (O), then tighten it with nut (P) using wrench (Q). You may need to pull any excess cord gently through the base.

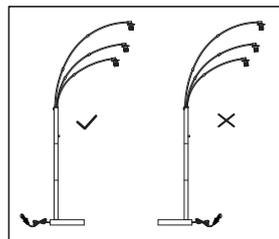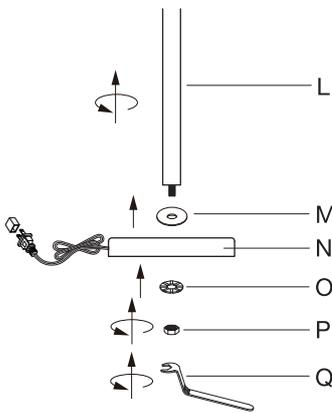

Note: The Arc lamp should face forward with the arms reaching over the base (see diagram below). Now you can make sure the arm curves are aligned and tighten the joints.

9. Socket ring (S) comes pre-assembled to the socket. Before placing the shade onto the socket, please unscrew this socket ring.
10. Place shade (R) onto socket and tighten it with socket ring (S)

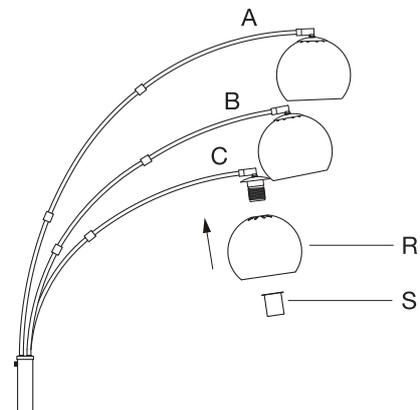

CARE

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.

CARE & MAINTENANCE:

Do not use polishes or cleaners on your lamp.

Unplug lamp, clean with a soft, dry cloth.



Intertek

IMPORTANT SAFETY INSTRUCTIONS:

This portable floor lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: 3 x type A Max. 60W bulbs (Bulbs not included).