


ASSEMBLY INSTRUCTIONS FOR Malcolm Floor Lamp

3237-01 1.0
3237-22

Model # 3237-01
3237-22

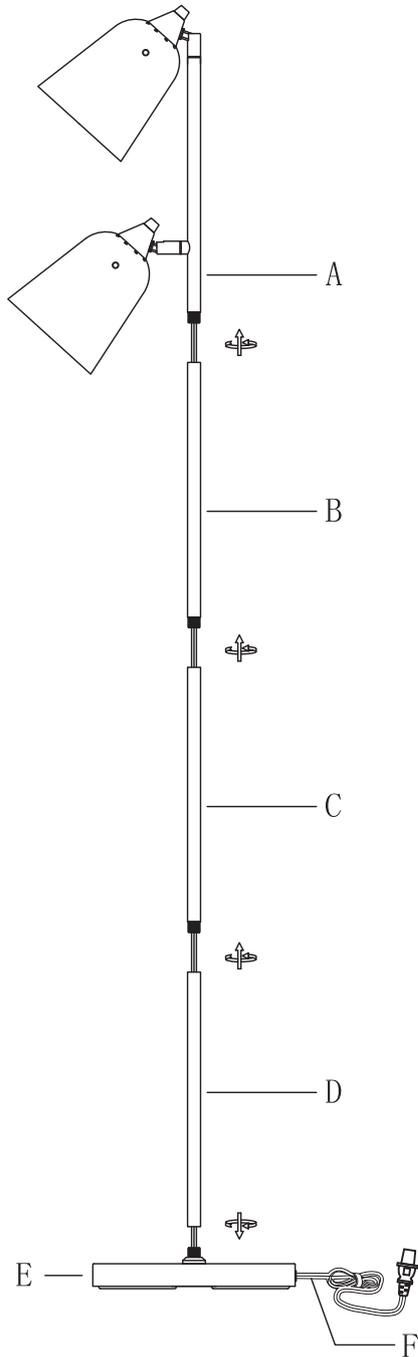

Remove all parts and lay on a flat surface.

- 1.Screw pole(B) clockwise into pole(A) to tighten.
- 2.Screw pole(C) clockwise into pole(B) to tighten.
- 3.Screw pole(D) clockwise into pole(C) to tighten.
- 4.Screw pole (D) clockwise into base (E) to tighten.
Then get the remaining slack of the power cord out carefully from point(F) .

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 2pcs 60Watt incandescent or 13
Watt CFL equivalent bulb(not included)