


ASSEMBLY INSTRUCTIONS FOR Brunswick Floor Lamp

Model # 3536-01
3536-02

3536-01
3536-02

1.0

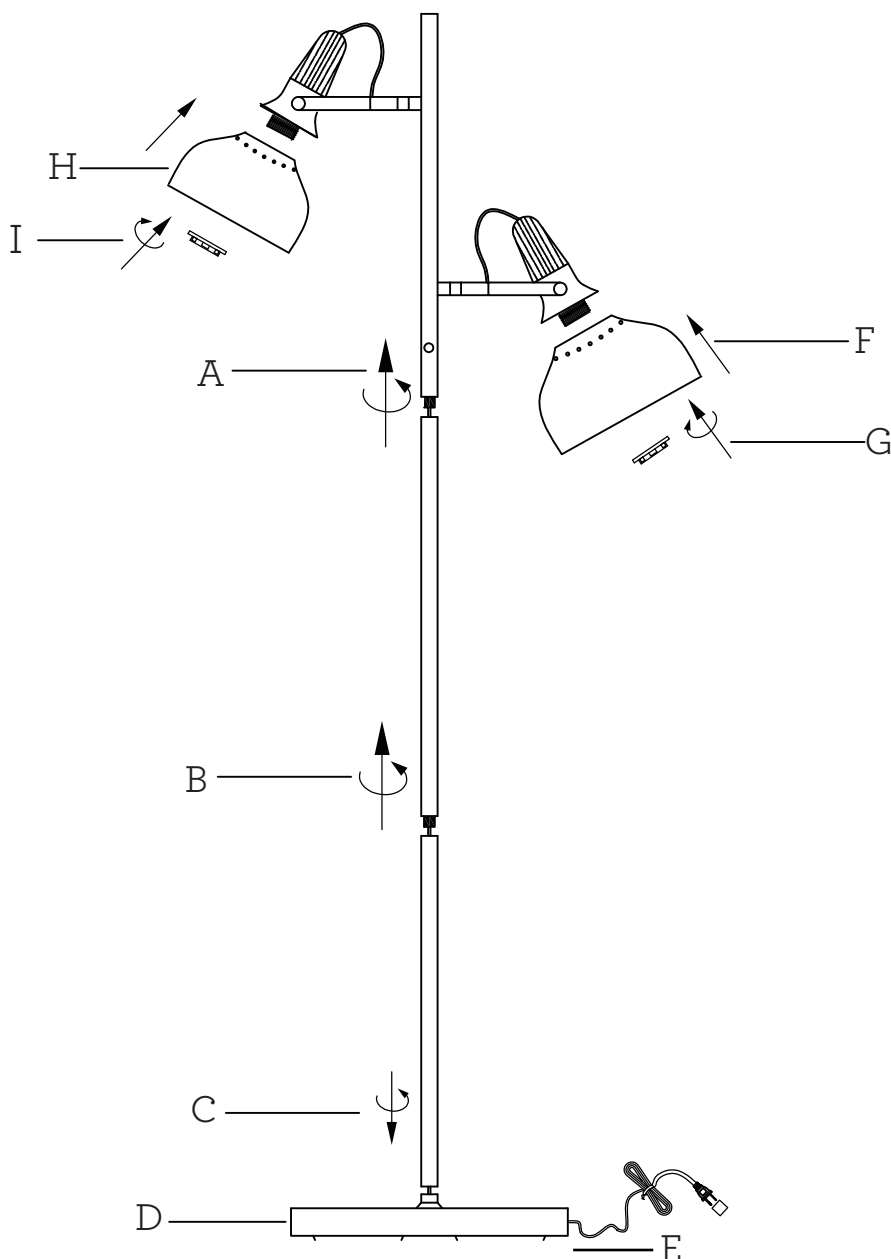

- 1.Screw pole(B) clockwise onto pole(A) to tighten.
- 2.Screw pole(C) clockwise onto pole(B) to tighten.
- 3.Screw pole(C) clockwise onto the base(D) to tighten. Then get the remaining slack of the power cord out carefully from point(E).
- 4.Socket rings comes pre-assembled to the sockets. Before placing the shades onto the sockets, please unscrew these socket rings.
- 5.Set shade(F) on the socket and tighten clockwise with socket ring(G) to secure shade.
- 6.Set shade(H) on the socket and tighten clockwise with socket ring(I) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (2) 60 watt incandescent or 13 watt CFL equivalent.(not included)