


ASSEMBLY INSTRUCTIONS FOR Emmett Floor Lamp

3159-01 1.0
3159-02

Model # 3159-01
3159-02

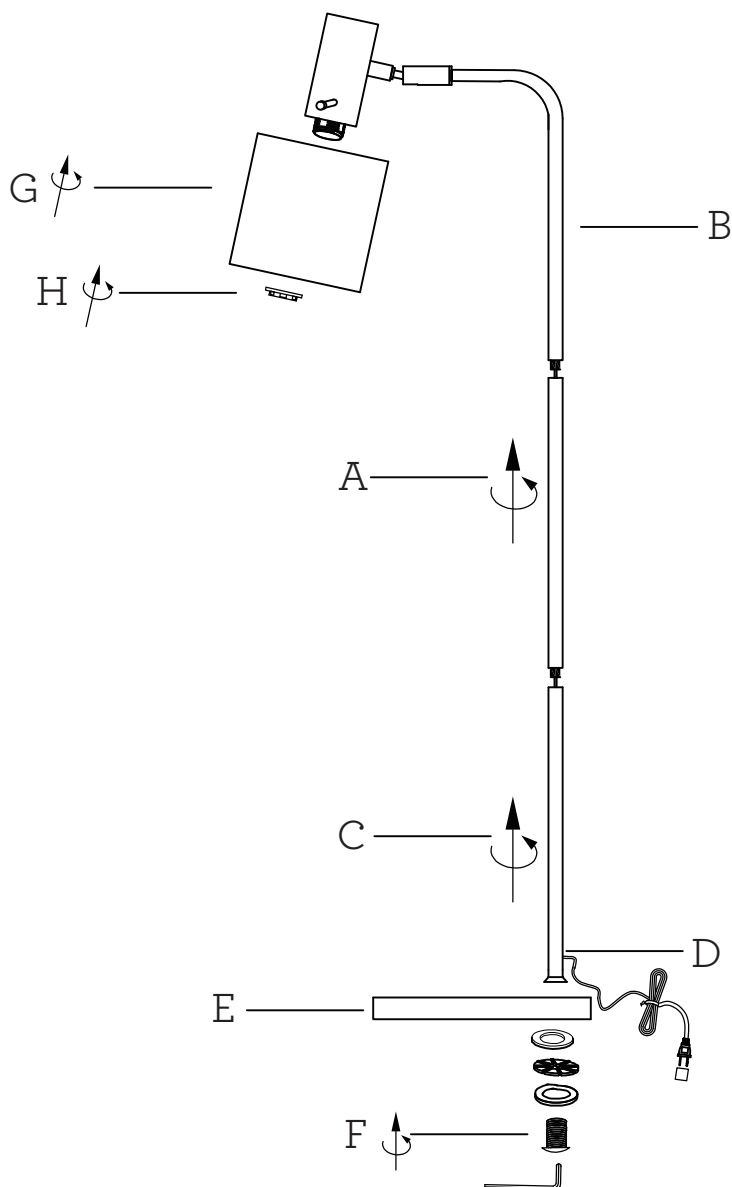

1. Screw pole(A) clockwise onto pole(B) to tighten.

2. Screw pole(C) clockwise onto pole(A) to tighten. Then get the remaining slack of the power cord out carefully from point(D).

3. Insert pole(C) into base(E). From the bottom of the base, place 3 metal pieces in the order shown on the diagram onto the pole and screw on screw nut (F) using the allen wrench. Make sure to fasten tightly so the lamp is sturdy. When you turn the lamp right-side up, be sure the shade is facing forward so that it hangs over the base.

4. Socket ring comes pre-assembled to the socket. Before placing the shade onto the socket, please unscrew this socket ring.

5. Set shade(G) on the socket and tighten clockwise with socket ring(H) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 60 watt incandescent or 13 watt CFL equivalent.(not included)