


ASSEMBLY INSTRUCTIONS FOR Oliver AdessoCharge Shelf Floor Lamp

3691-01 1.0

Model # 3691-01

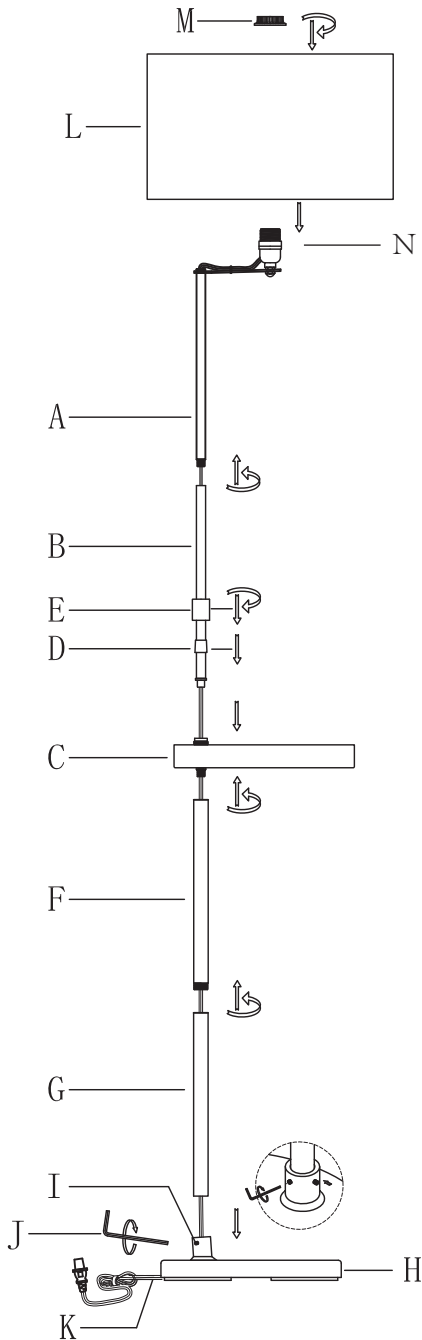

1. Screw pole (B) clockwise into pole (A) to tighten.
2. Insert pole (B) into wood shelf threading, then move plastic ring (D) down to the bottom of the pole. Move metal ring (E) down over plastic ring (D) and screw the metal ring (E) clockwise to tighten the pole (B) to the wood shelf.
3. Screw pole (F) clockwise into the wood shelf (C) to tighten.
4. Screw pole (G) clockwise into pole (F) to tighten.
5. Insert pole (G) into base (H) and get the remaining slack of the power cord out carefully from point (K), then use Allen Wrench (J) to tighten screws (I) and secure the pole into the lamp base.
6. Set shade (L) onto socket (N), and screw the socket ring (M) clockwise onto socket to secure the shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150 watt incandescent or 42 watt CFL equivalent bulb (not included)