


ASSEMBLY INSTRUCTION FOR


Bernard Floor Lamp

Vendor Code: ADEO Model# HW-F3995SQ SKU# 90249181


Included parts diagram:

A		Tube	1 PC
B		Washer	1 PC
C		Base	1 PC
D		Nut	1 PC
E		Washer	1 PC
F		Wrench	1 PC


G		Tube	1 PC
H		Pierces	1 PC
I		Wrench	1 PC
J		Shade	1 PC
K		socket ring	1 PC

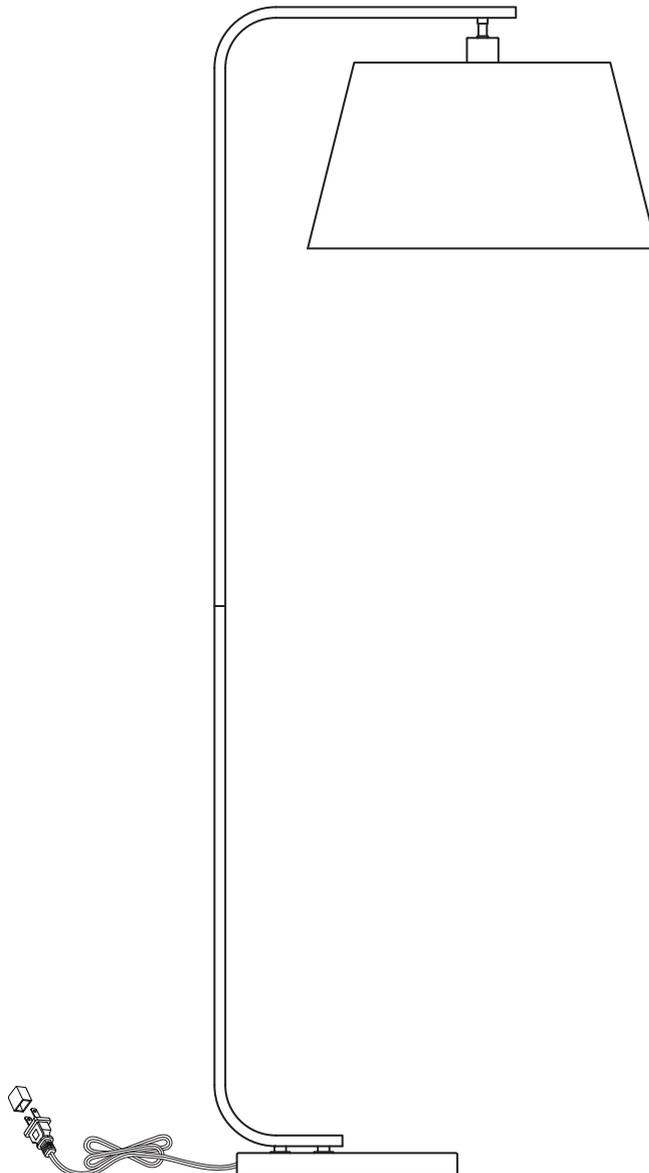

1. Insert tube (A) into washer (B), base (C) and washer (D), then tighten it with nut (E) using wrench (F).

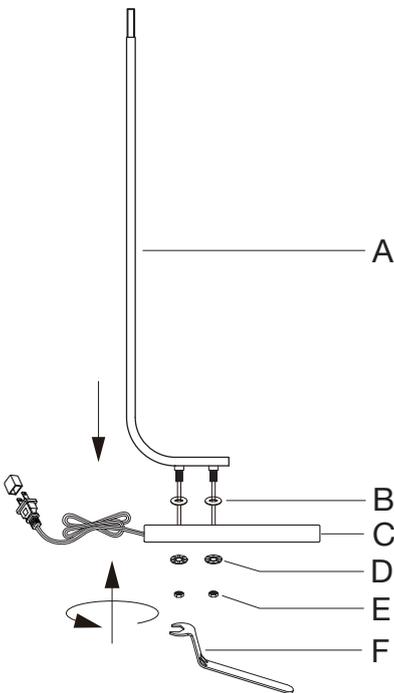


2. Insert tube (G) onto tube (A), then tighten 2x screw pieces (H) with provided wrench (I). You may need to pull any excess cord gently through the base so that these two parts fit.

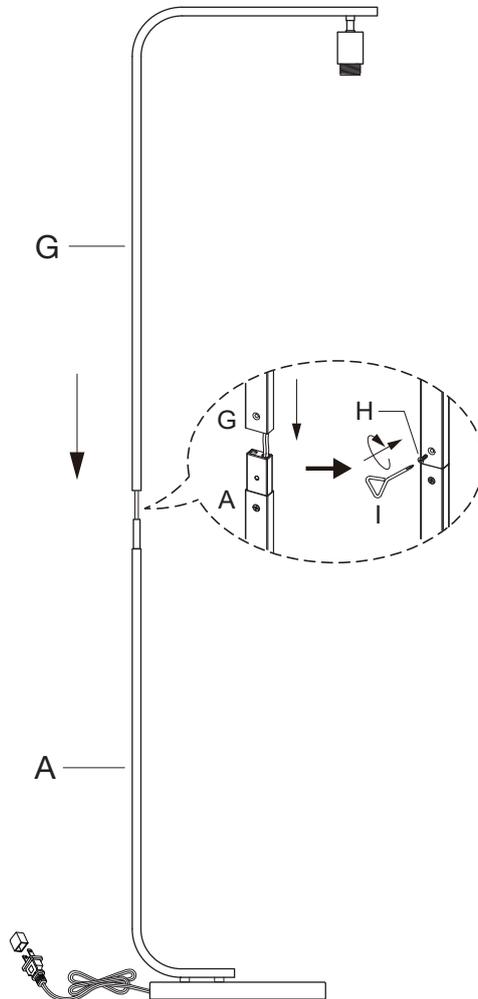

3. Socket rings (K) comes pre-assembled to the sockets. Before placing the shade (J) onto the socket, please unscrew this socket ring.

4. Install shade (J) onto socket and tighten it with socket ring (K).

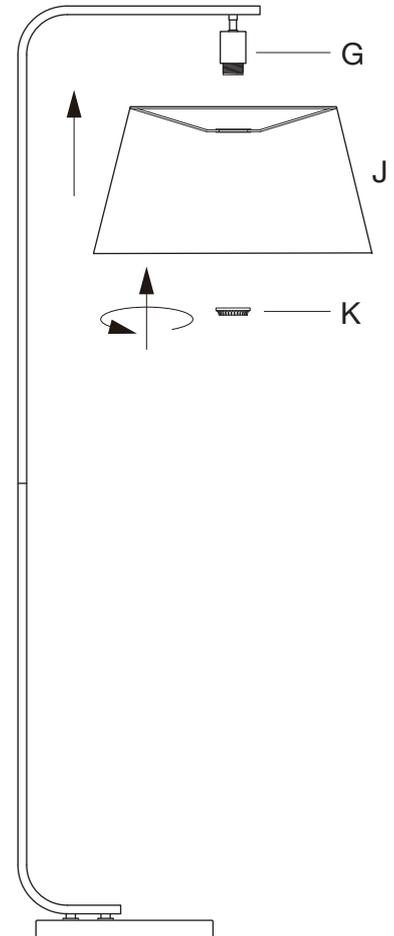

CARE

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.

CARE & MAINTENANCE:

Do not use polishes or cleaners on your lamp.

Unplug lamp, clean with a soft, dry cloth.



IMPORTANT SAFETY INSTRUCTIONS:

This portable floor lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. DO NOT ALTER THE PLUG .

BULB TYPE: One type A Max. 60W bulb (Bulb not included).