


Kona Floor Lamp

Model # 3498-01


3498-21

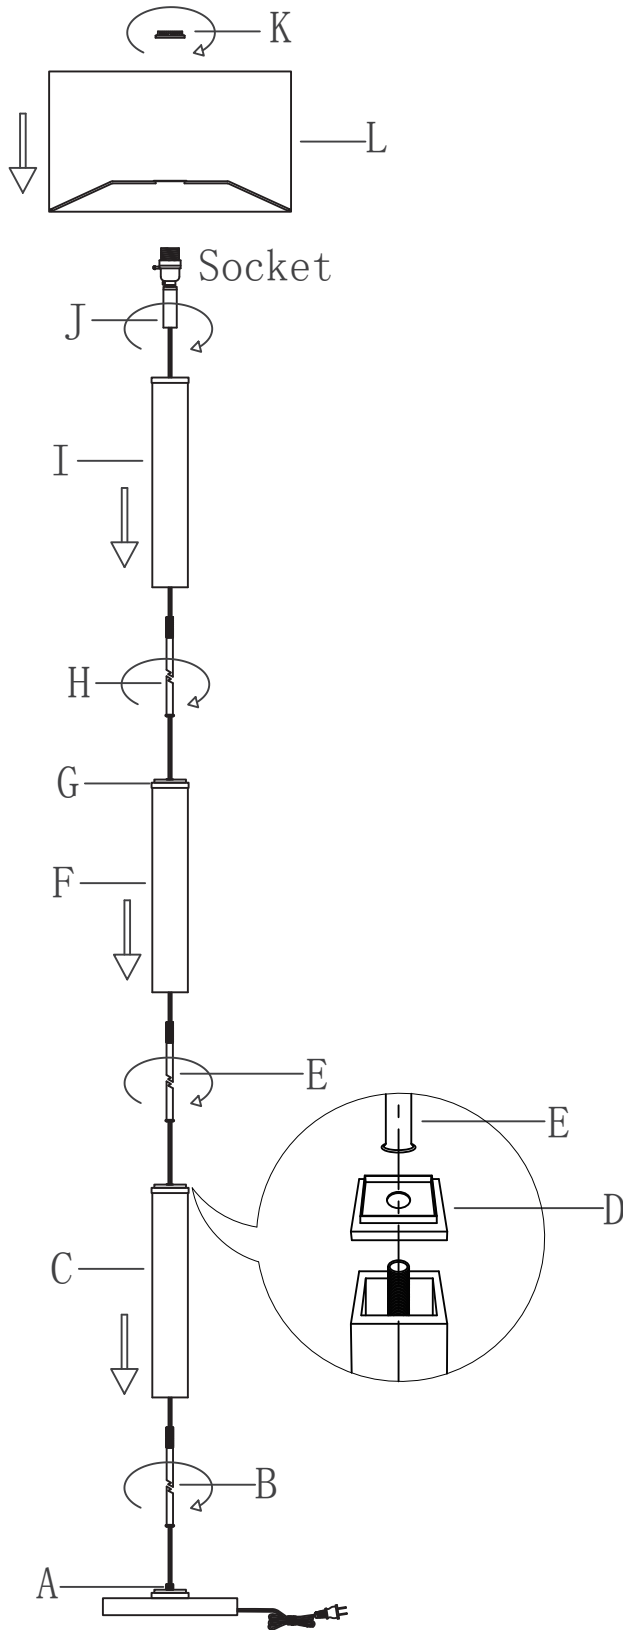

1. Screw pole(B) clockwise onto screw(A) to tighten. Then place wood tube(C) onto the base.
2. Place metal square (D) on the top of wood tube(C), then screw pole (E) clockwise onto the top of the pole (B) to tighten.
3. Place wood tube (F) onto metal square (D) and then repeat step 2 to assemble the metal square (G), pole (H) & wood tube (I).
4. Screw socket part(J) clockwise onto wood tube(I) to tighten. Then get the remaining slack of the power cord out carefully from the base.
5. Socket ring (K) comes pre-assembled to the socket. Before assembling the shade, please unscrew this socket ring (K). Set shade(L) on socket and tighten clockwise with socket ring(K) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150 watt 3-way incandescent or 42 watt 3-way CFL equivalent.(not included)