


# ASSEMBLY INSTRUCTIONS FOR DALTON FLOOR LAMP

3853-21 1.0


Model # 3853-21

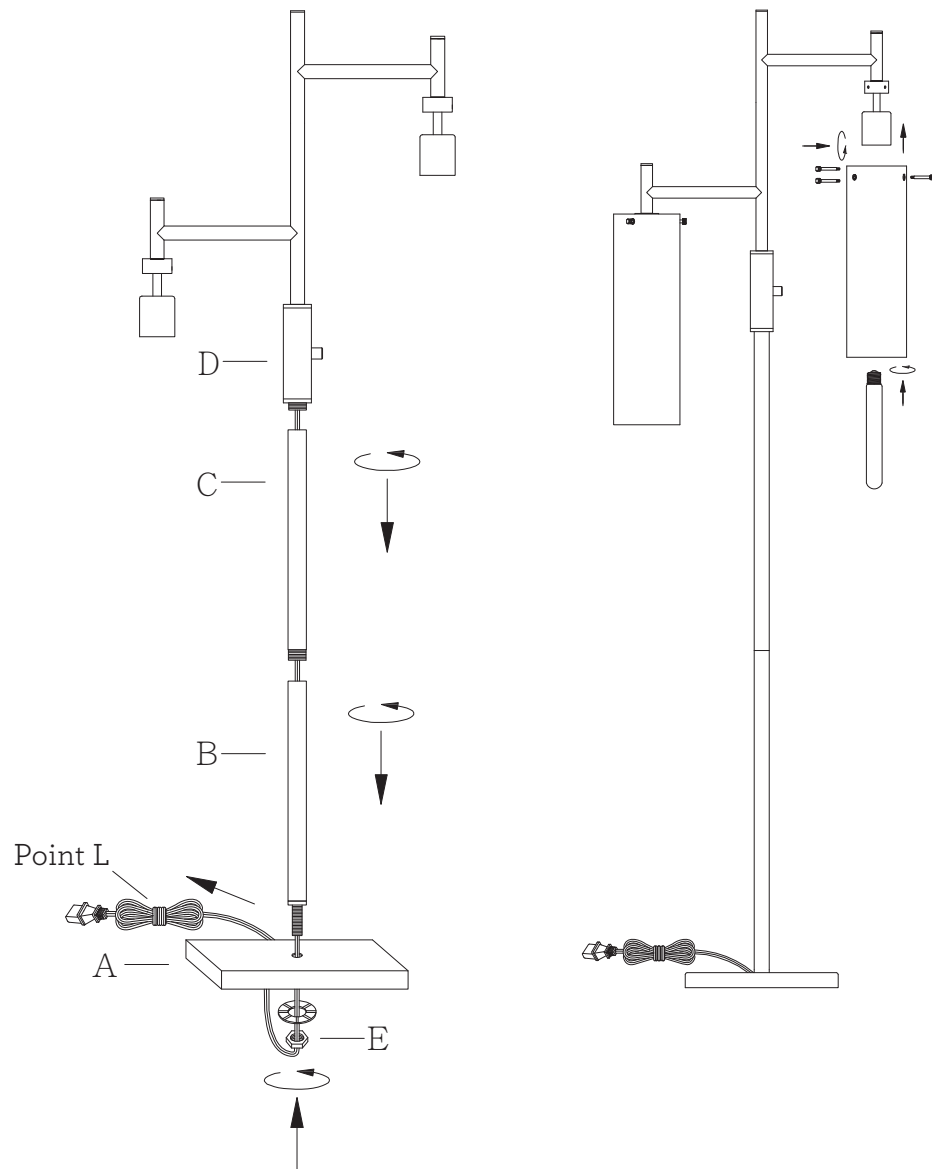

1. Remove all parts and lay on a flat surface.
2. Screw the pole(B) clockwise into the base(A).
3. Screw the pole(C) clockwise into the pole(B).
4. Screw the pole(D) clockwise into the pole(C). You may need to pull excess cord gently through the poles and through Point L so that these two parts fit.
5. Fasten the screw(E) clockwise with allen wrench(F).

1. Attach the shade to the shade holder cup, then fasten the screws clockwise into to the cup.
2. Screw the bulb(H) clockwise into the socket.
3. The lamp is completed.

## Parts:

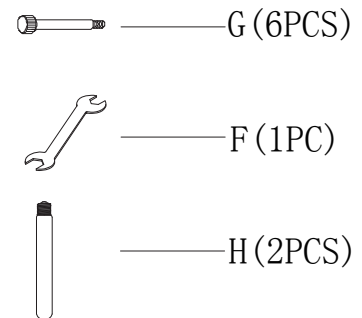

### GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



### IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: Type T vintage bulb(included)