


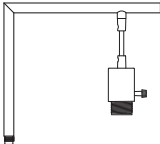







ASSEMBLY INSTRUCTION FOR


**Floor Lamp**

Vendor Code: ADEO    Model# HW-F4184    SKU# 90255855


**Included parts diagram:**

A		Tube	1 PC
B		Tube	3PCS
C		Tube	1 PC
D		Base	1 PC

E		Washer	1 PC
F		Screw	1 PC
G		Wrench	1 PC
H		Shade	1 PC
I		Socket ring	1 PC


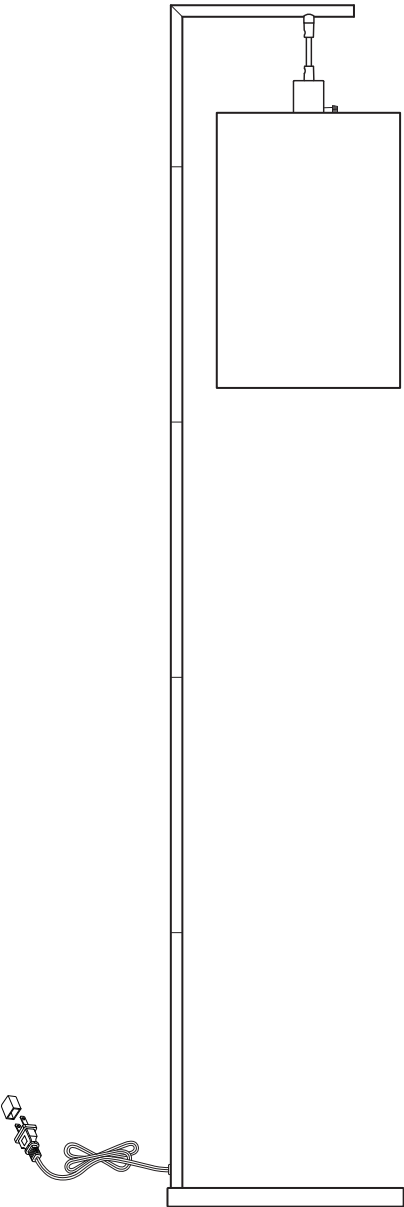


1. Screw tube (A), (B) and (C) until tight. You may need to pull out excess cord gently from the cord outlet of tube (E).

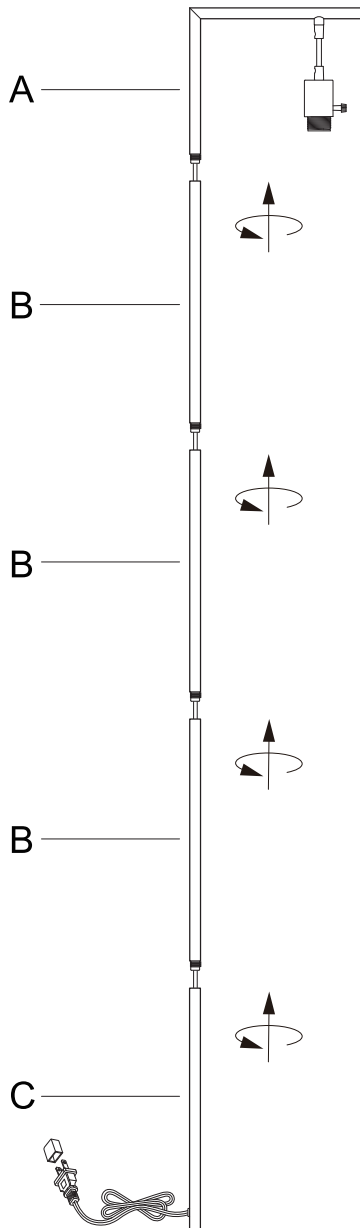


2. Unscrew and remove pre-set washer (G) and screw (H) from tube (E).
3. Insert the tube (E) onto the base and securing it by tightening washer (G) and screw (H) by wrench (I).

**Attention:** Be sure to align the consistency of the curve on the arm.

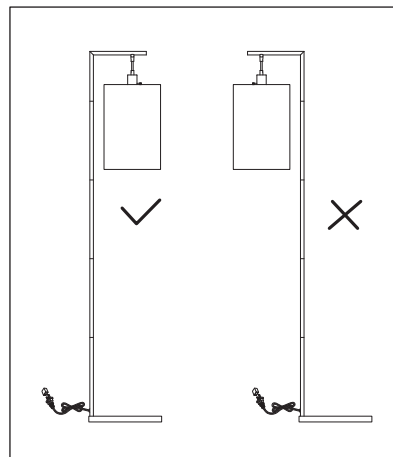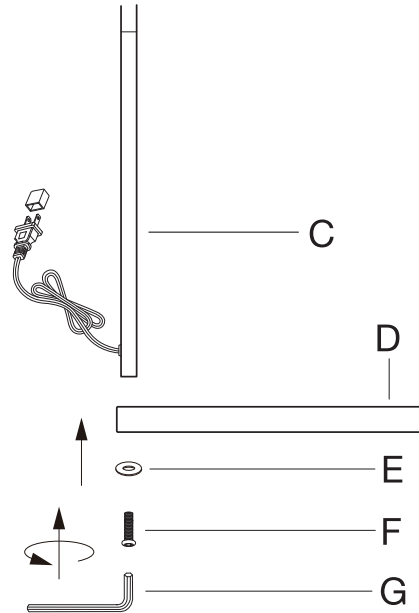

4. Socket rings (K) comes pre-assembled to the sockets. Before placing the shade onto the socket, please unscrew this socket ring.
5. Install shade (J) onto tube (A) and tighten it with socket ring (K).

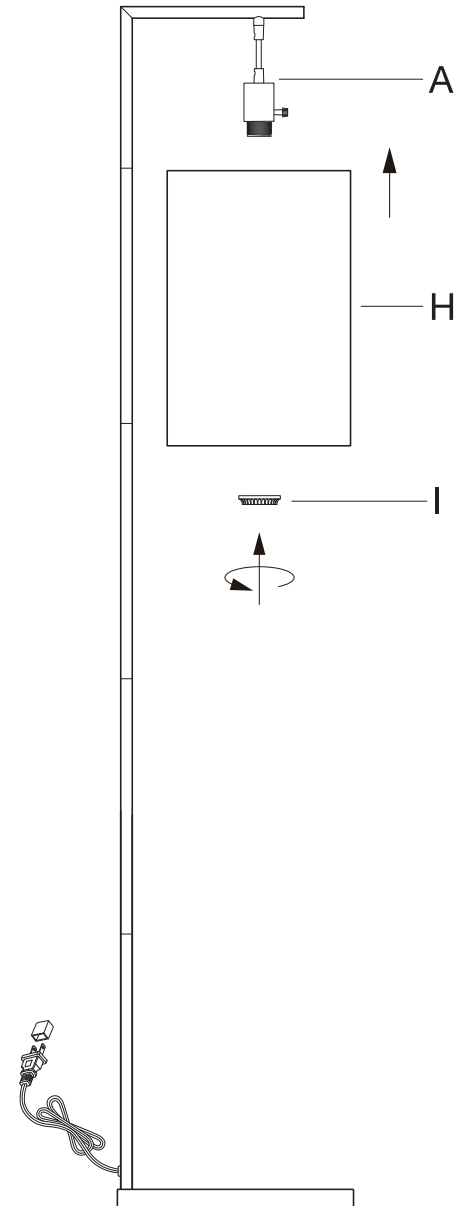

#### CARE

##### GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.

##### CARE & MAINTENANCE:

Do not use polishes or cleaners on your lamp.  
Unplug lamp, clean with a soft, dry cloth.



#### IMPORTANT SAFETY INSTRUCTIONS:

This portable floor lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. DO NOT ALTER THE PLUG .

BULB TYPE: One type A Max. 100 Watt bulb (Bulb not included).