


ASSEMBLY INSTRUCTIONS FOR BENJAMIN FLOOR LAMP

6158-01 1.0

Model # 6158-01

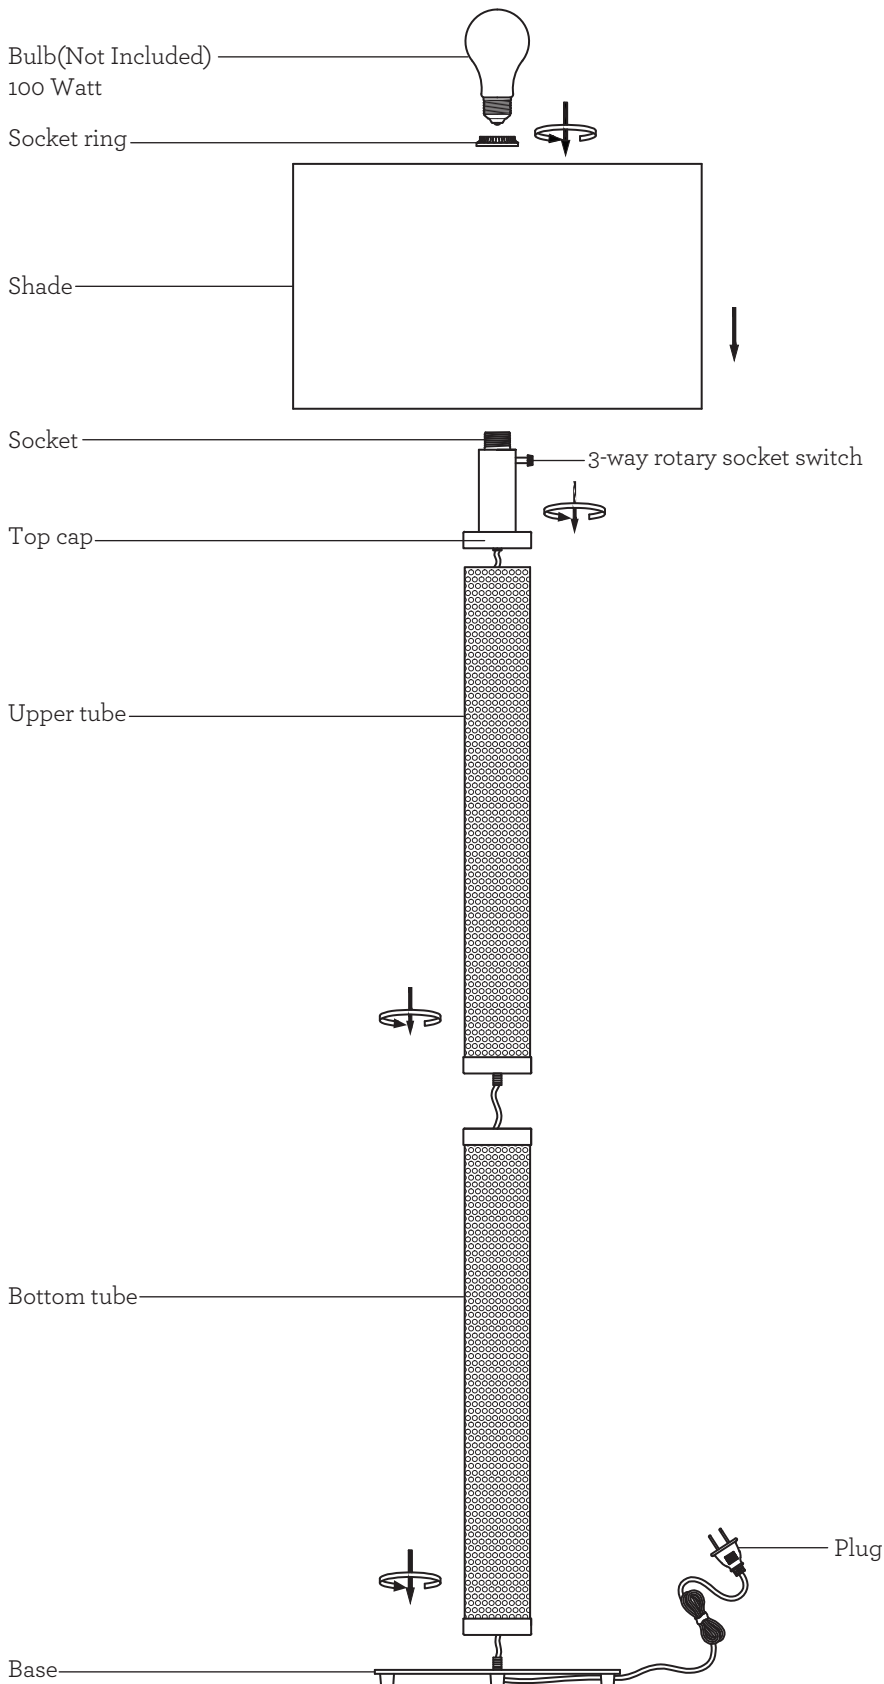

1. Screw bottom tube onto base then screw upper tube into bottom tube.
2. Screw top cap into the upper tube.
3. Pull the cable under the base.
4. Place the lamp shade onto the socket then screw on socket ring to secure the shade.
5. Install the bulb (Not Included) by screwing it into the socket. Refer to the label on the lamp socket for maximum wattage information.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted.
DO NOT ALTER THE PLUG.

BULB TYPE: (1) 100Watt


ADESSO®

353 West 39th Street - 2nd Floor
New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com

INSTRUCCIONES DE ENSAMBLAJE PARA BENJAMIN LAMPARA DE PISO

6158-01 1.0

Modelo #6158-01

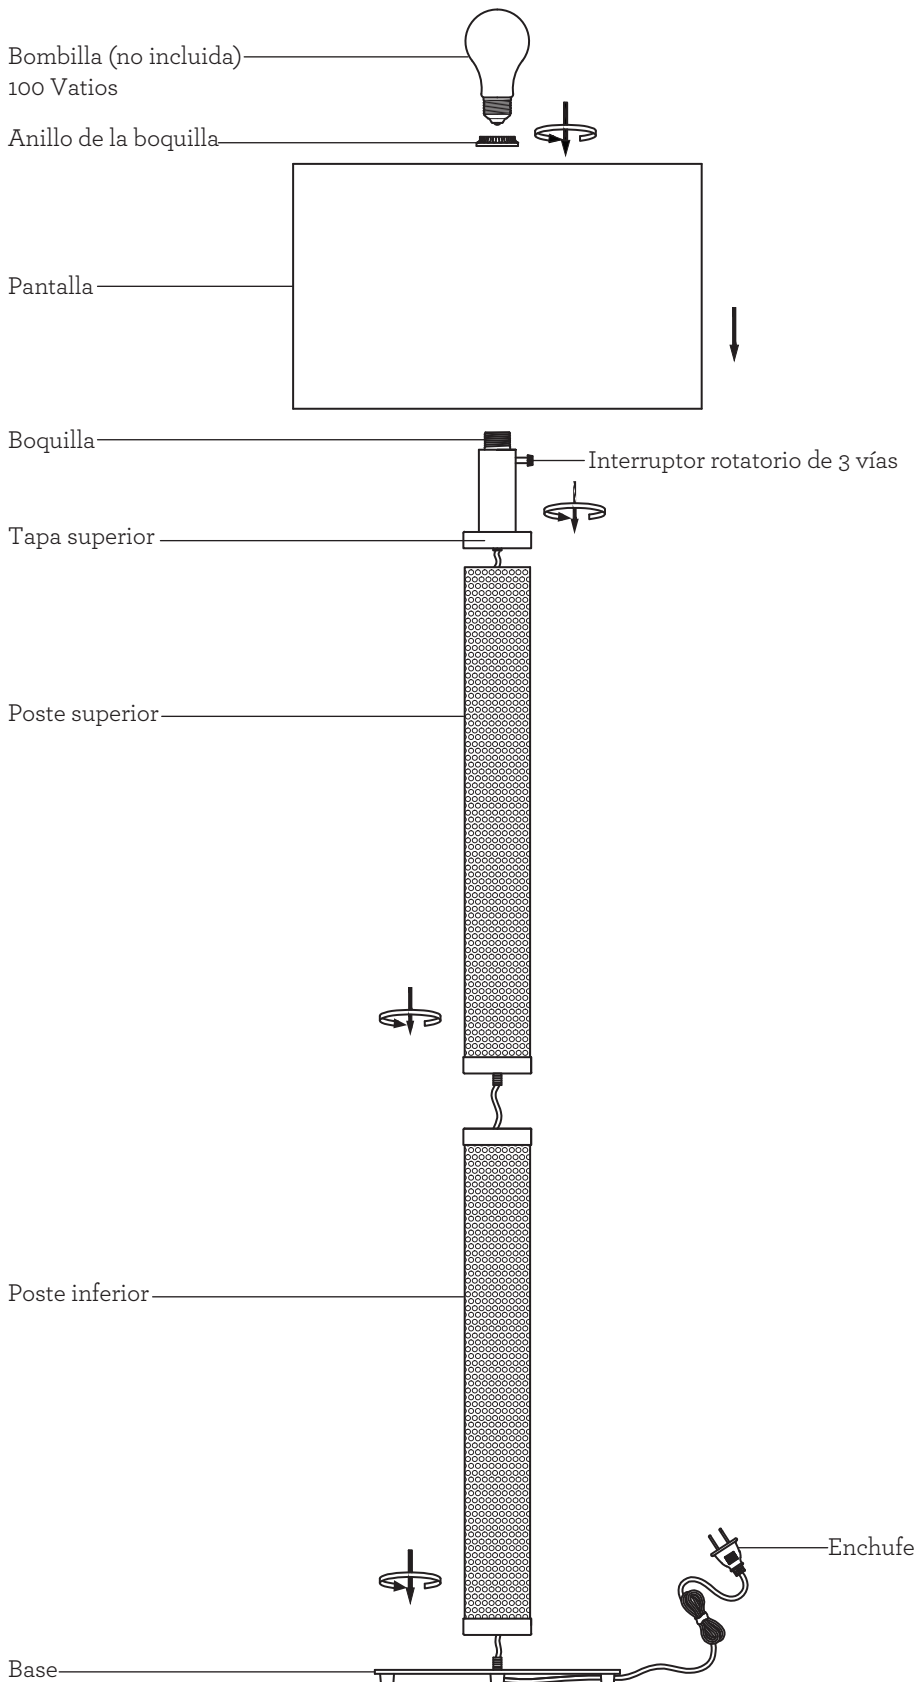

1. Enrosque el tubo inferior en la base y luego enrosque el tubo superior en el tubo inferior.
2. Enrosque la tapa superior en el tubo superior.
3. Hale el cable que está debajo de la base.
4. Coloque la pantalla en la boquilla y luego enrosque el anillo para asegurar la pantalla.
5. Coloque la bombilla (no incluida) enrosándola en la boquilla. Consulte la etiqueta en la boquilla de la lámpara para obtener información sobre el máximo vataje.

INFORMACION GENERAL DEL PRODUCTO:

Este producto es adecuado
sólo para lugares secos



INSTRUCCIONES IMPORTANTES DE SEGURIDAD:

Esta lámpara portátil tiene un enchufe polarizado (una paleta es más ancha que la otra), función de seguridad que reduce el riesgo de una descarga eléctrica. Este enchufe encajará en un tomacorriente polarizado en un sólo sentido. Si el enchufe no entra completamente en el tomacorriente, invierta el enchufe. Si aún así no encaja, llame a un electricista calificado. Nunca use un cable de extensión a menos que el enchufe pueda insertarse por completo.
NO MODIFICAR EL ENCHUFE.

TIPO DE BOMBILLA (1) 100 Vatios

ADESSO®

353 West 39th Street - 2nd Floor
New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com