


ASSEMBLY INSTRUCTIONS

ITEM #: 21811

IMPORTANT: TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly.

- 1.Be sure the power to the installation point is off.
- 2. Pull the power supply wires out from the outlet box, and mount the universal mounting plate to the outlet box, using mounting screws A.
- 3. Attach the power supply wires to the fixture lead wires by connecting black to black, and white to white. Attach the power supply ground wire from the outlet box and the fixture ground wire from the fixture to the green ground screw on the mounting bracket or connect both wires together using the correct size of wire connectors.
- 4. Install the canopy over the screw B and secure with ball finial.
- 5. Install glass shade onto fitters by fastening counter rings onto threaded sockets
- 6.Install bulbs(no included). See relamping label located at socket area for type and maximum allowed wattage.

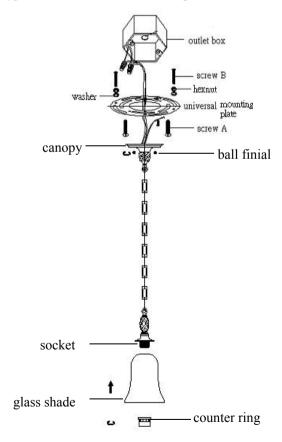

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com