

Assembly Instructions
BAMP 5227 SILVER

Spica Floor Mirror






SKU#99125227


Version #1 11/2025

Thank you for your purchase. Before discarding packaging material be sure you have located all the parts including the necessary hardware and tools listed on the instruction sheet below.

caution: Read before unpacking Assemble parts. "Sharp exposed staple tips can cause injury. For your Protection Please remove any exposed staples used In packaging.

Hardware List

NO	FIGURE	DESCRIPTION	QTY
A	 Size: M4x1-1/2"	Screw	2
B	 Size: M4x1-1/2"	Plastic Anchors	2
C	 Size: 5/8" x 2-3/8"	Wall Ring Bracket	2
D	 Size: 3/4" x 1-1/2"	Quick Link	2
E	 Size: 1/2" x 6-1/2"	Cable	1

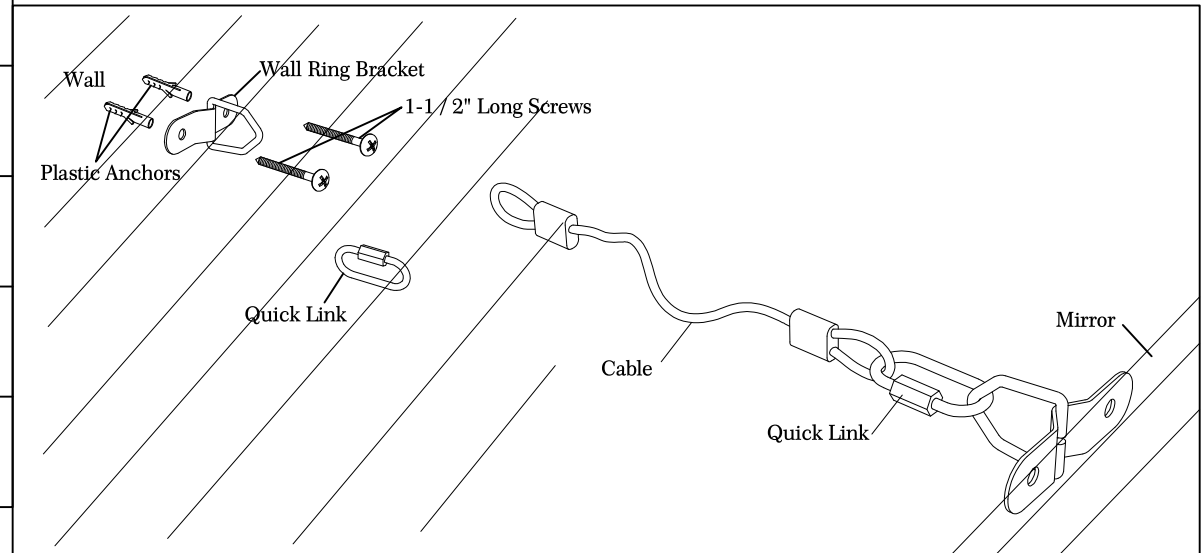

INSTRUCTIONS:

- Step 1: Use the plastic anchors with screws to attach the wall ring bracket on the wall. Please see the illustration.
- Step 2: Use the quick link to connect each loop end of the cable to each bracket on wall and mirror. Rotate sleeves of each quick link to secure cable loops to the ring bracket.
- Step 3: Leaner mirror against the wall.