



Fire Pit Owner's Manual

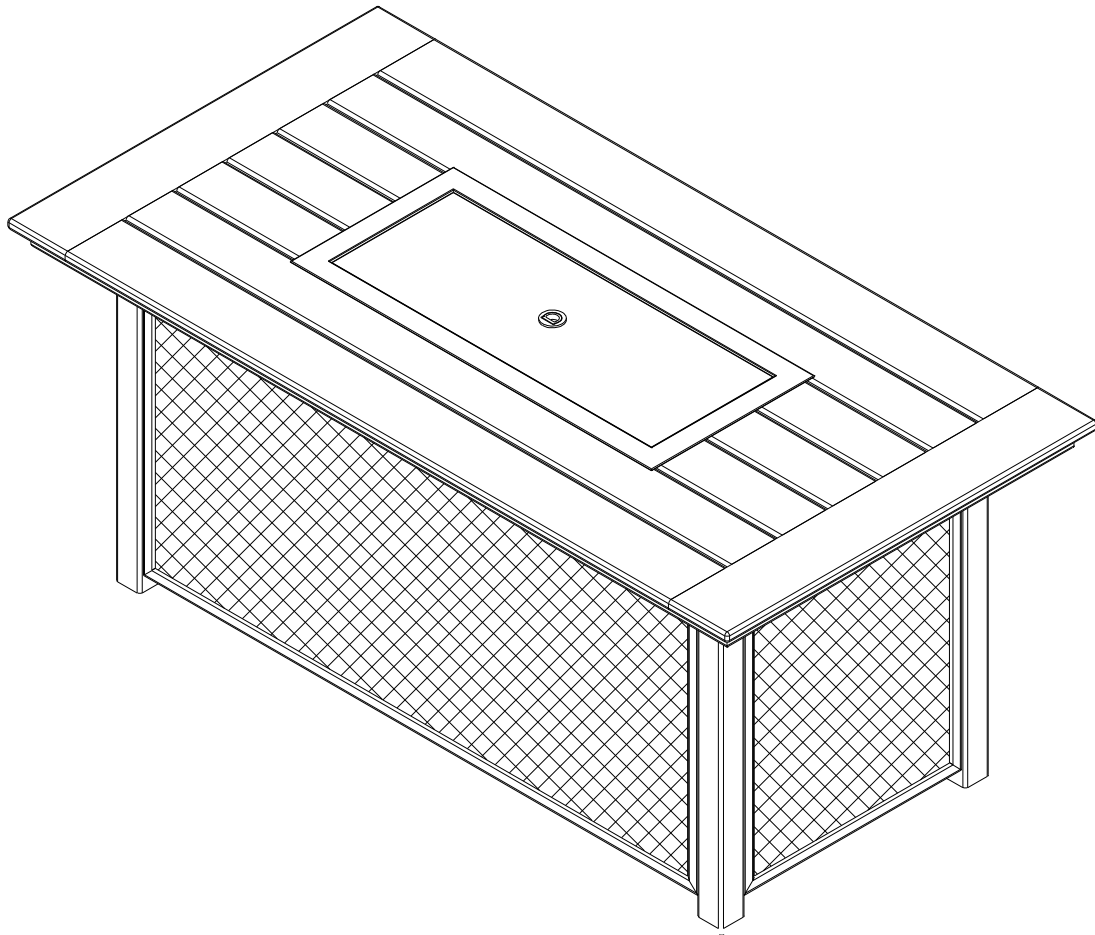

Outdoor Gas Fireplace

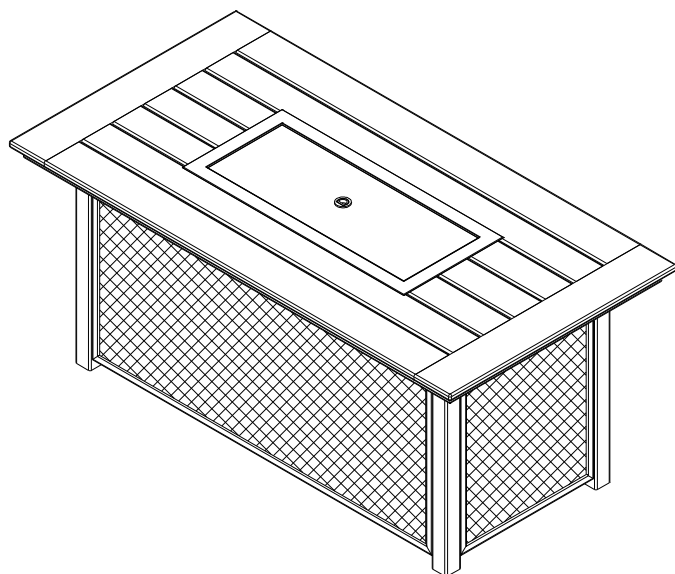

DANGER

FIRE OR EXPLOSION HAZARD

If you smell gas:

- Shut off gas to the appliance.
- Extinguish any open flame.
- If odor continues, leave the area immediately.
- After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance



WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.



WARNING: For Outdoor Use Only.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.



WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Refer to the owner's information manual provided with this appliance. Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

INSTALLER: Leave this manual with the appliance.
CONSUMER: Retain this manual for future reference.



DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.

Safety Information

Before you assemble or operate this unit, please carefully read this entire manual. Failure to do so may result in a fire, explosion, injury or death.



WARNING

- The installation of this unit must adhere to local codes or Propane Storage and Handling Code, CSA B149.2.
- **THIS UNIT IS INTENDED FOR OUTDOOR USE ONLY!** This product shall be used outdoors, in a ventilated space and shall not be used in any enclosed area.
- This unit is to be used with propane gas only! (sold separately)
- Do not attach a remote gas supply to this unit.
- Only use propane gas for this unit.
- Solid fuels shall not be burned in this appliance.
- When igniting this unit, stay away from the burner as the flame will light up and may cause injury.
- **LP GAS WARNING:** Do not use any more than 1/4in depth lava rocks/pumice stones/LavaGlass® above the burner holes. Doing so will suffocate the flame.
- If the propane gas tank is leaking gas, you may see or smell it, or hear a hiss. Do the following:
 - Disconnect the propane gas tank.
 - Do not attempt to fix the problem yourself.
 - Contact your gas supplier or fire department for help.
- Applying too much propane may result in gas pooling and will not burn. Allow fresh air into the unit so that the remaining gas may escape.
- Do not use a flame to check for gas leaks.
- Use LP propane tanks with the following dimensions: diameter 12 in, height 18 in - capacity 20 lbs.
- You must use a propane tank that has a collar to protect the gas valve.
- **DO NOT** fill tank over 80 percent full.
- The tank system must be set up for vapor withdrawal.
- Discontinue use if any part of the propane tank is damaged. Rust and dents may be hazardous and should be inspected by a gas supplier.
- Do not burn anything other than the provided materials for this fire pit.
- Keep away from the unit for the first 20 minutes after igniting your unit for the first time, as lava rocks/pumice stones/LavaGlass® could pop out and cause injury. Should any rocks pop out, discard them.
- Always ensure that lava rocks/pumice stones/LavaGlass® are completely dry before use. Failure to do so will cause them to crack or pop.
- Do not operate unit until all parts are fully assembled.
- Do not paint or color any part of this heating unit.
- Unit may be hot while in use, do not attempt to move it while in use.
- Never leave this heating unit unattended while in use.
- This unit is not intended for cooking.
- Keep any flammable items away and do not use any other fireplace cover for this unit.
- Keep a safe distance to avoid burning skin or clothing.
- Do not sit or rest hands or feet on this heating unit.
- Never place hands or fingers on upper portion of this unit while in use.
- Keep all electrical cords and fuel supply hose away from heated surfaces.
- Cover must be removed when burner is in operation.

Safety Information

- Combustible material should not be within 36 inches of the top of the unit, or within 36 inches around the entire unit.
- Keep the appliance area clear and free from combustible material, gasoline and other flammable vapors and liquids.
- If the flame goes out while burning, turn the gas valve off. Wait 5 minutes before repeating the initial lighting procedure. Once you have a flame started, hold down the control knob for 1 minute.
- Do not add water into the unit.
- Do not operate unit if any part has been under water. Immediately call a qualified service technician to inspect the appliance and replace any part of the control system and any gas control that has been under water.
- Do not disconnect any part while unit is in use.
- Do not store a spare propane tank on or near this unit.
- If the heating unit is indoors, detach the propane tank and leave outdoors.
- Do not operate on a boat or vehicle. This unit must be used on a flat surface and outdoors ONLY.
- Always remove protective cover before operating (if applicable).
- Do not set the protective cover over the unit until it is turned off and completely cooled down.
- Check for leaks after not using the unit for long periods of time.
- Children should never operate this unit. Children must be supervised while near this unit.
- Keep gas tank at least 5 feet away from unit when lit. (if external tank)
- Maximum gas supply: 250 psi; Min. gas supply: 10 psi.
- All installation and repair should be done by a qualified professional. This unit should be inspected annually and cleaned regularly.

Inspect all elements of this heating unit before each use. If there is damage, the burner must be replaced.

- Keep the hose out from any pathways to eliminate any accidental damage. (if external tank)
- Be aware of the hazards of high temperatures and stay away from the unit to avoid any burns or injury.
- The gas supply tank should be constructed and marked with the specifications for the LP gas tanks of the U.S. Department of Transportation or the National Standard of Canada, CAN/CSA-B339, LP gas tanks, spheres and tubes for Transportation of Dangerous Goods; and Commission.
- The LP gas tank must have a listed overfilling prevention device and a CGA or Type I, (CGA791) LP gas tank connection.
- This heating appliance should not be used on plastic or artificial wood decks.
- Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.
- Young children should be carefully supervised when they are in the area of the appliance.
- Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.
- Any guard or other protective device removed for servicing the appliance shall be replaced prior to operating the appliance.
- Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners and circulating airways of the appliance are kept clean.

IF APPLICABLE.


- Allow heating item to cool completely before placing on lid.
- DO NOT use heating item while lid is installed. Always remove the lid while heating item is in use.

Safety Information

Only use the regulator and hose assembly provided with this unit. Replacement parts must be supplied directly by manufacturer.

Inspect the burner before use of this unit. If the burner shows any kind of damage, do not operate the appliance. For assistance with repair or replacement of the burner or any other parts, call manufacturer at

NOTE: You must follow all steps to properly assemble this heating item. Make sure the gas valve is turned 'OFF' before assembling. Do NOT attempt to assemble without proper tools.

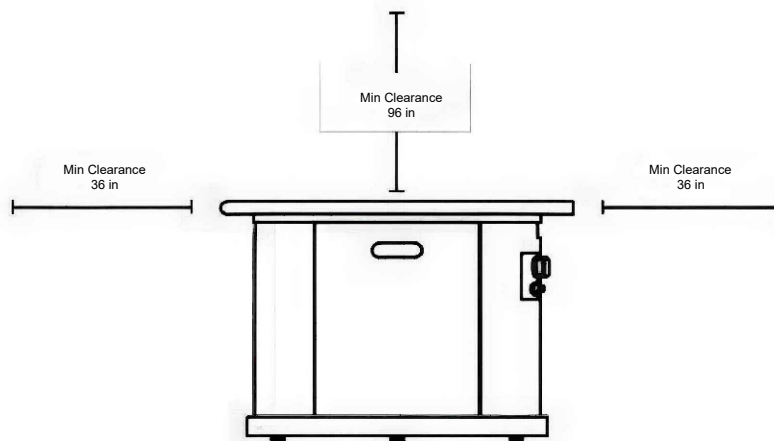

Combustible materials should not be within 6 inches of the top of the unit, or within 36 inches around the entire unit.



DANGER

Always place this outdoor fire pit on a hard, level, non-combustible surface such as concrete, rock or stone.




***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two person assembly is recommended in order to prevent personal injury and damaged parts.

ASSEMBLY INSTRUCTIONS

EYCO WAKEFIELD FIREPIT

SKU#79761295

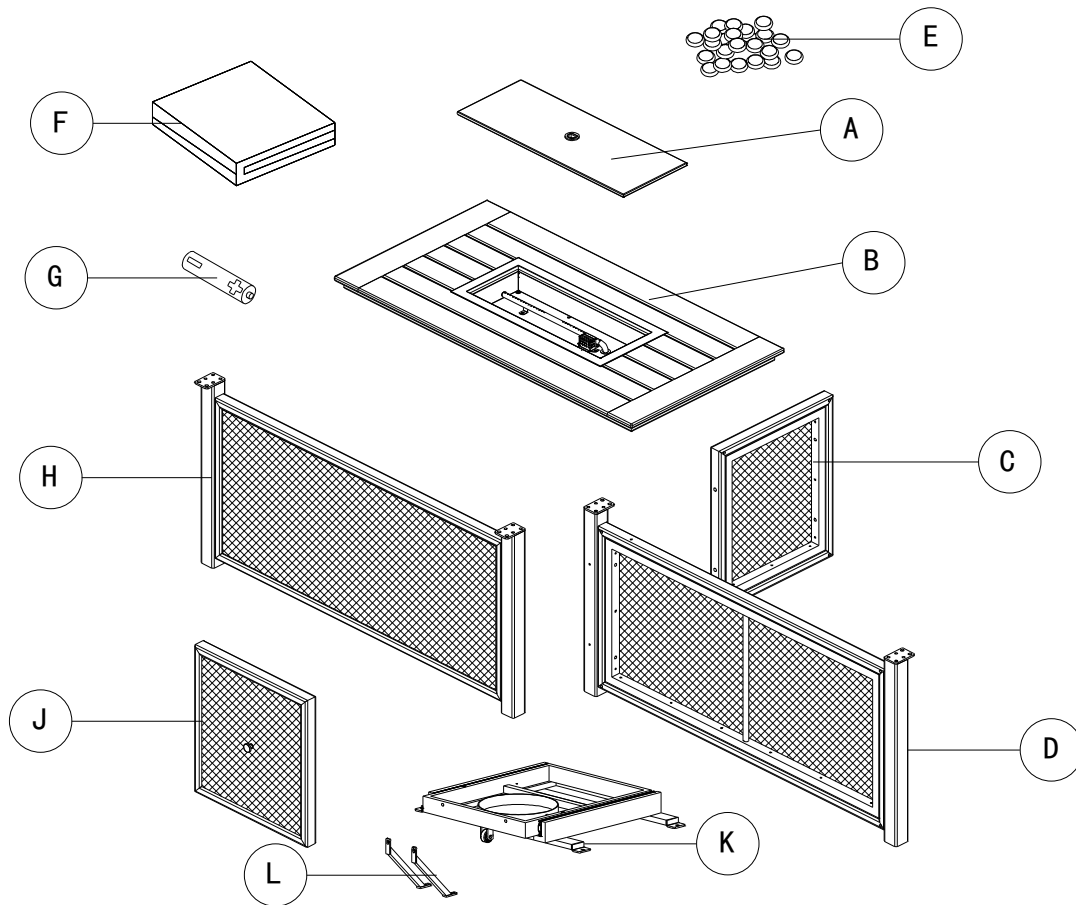

ITEM	DESCRIPTION	QTY
A	Lid	1
B	Fire Pit Table Top with Burner (Pre-assembled)	1
C	Right Side Panel	1
D	Back Panel	1
E	Glass Bead	1 box
F	Weather Cover	1
H	Front Panel	1
J	Access Door	1
K	Gas Tank Tray	1
L	Support Bars	2

Hardware Pack Locations:
WAKEFIELD FIREPIT, 79761295

***Caution: Please read all instructions carefully before starting the assembly process.
These parts are cumbersome and heavy. Therefore, two person assembly is recommended in order to prevent personal injury and damaged parts.

HARDWARE LIST



M




N



P



Q




R

Item	Description	Qty
M	1/4"*83mm Bolt	4PCS
N	1/4"*25mm Bolt	4PCS
P	1/4"*25mm Bolt	12PCS
Q	1/4"*35mm Bolt	2PCS
R	Allen Key	1PC

Assembly Instructions


NOTE: Place all components upside down on a flat, soft surface during assembly to prevent scratches.

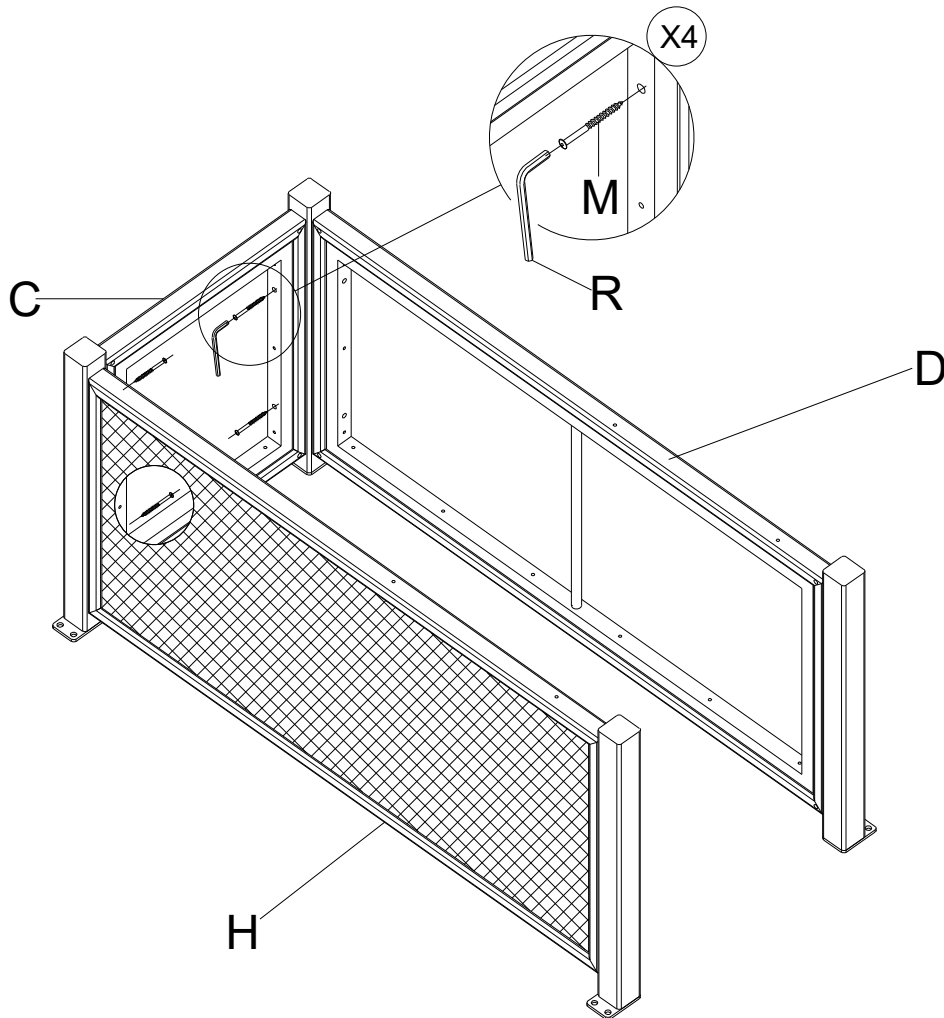

Step 1: Attach the Front and Back Panels (H and D) to the Right Side Panel (C) using Bolts (M) with Allen Key (R).

Assembly Instructions

NOTE: Place all components upside down on a flat, soft surface during assembly to prevent scratches.

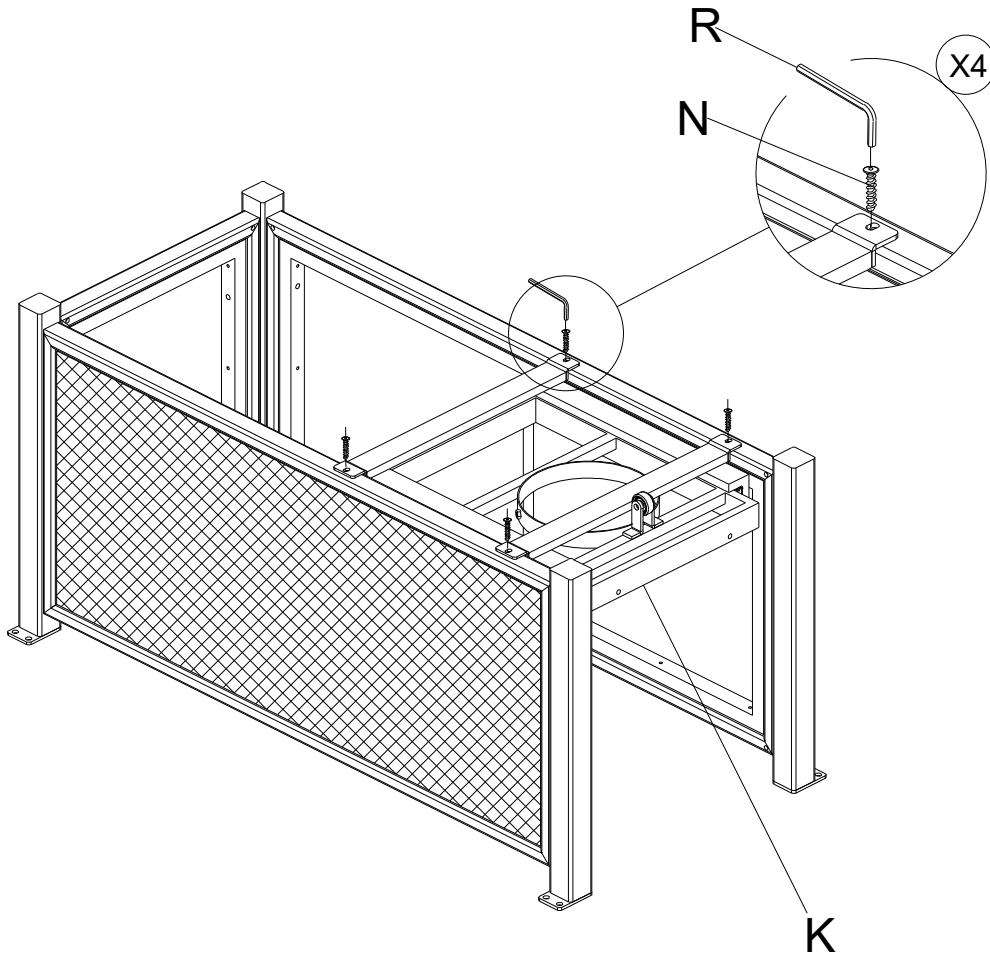


Step 2: Attach the Gas Tank Tray (K) using Bolts (N) with Allen Key (R). Ensure the slide rails are properly aligned and level before tightening the bolts.

Hardware Pack Locations:
WAKEFIELD FIREPIT, 79761295

Assembly Instructions


NOTE: Place all components upside down on a flat, soft surface during assembly to prevent scratches.

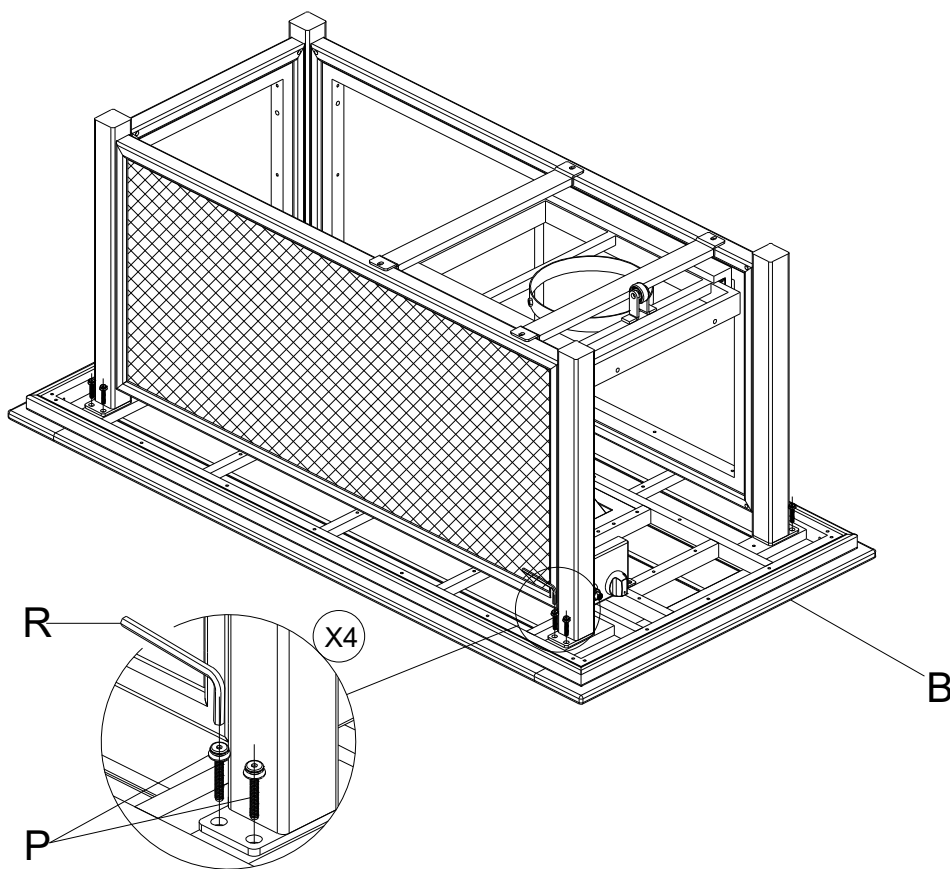

Step 3: Attach the assembled table body to the underside of the Fire Pit Table Top (B) using Bolts (P) with Allen Key (R).


Hardware Pack Locations:
WAKEFIELD FIREPIT, 79761295

Assembly Instructions

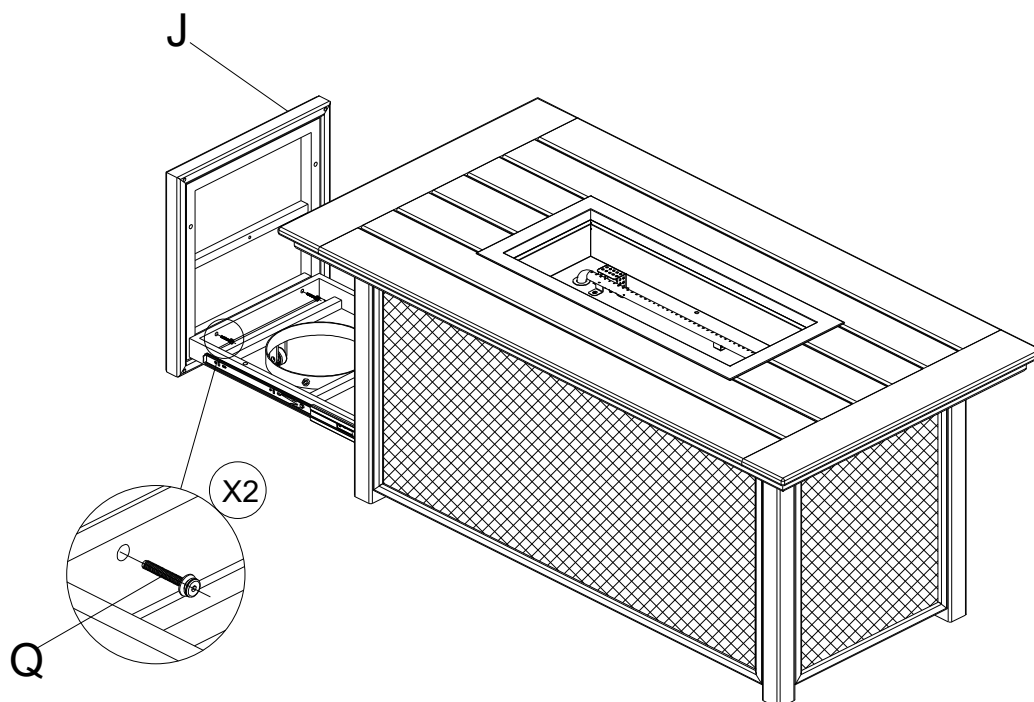


Step 4: Carefully turn the fire pit upright. Align the Access Door (J) with the Gas Tank Tray and secure using Bolts (Q).

Assembly Instructions

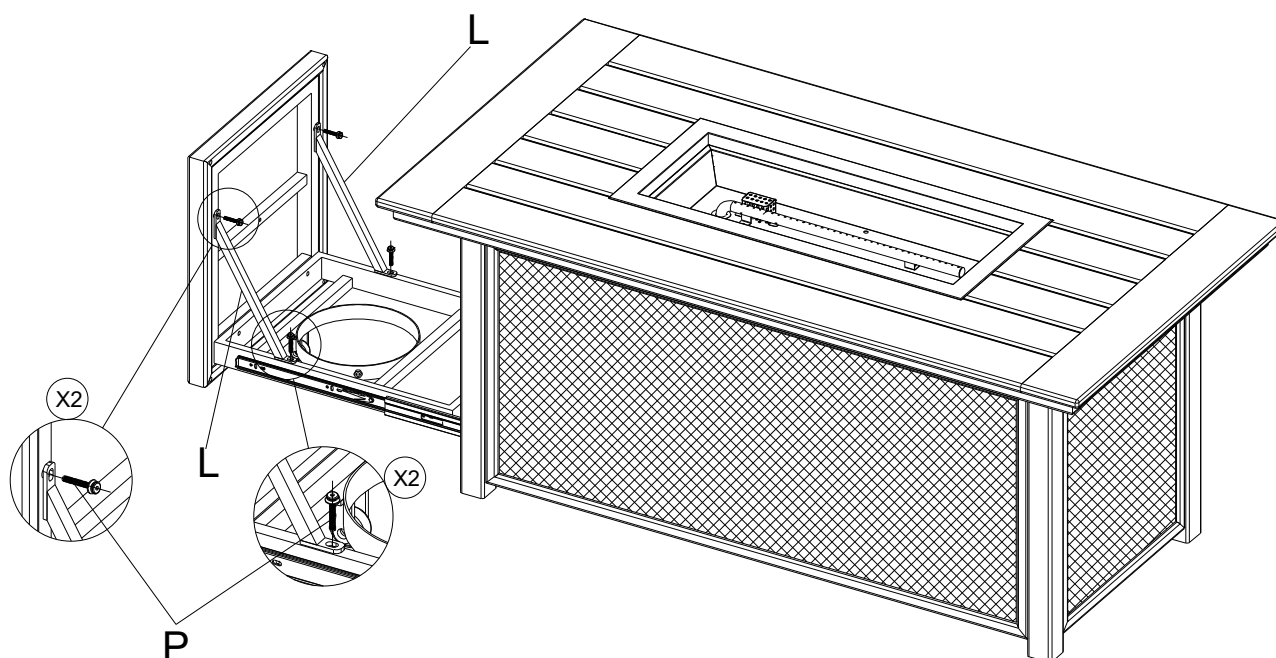

Step 5: Attach the Support Bars (x2) (L) between the Access Door and the Gas Tank Tray in a diagonal position using Bolts (P). Ensure both Support Bars are installed symmetrically and do not interfere with the sliding function.

Assembly Instructions

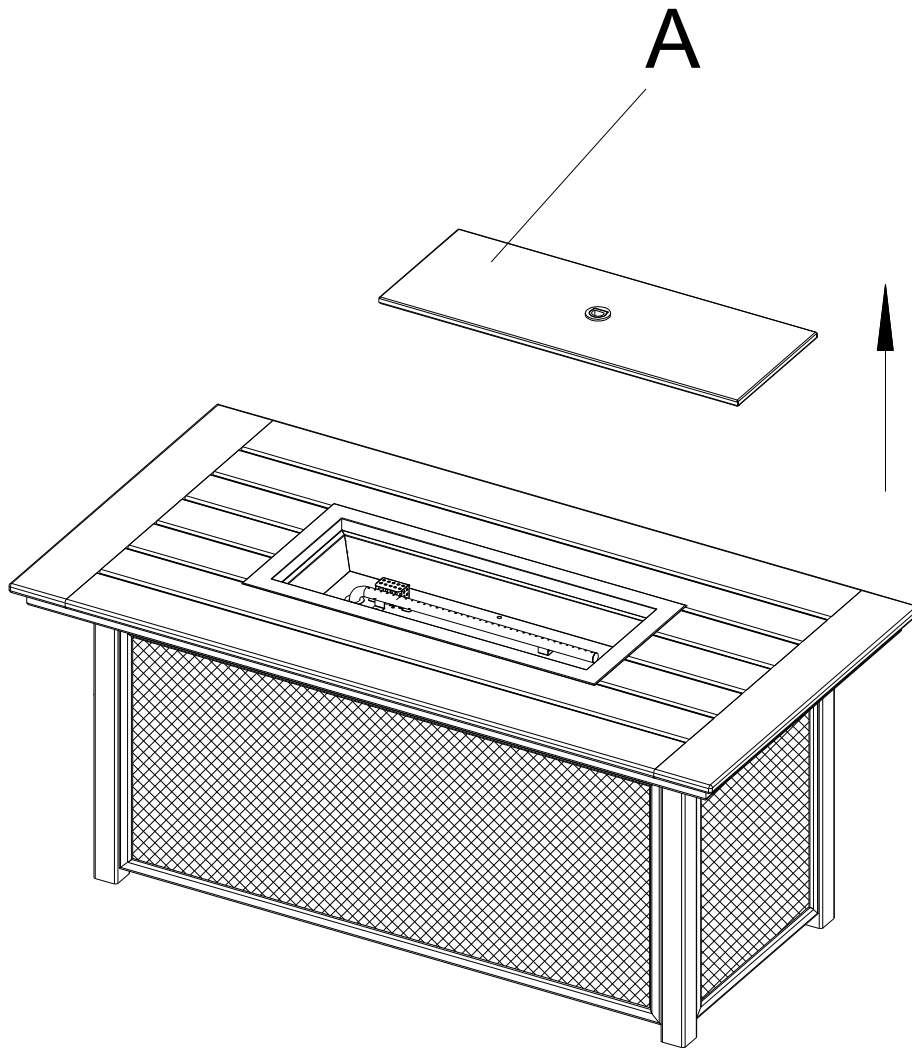

Step 6: Place the Lid (A) onto the fire pit opening.




Manufactured by EYCO for Rooms to Go

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two person assembly is recommended in order to prevent personal injury and damaged parts.

Assembly Instructions

NOTE: Do not cover the fire pit until it has completely cooled.

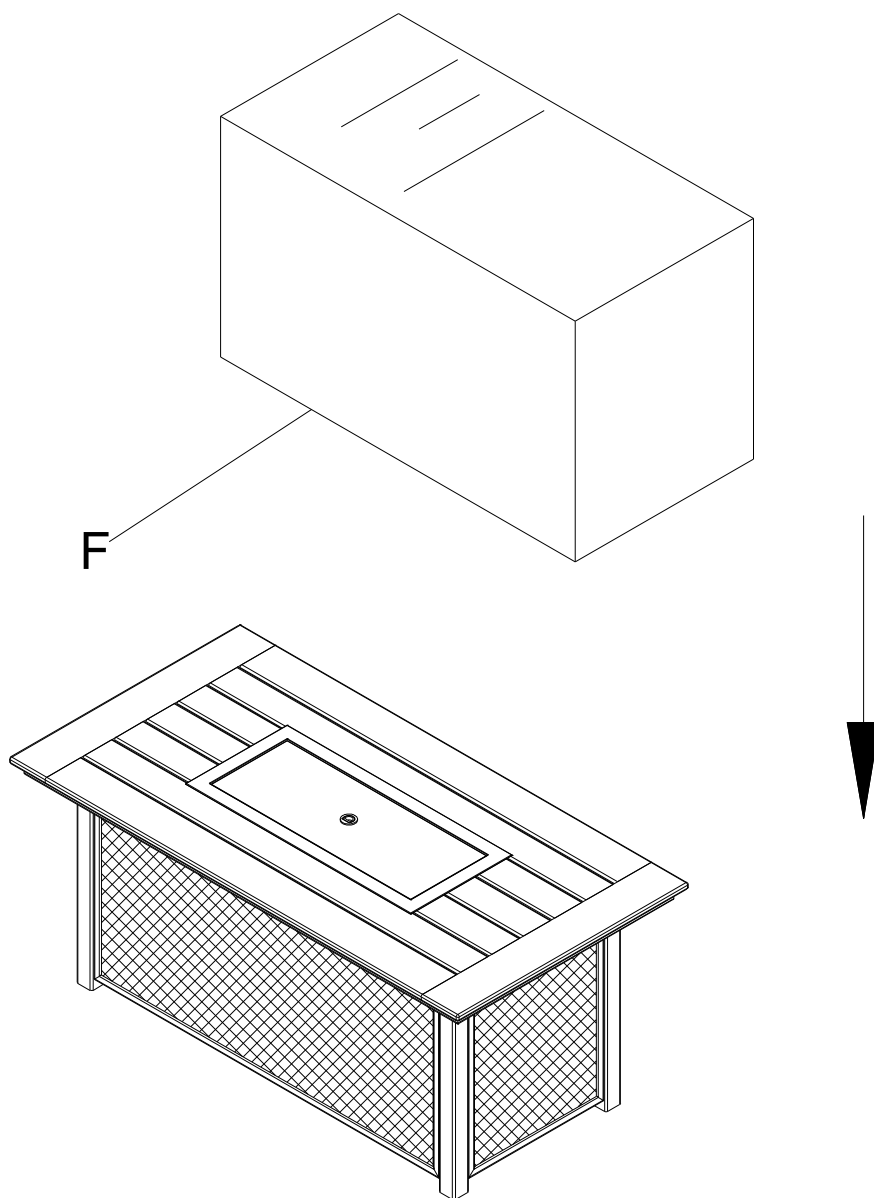

Step 7: Place the Weather Cover (F) over the fire pit when not in use.

OPERATING THE UNIT - LIGHTING AND EXTINGUISHING

FOR YOUR SAFETY, READ BEFORE LIGHTING

WARNING: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT, CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR LOSS OF LIFE.

A. BEFORE LIGHTING, smell all around the unit area for gas. Be sure to smell next to the floor, because some gas is heavier than air and will settle on the floor.

B. WHAT TO DO IF YOU SMELL GAS

1. **Shut off the gas to the appliance.**
2. **Extinguish any open flame.**
3. **If odor continues, immediately call** your gas supplier or the fire department.

C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, **DO NOT** try to repair it. Call a qualified professional service technician. Force or attempted repair may result in fire or explosion.


MANUAL (MATCH) LIGHTING INSTRUCTIONS

1. **STOP!** Read the safety information above.
2. Lay a lighted long-stem match on the surface of the decorative media near the burner ring (do not hold the match in your hand) or use a lighted long-necked butane lighter.
3. Push and slowly turn the control knob to the **ON** position. Your burner should light.
4. Observe the flame height when lit. Flame should be 3 to 13 inches high.
5. If the burner does not light before the match goes out, immediately turn the control knob to the **OFF** position.
6. Wait approximately five (5) minutes to clear out any gas, and repeat steps 1-4 above.
7. If your burner fails to light again, turn the control knob to the **OFF** position and contact your dealer or gas supplier.
8. To extinguish your gas burner, turn the control knob to the **OFF** position. Be sure the control knob is turned fully off to avoid any gas leakage.


Operating Instructions

CAUTION: Make sure the control knob is in the OFF position before performing these steps.


Step 1: Insert the battery into the igniter compartment with correct polarity.

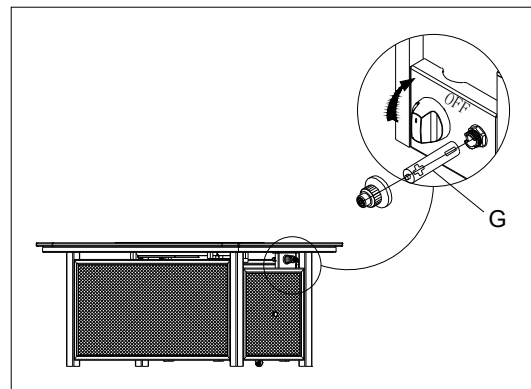

Step 2: Place a gas tank (not included) onto the Gas Tank Tray. Tighten the pre-assembled wing screw to secure the tank in place.
CAUTION: Ensure the gas tank is properly secured before use.

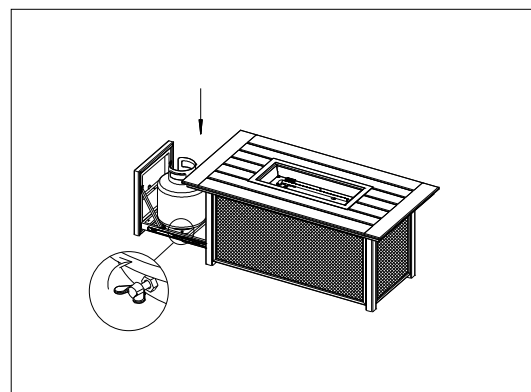


Step 3: Attach the pre-assembled gas regulator to the gas tank valve. Turn clockwise by hand to secure the connection.
Then carefully slide the Gas Tank Tray back into the unit until fully closed.

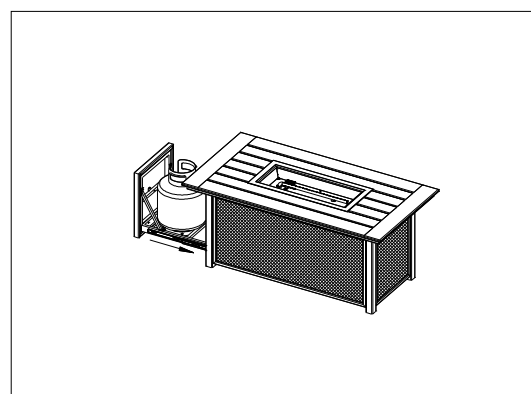

Step 4: Evenly distribute the Glass Beads around the burner area.

WARNING:

To ensure proper function, the guard on the burner should be free of glass bead at all times.

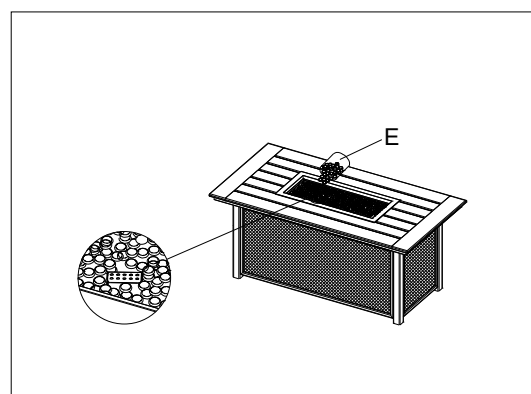

MAINTENANCE

- Before performing any maintenance always disconnect propane gas tank.
- **Store your product indoors during winter months. Avoiding extreme cold temperatures will prevent from exposure damage.**
- Keep the heating item free and clear from combustible materials.
- Visually inspect burner for obstructions and keep tank enclosure free and clear from debris.
- Use a soft brush to get rid of the mild stains, loose dirt and soil after the burner and pumice stones/lava rocks/LavaGlass® are completely cooled down. Wipe down with a soft cloth.
- Harsh weather conditions may cause stubborn stains, discoloration and possibly rust pitting.
- Permanent damage may occur if powder or solvent comes in contact with painted or plastic components on this heating unit.
- Keep the heating unit stored away from direct sunlight.
- If storing this unit inside, disconnect the propane gas tank from the gas valve.
- Not using manufacturer approved or supplied parts/accessories may result in a defective condition and void the warranty of this heating unit.
- Always place lid (if applicable) or protective cover on heating item when not in use.

WARRANTY

This product has a one-year warranty against manufacturing defects in workmanship, or materials.

The manufacturer warranty will be voided by, and manufacturer disclaims any responsibility for, the following actions:

- Modification of the unit and/or components including the gas valve assembly.
- Use of any component part not manufactured or approved by Manufacturer.
- Use and installation other than what is listed in this manual.

Please contact the manufacturer for replacement parts.

CONTACT

If you have any questions or concerns, please contact manufacturer at the below resources:



Questions, problems, missing parts?
Before returning to your retailer,
Email us at monica@everyoungoutdoor.com